

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## PEUGEOT VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>107</b>	4 seats / 3-5 door hatchback
4	<b>308</b>	5 seats / 5 door hatchback / 5 door estate
5	<b>508</b>	5 seats / 4 door saloon / 5 door estate
6	<b>3008</b>	5 seats / 5 door MPV
7	<b>5008</b>	7 seats / 5 door MPV
8	<b>208</b>	5 seats / 3-5 door hatchback
9	<b>Partner van 1.6 L1 HDI 92 PRO 850kg</b>	3 seats / small panel van
10	<b>Partner van 1.6 L2 HDI crew van</b>	3 seats / small panel van
11	<b>2008 Crossover</b>	5 seats / 5 crossover SUV
12	<b>Boxer van 2.2 335 L3 H2</b>	3 seats / Panel van
13	<b>Partner van 1.6 L1 Blue HDI 100 Pro</b>	3 seats / small panel van
14	<b>Expert van L1 H1 HDI 90 1000kg Pro</b>	3 seats / Panel van
15		
16		
17		
18		
19		
20		

 
 
# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

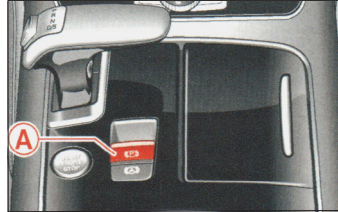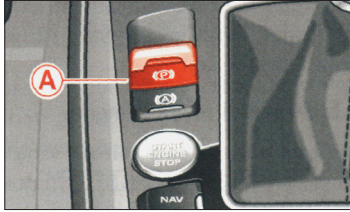

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

### RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

### YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

### GREEN

Green or blue is only telling you that a system is on or operating normally.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**


For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



**IMPORTANT:** the oil level must be checked every 1000 miles.

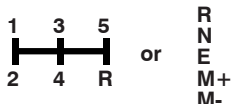

## CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

**NOTE:** SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
45.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Most models are fitted with key / remote control operated central locking. Otherwise use key to lock/unlock. Depress the door locking knobs to lock the doors from the inside.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the boot?</b>	Most models are centrally locked. Use the key or remote control to unlock / open.
<b>Adjusting door mirrors?</b>	Internal manual adjustment via levers on the front doors.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door (or manually operated). Fixed rear.
<b>Operating the sunroof?</b>	Not applicable.
<b>Using child door locks?</b>	Located on the edge of the rear doors, twist the button to activate it. Check from inside that the doors are securely locked.
<b>Starting the engine?</b>	Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Located on rear nearside. Use the key to unlock the cap. Twist off the cap anticlockwise.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
<b>How to change a tyre?</b>	Lift the recess cover inside the boot to access the spare tyre (temporary spare). The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
<b>How to drive an automatic?</b>	To change gears press the foot operated brake pedal and move the lever forwards or backwards through the gate. Select <b>N</b> for neutral, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>E</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use <b>M+</b> or <b>M-</b> to manually select gears only. Whenever the vehicle is at a standstill fully apply the handbrake.

# VEHICLE INSTRUCTION CARD


**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



**Important:** the oil level must be checked every 1000 miles.

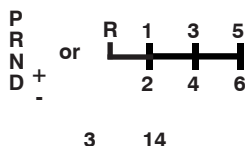

### CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/65 R15  
205/55 R16  
225/45 R17  
225/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Driving speeds and travel distance are restricted when using a spacesaver spare wheel.

**NOTE:** SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
53.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

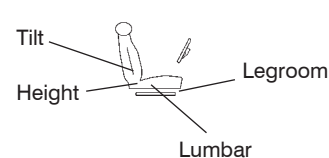

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Press the central locking button on the centre console to lock them from the inside. Doors will auto lock after 30 seconds if not opened.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release (hatchback only).
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door. Or manually operated rear.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted control interface.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it. Or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Press the engine start/stop button adjacent to the electronic parking brake to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Most models have a centrally locked fuel cap located under a flap on rear offside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately (flat folding in the estate). To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the spacesaver spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the electronic parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spacesaver spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Move the lever to lower left to use the manual + and - settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-03 / 05-11-2014

# PEUGEOT 308

 
**5 SEATS**  
**5 DOOR HATCH / 5 DOOR ESTATE**

# VEHICLE INSTRUCTION CARD


**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch (start/stop)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

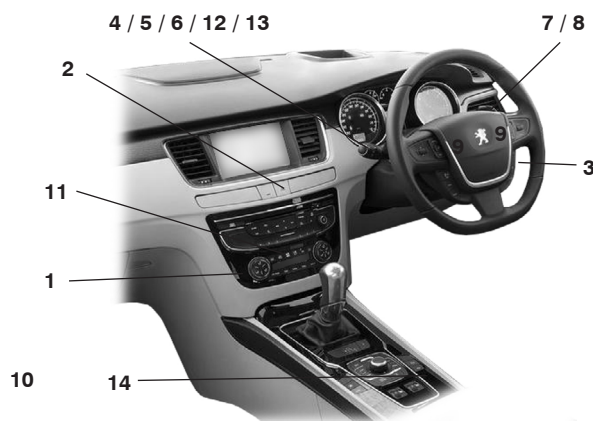

 **Important:** the oil level must be checked every 1000 miles.



### CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

215/60 R16  
215/55 R17  
235/45 R18  
235/40 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

**NOTE:** SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
72.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

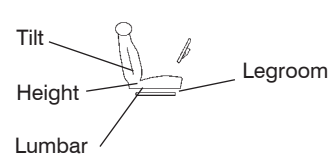

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Press the central locking button on the centre console to lock them from the inside. Doors will auto lock after 30 seconds if not opened.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release (except estate).
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it. Or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and electronic parking brake is on. Place ignition key in key slot. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Most models have a centrally locked fuel cap located under a flap on rear offside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the temporary spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the electronic parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Move the lever to lower left to use the tiptronic + and - settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-04 / 30-03-2011

# PEUGEOT 508

**5 SEATS**  
**4 DOOR SALOON / 5 DOOR ESTATE**



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## IMPORTANT

You must check the oil with the dipstick every 1000 miles ! When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

## maximum oil level

□ □ □ □ □

□ - - - - -

NO oil !

- - - - -

## CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

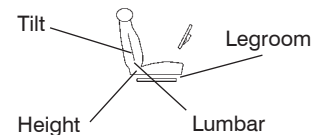

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central high security deadlocking. Depress the centre console switch to centrally lock the doors from the inside. Auto door re-locking.

### Anti-theft system?

Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open. Features a split tailgate.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear, operated via control buttons on the driver's door.

### Operating the sunroof?

If fitted: Electric tilt / slide operated by roof mounted switchgear.

### Using child door locks?

Use the roof mounted central locking switch / electric child lock to activate it - a warning LED will briefly light up on the dashboard confirming activation. Check from inside that the doors are securely locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.

### Opening fuel filler cap?

Located under flap on rear offside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

Lift the boot carpet cover. The tools and jack are inside the spare wheel recess. Move the vehicle to firm / level ground. Select P if automatic and turn the engine off (or first gear if manual). Apply handbrake. Loosen the wheel nuts by turning anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on underside of vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

### How to drive an automatic?

The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## IMPORTANT

You must check the oil with the dipstick every 1000 miles ! When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

## maximum oil level

□ □ □ □ □

□ - - - - -

NO oil !

- - - - -



## CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

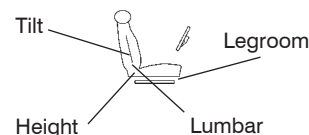

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central high security deadlocking. Depress the centre console switch to centrally lock the doors from the inside. Auto door re-locking.

### Anti-theft system?

Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open. Features a split tailgate.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear, operated via control buttons on the driver's door.

### Operating the sunroof?

If fitted: Electric tilt / slide operated by roof mounted switchgear.

### Using child door locks?

Use the centre console central locking switch / electric child lock to activate it - a warning LED will briefly light up on the dashboard confirming activation. Check from inside that the doors are securely locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.

### Opening fuel filler cap?

Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

Lift the boot carpet cover. The tools and jack are inside a compartment in the side of the boot. Move the vehicle to firm / level ground. Select P if automatic and turn the engine off (or first gear if manual). Apply handbrake. Loosen the wheel nuts by turning anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on underside of vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

### How to drive an automatic?

The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD


**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



**Important:** the oil level must be checked every 1000 miles.

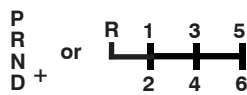

## CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

185/65 R15  
195/55 R16  
205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

**NOTE:** SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the lower centre console to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release (except estate).
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric controlled via switches on driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it, or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard or temporary spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Move the lever to lower left to use the tiptronic + and - settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-09 / 23-06-2012

# PEUGEOT 208

**5 SEATS**  
**3-5 DOOR HATCH**



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

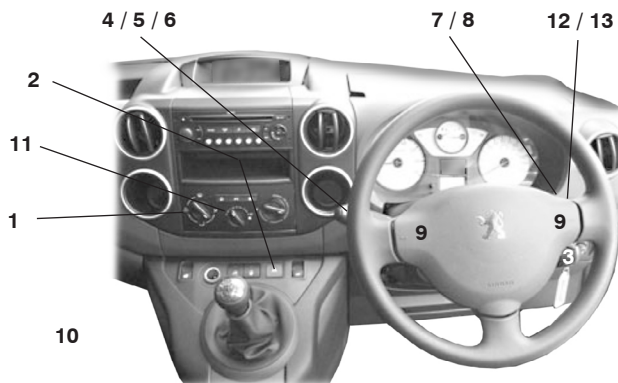

## DIMENSIONS

 Fuel Tank Capacity litres	60
Vehicle Length m	4.38
Vehicle Width m	2.11
Vehicle Height m	1.82
Cargo volume cu.m	3.3
Cargo Length m	1.8
Cargo Width m	1.62
Cargo Height m	1.25
Vehicle Weight (unladen) kg	1305
Payload Weight kg	865
Maximum Weight kg	2170



### CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### DRIVER'S SEAT



### FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the load doors?</b>	Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and a one or two panel sliding doors. The loading bay is fitted with cargo retaining rings. The passenger seat also flat-folds to aid loading.
<b>Adjusting door mirrors?</b>	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual)).
<b>Opening fuel filler cap?</b>	Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
<b>How to change a tyre?</b>	Lift the recess cover inside the boot to access the tools and jack. The wheel is stored under the load bay floor, use the tools to release the retaining bolt on the floor of the cargo bay to lower the spare wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
<b>How to drive an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

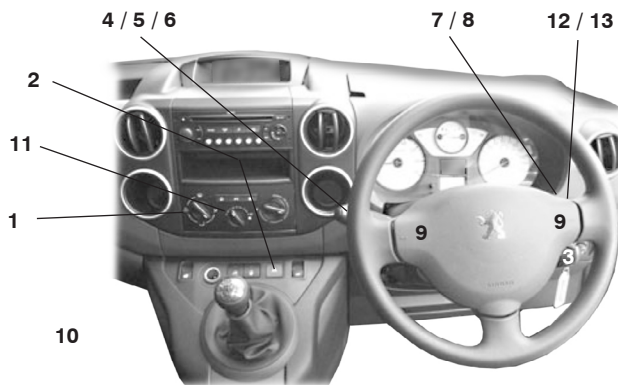

## DIMENSIONS

Fuel Tank Capacity litres	60
Vehicle Length m	4.63
Vehicle Width m	2.11
Vehicle Height m	1.83
Cargo volume cu.m	2.4
Cargo Length m	1.32
Cargo Width m	1.38
Cargo Height m	1.1
Vehicle Weight (unladen) kg	1432
Payload Weight kg	738
Maximum Weight kg	2170

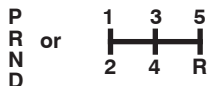

## CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type.  
Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the load doors?** Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and a one or two panel sliding doors. The loading bay is fitted with cargo retaining rings. The passenger seat also flat-folds to aid loading.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual)).
- Opening fuel filler cap?** Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Lift the recess cover inside the boot to access the tools and jack. The wheel is stored under the load bay floor, use the tools to release the retaining bolt on the floor of the cargo bay to lower the spare wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

 
**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



**Important:** the oil level must be checked every 1000 miles.



## CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/65 R15  
195/60 R16  
205/50 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

When using the spacesaver spare wheel driving speed and travel distance are restricted.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the central locking button on the lower centre console to lock the doors from the inside.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the boot?</b>	Centrally locked. Use the remote control to unlock or open.
<b>Adjusting door mirrors?</b>	Electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front and rear operated via switches on the driver's door.
<b>Operating the sunroof?</b>	Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted switchgear.
<b>Using child door locks?</b>	Located on the edge of the rear doors, turn the key slot to activate it, or press the central locking button on the centre console. Check from inside that the doors are securely locked.
<b>Starting the engine?</b>	Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto start/stop technology whereby the engine turns off when stationary, gears in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
<b>Opening fuel filler cap?</b>	Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seat is divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
<b>How to change a tyre?</b>	Lift the recess cover inside the boot to access the spacesaver spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
<b>How to drive an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D (M)</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Move the lever to lower left to use the tiptronic M+ and M- settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-11 / 05-11-2014

# PEUGEOT 2008 CROSSOVER

**5 SEATS**  
**5 CROSSOVER SUV**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

 
## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



## DIMENSIONS

Fuel Tank Capacity litres	90
Vehicle Length m	5.99
Vehicle Width m	2.05
Vehicle Height m	2.52
Cargo volume cu.m	13
Cargo Length m	3.7
Cargo Width m	1.87
Cargo Height m	1.93
Vehicle Weight (unladen) kg	1975
Payload Weight kg	1525
Maximum Weight kg	3500



### CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

215/70 R15  
225/70 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### DRIVER'S SEAT



### FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the load doors?</b>	Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and a one or two panel sliding doors. The loading bay is fitted with cargo retaining rings.
<b>Adjusting door mirrors?</b>	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral and parking brake is on. (The parking brake is sited on the floor between the driver's seat and the door). Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral, and no foot pedals are depressed - to restart depress the clutch (manual)).
<b>Opening fuel filler cap?</b>	Models have a centrally locked fuel cap located under a flap on mid nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
<b>How to change a tyre?</b>	Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the handbrake. The tools are located under the passenger front seat. The wheel is stored under the load bay floor, under the rear of the vehicle. Use the tools to lower the wheel cage to the ground, then release the retaining bolt to release the wheel. Loosen the wheel nuts on the damaged wheel by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

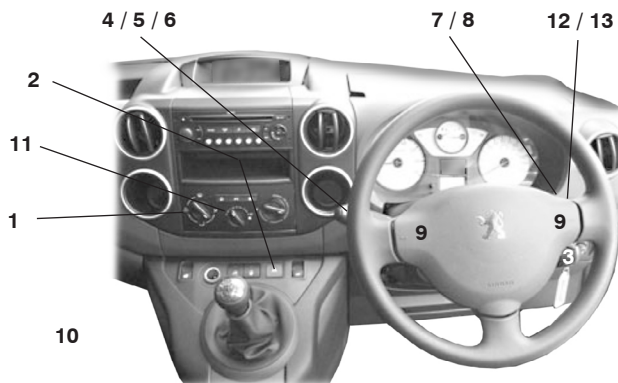

## DIMENSIONS

 Fuel Tank Capacity litres	60
Vehicle Length m	4.38
Vehicle Width m	2.11
Vehicle Height m	1.82
Cargo volume cu.m	3.3
Cargo Length m	1.8
Cargo Width m	1.62
Cargo Height m	1.25
Vehicle Weight (unladen) kg	1305
Payload Weight kg	865
Maximum Weight kg	2170



### CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### DRIVER'S SEAT



### FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the load doors?</b>	Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and a one or two panel sliding doors. The loading bay is fitted with cargo retaining rings. The passenger seat also flat-folds to aid loading.
<b>Adjusting door mirrors?</b>	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual)).
<b>Opening fuel filler cap?</b>	Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
<b>How to change a tyre?</b>	Lift the recess cover inside the boot to access the tools and jack. The wheel is stored under the load bay floor, use the tools to release the retaining bolt on the floor of the cargo bay to lower the spare wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
<b>How to drive an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp



## DIMENSIONS

Fuel Tank Capacity litres	80
Vehicle Length m	4.81
Vehicle Width m	2.19
Vehicle Height m	1.77
Cargo volume cu.m	6.0
Cargo Length m	2.5
Cargo Width m	1.60
Cargo Height m	1.44
Vehicle Weight (unladen) kg	1673
Payload Weight kg	988
Maximum Weight kg	2661

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### DRIVER'S SEAT



### FUEL

Only use the correct fuel type. 80L. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the load doors?</b>	Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and two panel sliding doors. The loading bay is fitted with cargo retaining rings.
<b>Adjusting door mirrors?</b>	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual)).
<b>Opening fuel filler cap?</b>	Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
<b>How to change a tyre?</b>	Lift the recess cover inside under seat to access the tools and jack. The wheel is stored under the load bay floor, use the tools to release the retaining bolt on the floor of the cargo bay to lower the spare wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
<b>How to drive an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.