

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## ALFA ROMEO VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>4C Spider</b>	2 seats / 2 door convertible
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

### **RED**

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

### **YELLOW**

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

### **GREEN**


Green or blue is only telling you that a system is on or operating normally.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Paddle shift levers

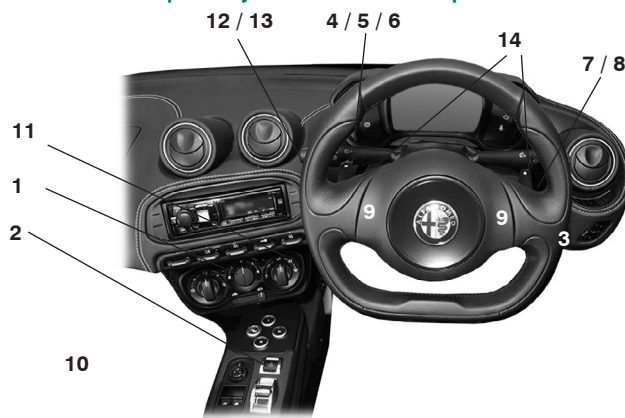

1  
A / M  
N  
R

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

R17  
 R18  
 R19

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel but is supplied with a tyre repair kit. For assistance, please refer to the phone numbers shown on the tax disc holder.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 40 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

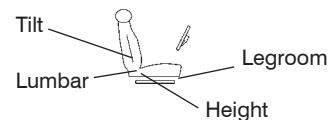

Fold front seats to access rear.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the door central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion.
- Anti-theft system?** Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
- Opening the boot?** Centrally locked. Use the remote key or internal boot release switch to unlock / open.
- Adjusting door mirrors?** Internal electric adjustment via a control pad on the centre console.
- Opening the windows?** Electric front operated via control buttons on centre console.
- Removing the soft top?** Easy to remove light soft top panels. Release / unlock retaining catches to remove roof. Store roof panel inside boot.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. ensure remote key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features automatic engine start/stop technology - where the engine shuts off when stationary, gears are in neutral and foot pedals are not depressed - engine instantly restarts when foot pedals are depressed. Note: engine auto shut off may not operate when using some driving modes.
- Opening fuel filler cap?** Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Lift the carpet cover over the recess inside the boot to access the tyre repair kit, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (1). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Note: this vehicle does not carry a spare wheel - follow directions on tyre repair kit or for assistance please refer to the phone numbers shown on the tax disc holder.
- How to drive an automatic?** To change gears use the paddle shift levers to change up and down gears. Use the centre console switches to select the gear mode: Select **N** for neutral, **1** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **A** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears with the paddle shift levers use the **M** mode. Whenever the vehicle is at a standstill apply the handbrake.
- How to select driving modes?** Use the DNA selector switch adjacent to the hazard warning switch on the centre console to select dynamic - D (for performance and response), natural - N (for everyday driving), all-weather - A (for safety in adverse weather) or race modes (for track use only).