

INDEX - VICs (VEHICLE INSTRUCTION CARD)

CITROEN VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Berlingo van HDI 90 L1 850 LX	2 seats / small van
4	C4 Picasso	5 seats / 5 door MPV
5	DS3	5 seats / 3 door hatchback
6	Grand C4 Picasso	7 seats / 5 door MPV
7	C4 Cactus	5 seats / 5 door SUV
8	C3	5 seats / 5 door hatchback
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

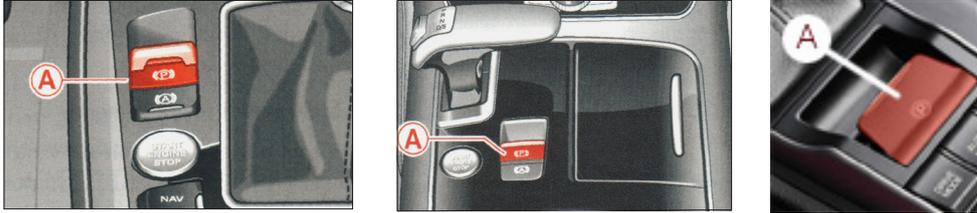

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



DIMENSIONS

Fuel Tank Capacity litres	60
Vehicle Length m	4.38
Vehicle Width m	2.12
Vehicle Height m	1.84
Cargo volume cu.m	3.3
Cargo Length m	1.8
Cargo Width m	1.23
Cargo Height m	1.25
Vehicle Weight (unladen) kg	1299
Payload Weight kg	896
Maximum Weight kg	2195

 

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

	psi (bar)
175/65 R14 Front	37 (2.5)
175/65 R14 Rear	37 (2.5)
175/65 R14 Front (full load)	42 (2.9)
175/65 R14 Rear (full load)	42 (2.9)

Check the tyre pressure table found on the driver's door B-pillar.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central deadlocking. Depress the door locking knobs to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Loading cargo?** Centrally locked. Use the handle to open. Vehicle has a nearside sliding door and two rear wing doors. Floor has load lashing rings to help secure loads. Front passenger seat can be folded forward to accommodate long loads. (To fold the seats, unlock the seat catches and fold seat flat. To return seats to normal use, fold them upright, check that they are secured in position before sitting on them).
- Adjusting door mirrors?** Extended width door mirrors. Electric internal adjustment operated via a control knob on the dashboard. Or manual adjustment for each door.
- Opening the windows?** Electric front operated via control buttons on the dashboard.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located on the offside rear. Unlock the cap using the ignition key. Twist the fuel-cap off anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right side of the driver's footwell. Unhook catch under bonnet.
- How to change a tyre?** The tools and jack are stored behind the driver's seat inside the vehicle. The standard spare tyre is stored under the rear of the vehicle, it is secured by a brace which requires the loosening of retaining bolts to release the spare wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

205/60 R16
 205/55 R17
 225/45 R18

Vehicles are supplied with a tyre repair kit in lieu of a spare. Note that driving speed and travel distance are limited when using this.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 57 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

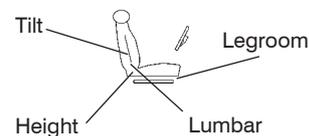

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system activated by the remote.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Place ignition key in starter switch. Press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop - when the engine automatically turns off when stationary and gear is in neutral and pedals are not depressed - simply depress the clutch (auto: press brake) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Use the remote release on the lower left-hand side of the dashboard. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** **Note:** This vehicle is not supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 1695875 for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D (A)** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-02 / 26-01-2014

CITROËN C4 PICASSO

 
5 SEATS
5 DOOR MPV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

maximum oil level

□ □ □ □ □

□ - - - - -

NO oil!

- - - - -

TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

195/55 R16

195/55 R16

205/45 R17

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap. Vehicles may be supplied with a tyre mobility pack or a spacesaver spare - in all cases these should only be used for limited distances and at a reduced speed.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

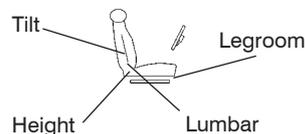

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric operated by roof mounted switchgear.
- Using child door locks?** Not applicable.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** **Note:** This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 1695875 for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M** + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

205/60 R16
205/55 R17
225/45 R18

Vehicles are supplied with a tyre repair kit in lieu of a spare. Note that driving speed and travel distance are limited when using this.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
57 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

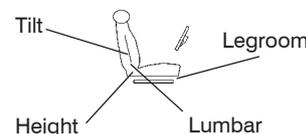

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system activated by the remote.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Place ignition key in starter switch. Press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop - when the engine automatically turns off when stationary and gear is in neutral and pedals are not depressed - simply depress the clutch (auto: press brake) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Use the remote release on the lower left-hand side of the dashboard. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** **Note:** This vehicle is not supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 1695875 for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D (A)** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-04 / 26-01-2014

CITROËN GRAND C4 PICASSO

 

7 SEATS
5 DOOR MPV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

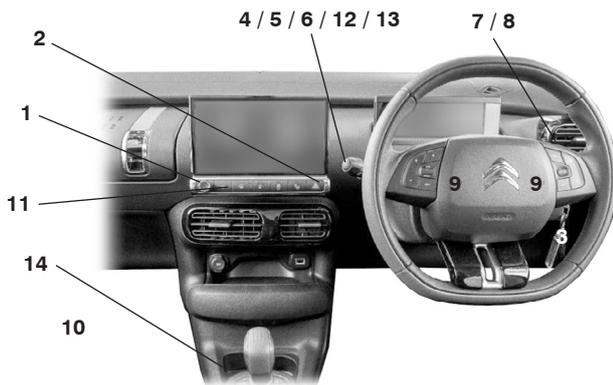

IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

195/65 R15
 205/55 R16
 295/50 R17

Vehicles are supplied with a tyre repair kit in lieu of a spare. Note that driving speed and travel distance are limited when using this.

Vehicles are also fitted with a tyre pressure monitor.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

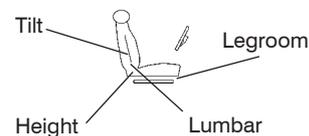

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system activated by the remote.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N if automatic) and electronic parking brake is on. Place ignition key in starter switch. Turn key to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop - when the engine automatically turns off when stationary and gear is in neutral and pedals are not depressed - simply depress the clutch (auto: press brake) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Remote release may be fitted to some models. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** **Note:** This vehicle is not supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 1695875 for assistance.
- How to drive an automatic?** Press the brake before changing gear. Select **N** for neutral, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-05 / 28-01-2015

CITROËN C4 CACTUS

 
5 SEATS
5 DOOR SUV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

R15
 R16
 R17

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap. Vehicles may be supplied with a tyre mobility pack or a spacesaver spare - in all cases these should only be used for limited distances and at a reduced speed.

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

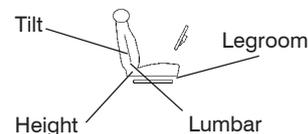

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion. Press the central locking button to lock all doors from inside.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt/slide operated by roof mounted switchgear.
- Using child door locks?** Press the central locking button to lock all doors from inside.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats can be folded separately via a 60:40 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** **Note:** This vehicle is usually supplied with a spacesaver spare wheel and tyre, in the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 1695875 for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.