

INDEX - VICs (VEHICLE INSTRUCTION CARD)

JAGUAR VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	F-Pace	5 seats / 5 door 4x4
4	F-Type	2 seats / 2 door coupe or convertible
5	XJ	5 seats / 4 door saloon
6	XE	5 seats / 4 door saloon
7	XF	5 seats / 4 door saloon
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE

INFORMATION

Where fitted, the electronic parking brake (EPB) replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

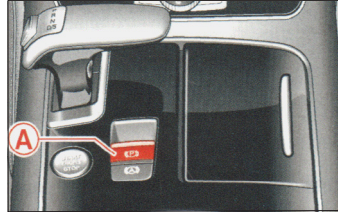

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

 
Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

255/60 R18
235/65 R18
255/55 R19
255/50 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Some vehicles are fitted with an electronic tyre pressure monitoring system.

Most vehicles use carry a tyre repair kit, some models may carry a spacesaver spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60 or 66 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

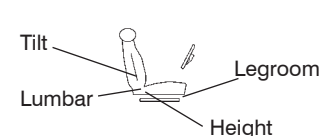

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Models feature power operation via the remote fob or dashboard switch. The boot floor is reversible (rubber or carpet).
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lift the flap and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are supplied with a tyre repair kit (some models may have a spacesaver spare tyre supplied) with tools and jack located under the floor panel in the boot. Move the vehicle to firm / level ground. Turn the engine off, select P (automatic). Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle.
- How to drive an automatic?** To change gears use the pop-up rotary selector, and turn to select a gear option or driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the S option for more responsive gear changes. Whenever the vehicle is at a standstill apply the parking brake. This vehicle is fitted with four wheel drive (4WD). The vehicle features a pop-up rotating selector (adjacent to gear selector lever) for selecting optimum engine, transmission, suspension and traction settings for a variety of driving conditions (including off-road). The vehicle has electronic Hill Descent Control (HDC) for use when descending hilly off-road terrain.
- Using other driving options?**

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-01 / 25-05-2016

JAGUAR F-PACE

 
**5 SEATS
5 DOOR 4X4**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake
- 15 Gear paddle shifter

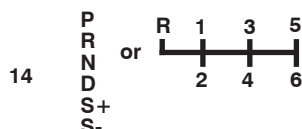

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

275/45 R18
245/40 R19
255/35 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Vehicles are fitted with an electronic tyre pressure monitoring system.

Vehicles carry a tyre repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

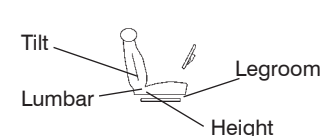

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models feature power operation via the remote fob or dashboard switch (only on coupe models).
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: panoramic glass sunroof with manual electric blind, operated by roof mounted switchgear.
- Operating fabric roof?** If fitted: press the centre console switch to either raise or lower the convertible roof. Operate only when stationary or at low speed.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote smart key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lift the flap and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- How to change a tyre?** Vehicles are supplied with a tyre repair kit with tools and jack located under the floor panel in the boot. Move the vehicle to firm / level ground. Turn the engine off, select P (automatic). Apply the parking brake. Follow the instructions on the tyre repair kit, or phone the helpline for assistance.. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle.
- How to drive an automatic?** To change gears: Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the S option for more responsive gear changes. Use the paddle shift levers to change up or down gears. Whenever the vehicle is at a standstill apply the parking brake.
- Using other driving options?** Some models may be fitted with selectable all-wheel drive (AWD) available on automatic transmissions. Normal rear-wheel drive or AWD mode is selected by a switch to the left of the gear selector.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-02 / 25-05-2016

JAGUAR F-TYPE

 
2 SEATS
2 DOOR COUPE OR CONVERTIBLE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

245/45 R19
275/40 R19
245/40 R20
275/35 R20
265/35 R20
295/30 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Vehicles are fitted with an electronic tyre pressure monitoring system.

Vehicles carry a tyre repair kit or spacesaver spare wheel

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
75 or 80 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

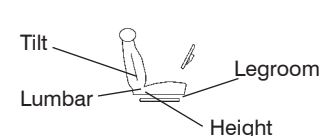

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Models feature power operation via the remote fob or dashboard switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lift the flap and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are supplied with a tyre repair kit (or some models may have a spacesaver spare tyre supplied) with tools and jack located under the floor panel in the boot. Move the vehicle to firm / level ground. Turn the engine off, select P (automatic). Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle.
- How to drive an automatic?** To change gears use the pop-up rotary selector, and turn to select a gear option or driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the S option for more responsive gear changes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-03 / 25-05-2016

JAGUAR XJ

 
**5 SEATS
4 DOOR SALOON**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

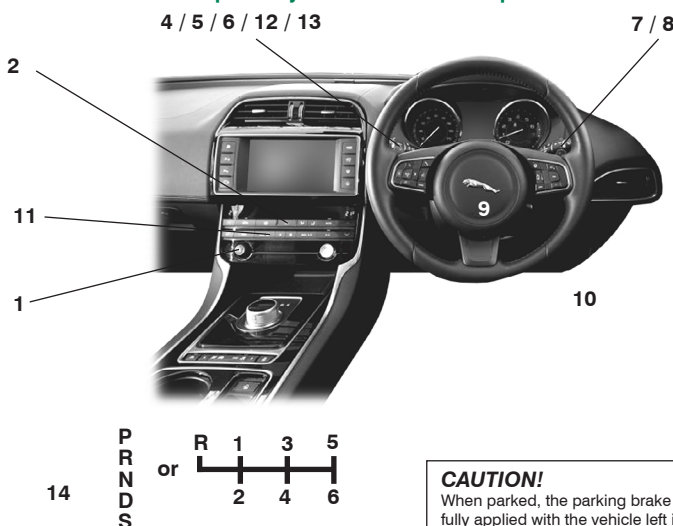

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R17
225/50 R17
225/45 R18
225/40 R19
255/35 R19
235/35 R20
265/30 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Vehicles are fitted with an electronic tyre pressure monitoring system. Vehicles carry a tyre repair kit or spacesaver spare wheel

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
47 or 56 or 63 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

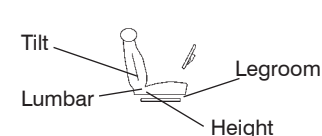

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Models feature power operation via the remote fob or dashboard switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lift the flap and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are supplied with a tyre repair kit (or some models may have a spacesaver spare tyre supplied) with tools and jack located under the floor panel in the boot. Move the vehicle to firm / level ground. Turn the engine off, select P (automatic). Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle.
- How to drive an automatic?** To change gears use the pop-up rotary selector, and turn to select a gear option or driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the S option for more responsive gear changes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-04 / 25-05-2016

JAGUAR XE

 
**5 SEATS
4 DOOR SALOON**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

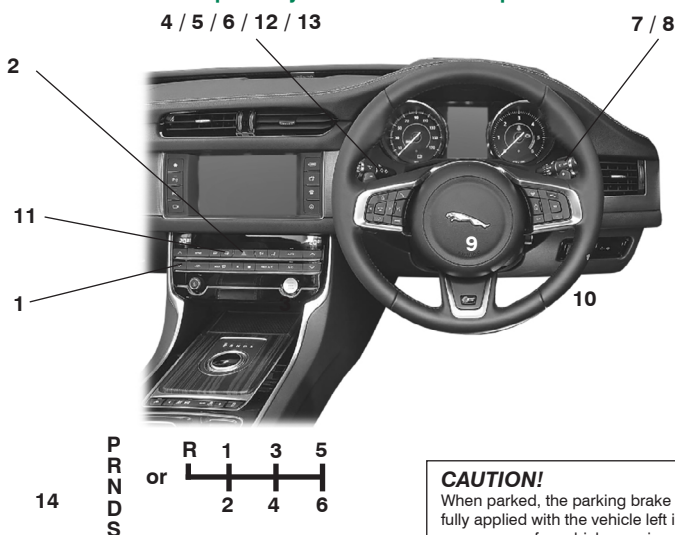

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/55 R17
245/45 R18
245/40 R19
255/35 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Vehicles are fitted with an electronic tyre pressure monitoring system.

Vehicles carry a tyre repair kit or spacesaver spare wheel

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55 or 66 or 74 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

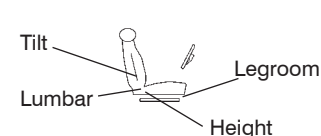

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models feature power operation via the remote fob or dashboard switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric tilt and slide panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lift the flap and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are supplied with a tyre repair kit (or some models may have a spacesaver spare tyre supplied) with tools and jack located under the floor panel in the boot. Move the vehicle to firm / level ground. Turn the engine off, select P (automatic). Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle.
- How to drive an automatic?** To change gears use the pop-up rotary selector, and turn to select a gear option or driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the S option for more responsive gear changes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-05 / 25-05-2016

JAGUAR XF

**5 SEATS
4 DOOR SALOON**