

INDEX - VICs (VEHICLE INSTRUCTION CARD)

JEEP VEHICLES

| Page | Vehicle | Details |
|------|---|----------------------|
| 1 | Index | n/a |
| 2 | Supplement (Electronic Parking Brake, etc) | n/a |
| 3 | Grand Cherokee | 5 seats / 5 door 4x4 |
| 4 | Cherokee | 5 seats / 5 door 4x4 |
| 5 | Renegade | 5 Seats / 5 door 4x4 |
| 6 | | |
| 7 | | |
| 8 | | |
| 9 | | |
| 10 | | |
| 11 | | |
| 12 | | |
| 13 | | |
| 14 | | |
| 15 | | |
| 16 | | |
| 17 | | |
| 18 | | |
| 19 | | |
| 20 | | |

 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

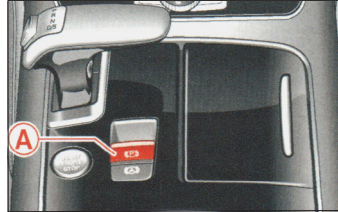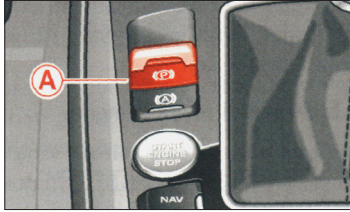

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



P
R
N
D

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

265/50 R20

265/60 R18

295/45 R20

Full size spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
93.5 litre

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

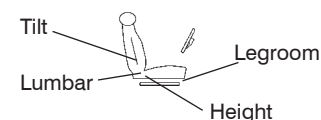

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking with high security double locking. Depress the central door locking button integrated into centre console to lock/unlock the doors from the inside.
- Anti-theft system?** Most models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models have a power operated tailgate (the switch is located on the driver's door and on the remote).
- Adjusting door mirrors?** Internal electric adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric panoramic sunroof. Operated via roof mounted controls.
- Using child door locks?** Depress the central locking button integrated into the centre console to lock/unlock. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Some models feature a start/stop button, press it to start/stop the engine (and just keep the key in your pocket or bag). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move. Some models may also feature engine start/stop technology whereby the engine auto shuts off when stationary, gear in neutral and pedals are not depressed - it auto restarts when the brake is released.
- Opening fuel filler cap?** Located on rear nearside. Centrally locked. Open flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal remote release on the underside of the dashboard to release the bonnet.
- How to fold the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the spare wheel. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards (some vehicles feature manual shifting options via steering wheel paddle controls). Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake. The vehicle features automatic 4x4, with various manual features.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JEE-01 / 27-07-2014

JEEP GRAND CHEROKEE

**5 SEATS
5 DOOR 4X4**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

225/60 R17

225/55 R18

Vehicles are supplied with a tyre repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60 litre

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

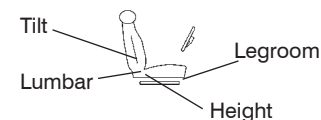

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking with high security double locking. Depress the central door locking button integrated into centre console to lock/unlock the doors from the inside.
- Anti-theft system?** Most models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Internal electric adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric panoramic sunroof. Operated via roof mounted controls.
- Using child door locks?** Depress the central locking button integrated into the centre console to lock/unlock. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in N or P and electronic parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Some models feature a start/stop button, press it to start/stop the engine (and just keep the key in your pocket or bag). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move. Some models may also feature engine start/stop technology whereby the engine auto shuts off when stationary, gear in neutral and pedals are not depressed - it auto restarts when the brake is released.
- Opening fuel filler cap?** Located on rear offside. Centrally locked. Open flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal remote release on the underside of the dashboard to release the bonnet.
- How to fold the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are supplied with a tyre repair kit, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit. Call us for assistance if necessary.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards (some vehicles feature manual shifting options via steering wheel paddle controls). Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake. The vehicle features automatic 4x4, with various manual features.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

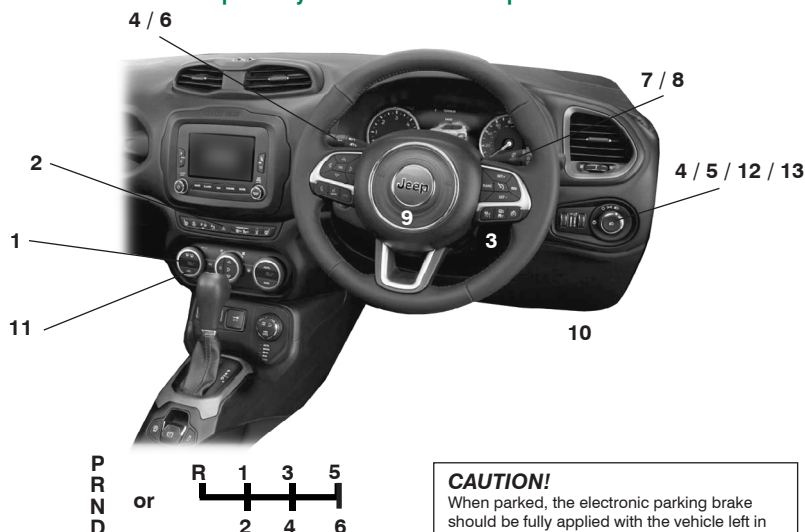

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

215/65 R16
215/60 R17
225/55 R18

Vehicles are supplied with a tyre repair kit.

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
48 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

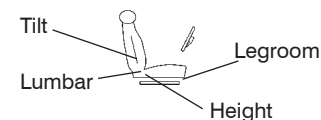

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking with high security double locking. Depress the central door locking button integrated into centre console to lock/unlock the doors from the inside.

Anti-theft system?

Most models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening the boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open.

Adjusting door mirrors?

Internal electric adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric operated via control buttons on the driver's door.

Operating the sunroof?

If fitted. Electric panoramic sunroof. Operated via roof mounted controls.

Using child door locks?

Depress the central locking button integrated into the centre console to lock/unlock. Check from inside that the doors are securely locked.

Starting the engine?

Ensure gear selector is in N or P and electronic parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Some models feature a start/stop button, press it to start/stop the engine (and just keep the key in your pocket or bag). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move. Some models may also feature engine start/stop technology whereby the engine auto shuts off when stationary, gear in neutral and pedals are not depressed - it auto restarts when the brake is released.

Opening fuel filler cap?

Located on rear offside. Centrally locked. Open flap and twist off the cap anticlockwise.

Releasing the bonnet?

Pull the internal remote release on the underside of the dashboard to release the bonnet.

How to fold the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are supplied with a tyre repair kit, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit. Call us for assistance if necessary.

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards (some vehicles feature manual shifting options via steering wheel paddle controls). Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.

How to select 4x4 mode?

The vehicle features automatic 4x4, with various manual features. Use the drive mode selector dial located in front of the gear selector lever to easily select various driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JEE-03 / 24-10-2015

JEEP RENEGADE

**5 SEATS
5 DOOR 4X4**