

INDEX - VICs (VEHICLE INSTRUCTION CARD)

KIA VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Cee'd	5 seats / 5 door hatchback / estate
4	Picanto	5 seats / 5 door hatchback
5	Rio	5 seats / 5 door hatchback
6	Venga	5 seats / 5 door hatchback
7	Sportage	5 seats / 3 door hatchback
8	Pro Cee'd	5 seats / 3 door hatchback
9	Optima	5 seats / 4 door saloon
10	Carens	7 seats / 5 door MPV
11	Soul	5 seats / 5 door hatchback
12		
13		
14		
15		
16		
17		
18		
19		
20		

 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

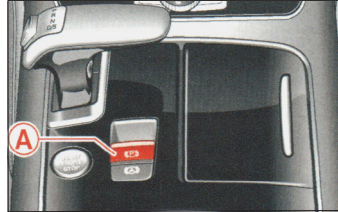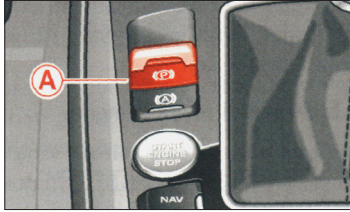

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

 
Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R16
R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
53 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

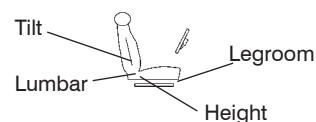

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
Opening boot/tailgate?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting door mirrors?	Electric adjustment operated by the control pad on the driver's door.
Opening the windows?	Electric front and rear operated via control buttons on the driver's door.
Operating the sunroof?	If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
Using child door locks?	Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Place ignition key in starter switch next to steering wheel / press the engine button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off when at standstill and foot pedals are not depressed - just depress the clutch to instantly restart the engine.
Opening fuel filler cap?	Located under flap on rear nearside. Centrally locked. Remote release. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
Folding the rear seats?	The rear seat is divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the carpet cover to access the temporary spare wheel and tools. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the electronic parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the temporary spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
Driving an automatic?	Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the D+ or D- options to select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-01 / 24-10-2015

KIA CEE'D

 
**5 DOOR HATCH / ESTATE
5 SEATS**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

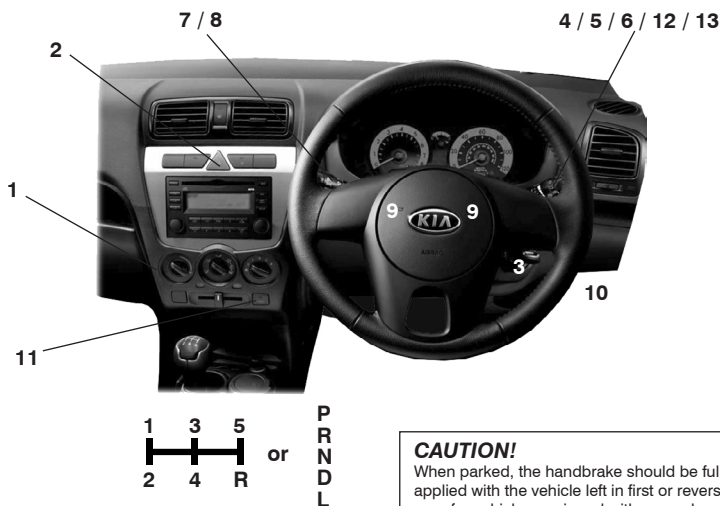

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

165/60 R14

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repairs using the tyre mobility system.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
35.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

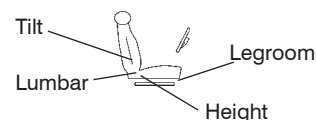

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central dead locking. Depress the button on the centre console to lock from inside or depress the door locking knobs.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door. Or manually operated.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door. Or manually operated rear windows.
- Operating the sunroof?** Not fitted.
- Using child door locks?** Press the centre console central locking button to lock them. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter switch next to steering wheel. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. A remote release button may be present on right hand side of driver's seat. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be separately folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the storage area housing the tyre repair kit, use the kit to make a temporary repair to a deflated tyre, as directed on the kit.
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

185/65 R15
195/55 R16
205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
43.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

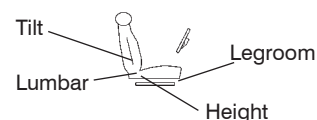

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking buttons on the driver's door to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door. Or manual internal adjustment.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door. Or manually operated rear windows.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it, or lock the doors by pressing the central locking button on the driver's door. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter switch next to steering wheel. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off at standstill or when idling - just depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Pull the remote release button. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be separately folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the storage area housing some of the tools. The vehicle is supplied with a tyre mobility kit in lieu of a spare wheel. Follow the instructions as indicated. First move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/65 R15
205/50 R16

Some models may be fitted with an electronic tyre pressure monitor.

Note: the vehicle is supplied with a tyre repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
48.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

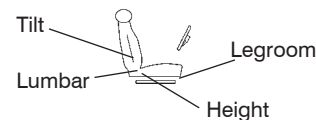

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles may be fitted with an alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Boot is fitted with luggage net hooks.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door. Some models feature an electric folding facility.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter key slot to right of steering wheel. Turn the key to start / stop. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models may feature automatic start / stop technology, whereby the engine auto shuts off when stationary, simply depress the clutch to restart the engine. (To activate start / stop when stopping - put the gear selector into neutral and remove your foot from the clutch, the engine will then auto-stop).
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the remote release button on the driver's door. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. The seats feature a slide and recline option. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the tools and jack. The vehicle is supplied with a tyre repair kit. When using it follow the indicated instructions. To remove the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-04 / 23-06-2012

KIA VENGA

**5 DOOR HATCHBACK
5 SEATS**

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

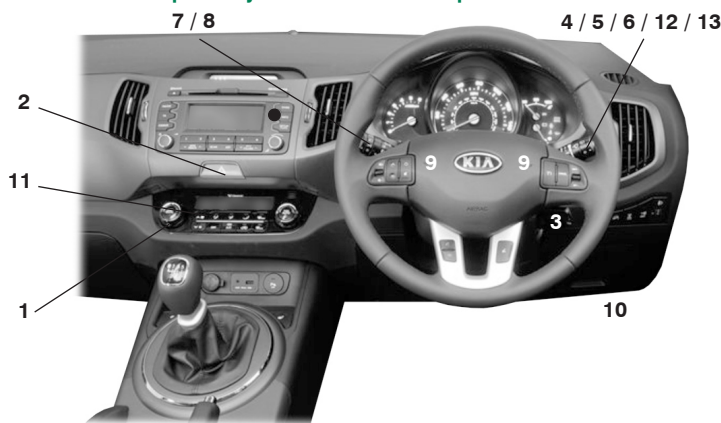

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

215/70 R16
225/60 R17
235/55 R18

Some models may be fitted with an electronic tyre pressure monitor.

Note: the vehicle is fitted with a full-size spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

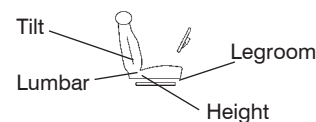

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Some vehicles may be fitted with an alarm.
Opening the boot?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting door mirrors?	Electric adjustment operated by the control pad on the driver's door.
Opening the windows?	Electric front and rear operated via control buttons on the driver's door.
Operating the sunroof?	If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
Using child door locks?	Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or P if automatic) and parking brake is on. Place ignition key in starter key slot to left of steering wheel. Press the engine start/stop button to start or stop the engine or turn the key for models not fitted with a smart key. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle.
Opening fuel filler cap?	Located under flap on rear offside. Centrally locked. Press the remote release button on the driver's door. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
Folding the rear seats?	The rear seats are divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To remove it, release the seat lock and slide / lift it out. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the carpet cover to access the storage area housing the standard spare wheel, tools and jack. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use D+ or D- to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-05 / 24-10-2015

KIA SPORTAGE

 
**5 DOOR SUV 2X4 OR 4X4
5 SEATS**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/55 R15
205/55 R16
225/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
53.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

Tilt
Lumbar
Legroom
Height
Fold front seats to access rear.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Place ignition key in starter switch next to steering wheel / press the engine button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off when at standstill and foot pedals are not depressed - just depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Remote release. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the temporary spare wheel and tools. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the electronic parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the temporary spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-06 / 24-10-2015

KIA PRO CEE'D

 
**3 DOOR HATCH
5 SEATS**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/65 R16
215/55 R17
225/45 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

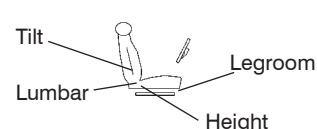

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Locking the doors?** Key / remote control operated central dead locking. Depress the centre console central locking switch to lock the doors from the inside. Auto locking of doors on vehicle motion. Some vehicles feature a keyless entry system.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors. Press the central locking switch to activate. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electric parking brake is on. Use a normal ignition key start/stop procedure, or some vehicles are fitted with an engine start/stop button (simply carry the key in your pocket or handbag, and press the button to start or stop the engine). Select desired gear. Release electric parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off at standstill or when idling - just depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Remote release. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be separately folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the temporary spare wheel and tools. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the electric parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the temporary spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the electric parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-07 / 28-01-2015

KIA OPTIMA

 
 
**4 DOOR SALOON
5 SEATS**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

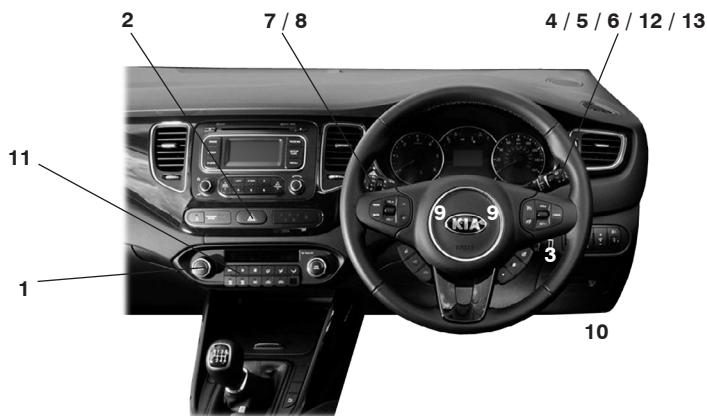

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

205/55 R16
225/45 R17

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
58.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

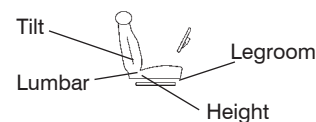

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central dead locking. Depress the central locking button to lock the doors from the inside.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Some vehicles may be fitted with an alarm.
Opening the boot?	Centrally locked. Use the key or remote control to unlock / open.
Adjusting door mirrors?	Electric adjustment operated by the control pad on the driver's door.
Opening the windows?	Electric front and rear operated via control buttons on the driver's door.
Operating the sunroof?	If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
Using child door locks?	Press the centre console central locking button to lock them. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine start/stop whereby the engine auto shuts off when stationary, in neutral gear, and pedals are not depressed - the engine instantly restarts when the clutch is depressed.
Opening fuel filler cap?	Located under flap on rear nearside. Centrally locked. Press the remote release button to open. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
Folding the rear seats?	The rear seat rows are divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the carpet cover to access the storage area housing the standard (or temporary) spare wheel, tools and jack. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts. For assistance in changing a tyre call the help line number on the rear of the tax disc holder.
How to drive an automatic?	Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use D+ or D- to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-08 / 26-01-2014

KIA CARENS

 
**5 DOOR MPV
7 SEATS**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine start/stop



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

R16
R17
R18

Some models may be fitted with an electronic tyre pressure monitor.

Note: the vehicle is supplied with a tyre repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
54.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

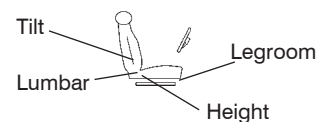

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles may be fitted with an alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked. Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter key slot to right of steering wheel. Turn the key to start / stop (or press the engine start/stop button adjacent to the gear selector). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models may feature automatic start / stop technology, whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed, simply depress the foot pedals to restart the engine.
- Starting the engine?**
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the remote release button on the driver's door. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the tools and jack. The vehicle is supplied with a tyre repair kit. When using it follow the indicated instructions. To remove the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-09 / 15-15-2015

KIA SOUL

5 DOOR HATCHBACK
5 SEATS