

INDEX - VICs (VEHICLE INSTRUCTION CARD)

MINI VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Cooper	4 seats / 2 door hatchback
4	Cooper Convertible	4 seats / 2 door convertible
5	Cooper Countryman	4 or 5 seat models / 5 Door (2wd or 4x4) crossover
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD

 
For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



P
R
N
D+ or
D-



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

175/65 R15
 195/55 R16
 205/45 R17

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Some vehicles are fitted with a remote tyre pressure monitor.

Note - some vehicles are fitted with runflat tyres which will have a limited travel distance and road speed when punctured; and others carry an emergency tyre inflation repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 40.0 - 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Fold seats to access rear seats.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch located in front of the gear shift lever on the centre console to lock the doors from the inside. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches in front of the gear shift lever on the centre console.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. NOTE: vehicles fitted with manual transmission are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary - simply depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.
- How to change a tyre?** Lift the carpet cover to access the tyre repair kit (for non-runflat tyres), tools and jack. To repair the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and follow instructions when using the tyre repair kit. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts. For assistance contact the phone number indicated on the reverse of the windscreen displayed tax disc holder.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MIN-01 / 13-01-2013

MINI COOPER

**4 SEATS
 2 DOOR HATCHBACK**

design and production by : Drake Enterprises Limited - Phone : 0118 986 8526

VEHICLE INSTRUCTION CARD

 
For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



P
R
N
D+ or
D-



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 175/65 R15
- 195/55 R16
- 205/45 R17

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Some vehicles are fitted with a remote tyre pressure monitor.

Note - some vehicles are fitted with runflat tyres which will have a limited travel distance and road speed when punctured; and others carry an emergency tyre inflation repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 40.0 - 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

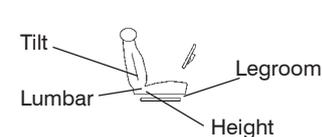

Fold seats to access rear seats.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 

- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch located in front of the gear shift lever on the centre console to lock the doors from the inside. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches in front of the gear shift lever on the centre console.
- Opening the roof?** Use the centre console mounted button to open/close the roof within 15 seconds (only use it when travelling less 20mph).
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. NOTE: vehicles fitted with manual transmission are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary - simply depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.
- How to change a tyre?** Lift the carpet cover to access the tyre repair kit (for non-runflat tyres), tools and jack. To repair the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and follow instructions when using the tyre repair kit. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts. For assistance contact the phone number indicated on the reverse of the windscreen displayed tax disc holder.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

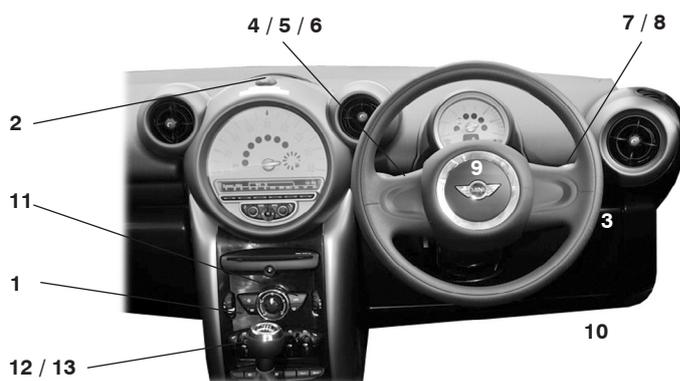

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

205/60 R16
 205/55 R17
 225/45 R18

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Some vehicles are fitted with a remote tyre pressure monitor.

Note - some vehicles are fitted with runflat tyres which will have a limited travel distance and road speed when punctured; and others carry an emergency tyre inflation repair kit.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 47.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

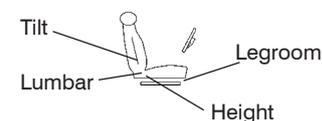

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch located in front of the gear shift lever on the centre console to lock the doors from the inside. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Rear doors are split opening and open independently.
- Adjusting door mirrors?** Electric front and rear adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches in front of the gear shift lever on the centre console.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. NOTE: vehicles fitted with manual transmission are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary - simply depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.
- How to change a tyre?** Lift the carpet cover to access the tyre repair kit (for non-runflat tyres), tools and jack. To repair the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and follow instructions when using the tyre repair kit. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts. For assistance contact the phone number indicated on the reverse of the windscreen displayed tax disc holder.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MIN-03 / 13-01-2013

MINI COOPER COUNTRYMAN

4 OR 5 SEAT MODELS
5 DOOR (2WD OR 4X4) CROSSOVER