

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## NISSAN VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Juke</b>	5 seats / 5 door crossover SUV
4	<b>NV200 van 1.5 DCI 90ps Accenta</b>	2 seats / medium panel van
5	<b>Note</b>	5 seats / 5 door hatchback
6	<b>Qashqai</b>	5 seats / 5 door SUV
7	<b>Leaf</b>	5 seats / electric vehicle: 5 door hatchback
8	<b>Navara double cab 2.5d Acenta</b>	2-5 seats / 2-4 door 4x4 truck
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

 
 
# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

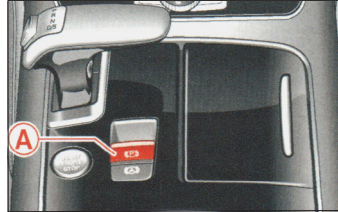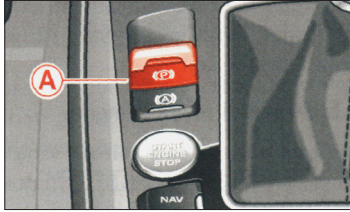

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

### RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

### YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

### GREEN

 
Green or blue is only telling you that a system is on or operating normally.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

205/60 R16  
215/55 R17  
225/45 R18

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
46.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

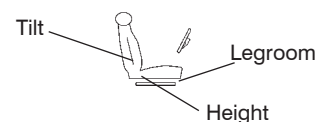

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control or remote release to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad to the lower right of the steering wheel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - panoramic glass sunroof operated via roof mounted switchgear.
- Using child door locks?** Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch (some models may feature an engine start/stop button - to use insert key into slot, and press the button at left of steering wheel to start / stop the engine). Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the clutch to instantly restart. Some models may also feature 4WD.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats feature split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** **Note:** This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the National Car Rental Tyre Helpline 0800 - 16 95 875 for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

 
## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## DIMENSIONS

Fuel Tank Capacity litres	55
Vehicle Length m	4.4
Vehicle Width m	2.01
Vehicle Height m	1.86
Cargo volume cu.m	4.2
Cargo Length m	2.04
Cargo Width m	1.5
Cargo Height m	1.36
Vehicle Weight (unladen) kg	1272
Payload Weight kg	728
Maximum Weight kg	2000



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

175/70 R14

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel. For assistance, please refer to the phone numbers shown on the tax disc holder.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### DRIVER'S SEAT



### FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside.
<b>Anti-theft system?</b>	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
<b>Loading cargo?</b>	Use the handle to open doors. Vehicle is fitted with two side sliding doors. Floor is fitted with fixed load lashing rings for securing loads. Twin rear asymmetric doors.
<b>Adjusting door mirrors?</b>	Electric adjustment operated by the control pad on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles may also be fitted with auto start-stop engines, whereby the engine shuts off when the gear selector is in neutral and the vehicle is at a standstill. To restart just depress the clutch.
<b>Opening fuel filler cap?</b>	Located on mid offside of vehicle. Centrally locked (or use key to unlock). Twist off the cap anticlockwise.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located in the passenger footwell. Unhook catch under bonnet.
<b>How to change a tyre?</b>	The tools and jack are stored under the driver's seat. The standard spare wheel is found slung underside the vehicle, secured by a retaining bolt. Use the tools to undo the bolt, and lower the wheel to the ground. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

 
 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

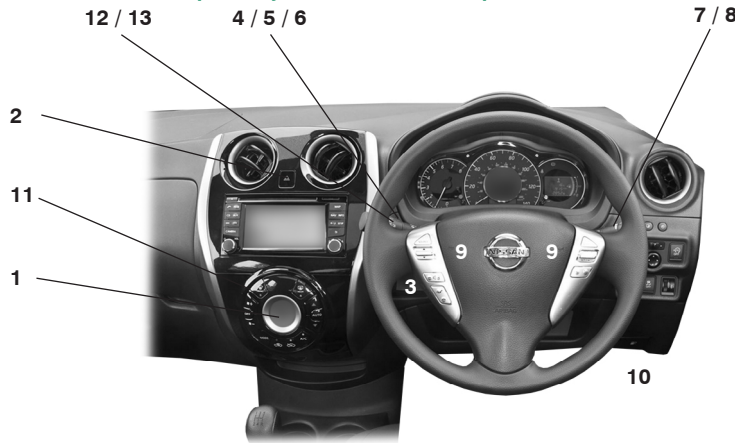

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

185/65 R15  
195/65 R15  
195/55 R15

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
41.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control or remote release to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad to the lower right of the steering wheel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - panoramic glass sunroof operated via roof mounted switchgear.
- Using child door locks?** Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine (or some models may feature an engine start/stop button - to use just keep the key in your pocket and press the button at left of steering wheel to start / stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the clutch to instantly restart.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats feature split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** This vehicle is supplied with a tyre repair kit. Follow the instructions supplied or contact us for assistance. To repair the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Follow the instructions to use the tyre repair kit or contact us for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M** + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-03 / 27-07-2014

# NISSAN NOTE

**5 SEATS  
5 DOOR HATCHBACK**



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

215/65 R16  
215/60 R17  
225/45 R19

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
55.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control or remote release to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - panoramic glass sunroof operated via roof mounted switchgear.
- Using child door locks?** Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Models feature an engine start/stop button - to use just keep the key in your pocket and press the button at left of steering wheel to start / stop the engine. (Or some models feature a standard ignition key). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the electric parking brake may auto engage or release depending on the driving mode selected.) Vehicle also features auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the clutch to instantly restart. Some vehicles feature all mode 4WD.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats feature split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** This vehicle is supplied with a tyre repair kit. Follow the instructions supplied or contact us for assistance. To repair the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Follow the instructions to use the tyre repair kit or contact us for assistance.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M** + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-04 / 27-07-2014

# NISSAN QASHQAI

 
**5 SEATS  
5 DOOR SUV**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Mouse selector



Digital display

Mouse control allowing B-Mode selection



P  
R  
N  
D



Charging switches

### CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in P (Park) mode.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

205/55 R16  
215/50 R17

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

This is an **electric vehicle** using lithium-ion battery power and an electric motor. The vehicle will require regular **re-charging**. In ideal optimum conditions a single full charge gives a range of 70-124 miles.

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.

### Anti-theft system?

Passive arming of electronic transponder engine immobiliser. Models are fitted with an alarm system.

### Opening the boot?

Centrally locked. Use the remote control or remote release to unlock / open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

### Operating the sunroof?

If fitted - the glass sunroof is operated via roof mounted switchgear.

### Using child door locks?

Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated.

### Starting the engine and selecting gears?

Use the smartkey to lock/unlock the vehicle. Just keep the key in your pocket or bag whilst inside the vehicle. To turn the electric motor on/off depress the start/stop button. The car hums a few bars of music on startup. The dashboard provides a high visibility easy-read display for the Eco indicator and speedometer, while a LCD meter display houses the power meter, battery temperature gauge, multi-function display, remaining energy gauge, capacity level gauge and distance to empty display. Push the blue button on the steering wheel and the satellite navigation will display your range in concentric circles on the map, the larger one shows a one-way trip, the smaller for a round trip. Push it again to be shown the nearest charging stations. Use the centre console computer-mouse selector to opt for Normal, Eco-Mode and B-Mode settings. (Select B-Mode to activate regenerative braking to increase battery regeneration when braking and decelerating, or Eco-Mode for maximum efficiency.) Whenever the vehicle is left at standstill apply the electronic parking brake.

Select desired gear (for gear selection, use the mouse selector to choose N for neutral, R for reverse, and P for when the vehicle is parked.). Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto start/stop technology whereby the electric motor switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the accelerator or foot brake to instantly restart.

### Releasing the bonnet? Folding the rear seats?

Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.

The rear seats feature split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.

### How to change a tyre?

This vehicle is supplied with a tyre repair kit. Follow the instructions supplied or contact us for assistance. To repair the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Follow the instructions to use the tyre repair kit or contact us for assistance.

**How to charge the battery?** Press the switch to lower right of steering wheel to open the exterior (front) bonnet charging port. (There are also electric port locking, charger timer and exterior vehicle noise deactivation switches located here.) Raise the small bonnet flap to access the charging terminal. Note the charging times... **RAPID CHARGER STATION:** Charge from 0-80% within 30 minutes using a national network of rapid charger stations (indicated via Sat-Nav) located at Nissan car dealerships, motorway service stations and other locations. **HOME CHARGING:** Re-charge from 4-8 hours using the "Home charging Unit" (this requires installation by an approved technician). **CABLE CHARGING:** Use the "EVSE" cable to charge at any location using an appropriate electric socket - this will take approximately 12 hours.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-05 / 28-01-2015

# NISSAN LEAF

 
**5 SEATS**  
**ELECTRIC VEHICLE: 5 DOOR HATCHBACK**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 4x4 Selector
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

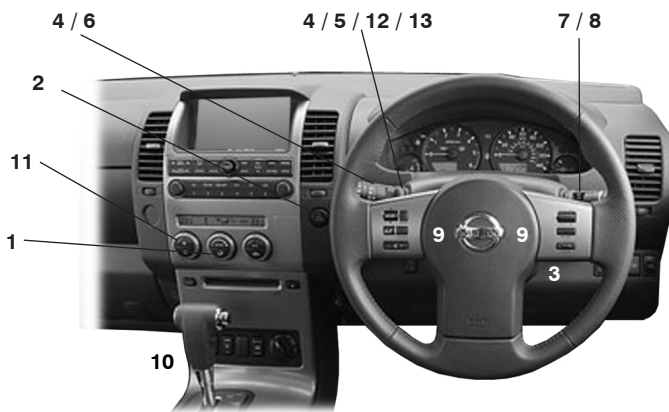

## DIMENSIONS

 Fuel Tank Capacity litres	75
Vehicle Length m	5.29
Vehicle Width m	1.84
Vehicle Height m	1.9
Cargo volume cu.m	0
Cargo Length m	1.48
Cargo Width m	1.49
Cargo Height m	0
Vehicle Weight (unladen) kg	1960
Payload Weight kg	1250
Maximum Weight kg	3210



## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

255/65 R17  
255/60 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: a full size spare wheel is carried.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. A single bottom hinged tailgate provides access to a large flat open load area with tie-down securing points.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Electric operated rear.
- Using child door locks?** Activate the driver's door power child locks. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine (and - if fitted - press the power button to start/stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine auto start/stop technology - where the engine auto shuts down when at a standstill and foot pedals are not depressed - simply depress the clutch (manual) or accelerator (auto) to restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Lift the flap to open. Twist off cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are supplied with a standard spare tyre located under the rear floorpan. Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the S+ and S- gear selector. Whenever the vehicle is at a standstill apply the handbrake.
- Selecting 4x4 driving modes?** Use the rotating selector switch found on the lower dashboard near the gear shift lever to easily choose various driving modes. There is also a switch to lock the rear differential when driving in extreme conditions.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-06 / 25-05-2015

**NISSAN NAVARA** DOUBLE CB 2.5D ACENTA

**2-5 SEATS**  
**2-4 DOOR 4X4 TRUCK**