

INDEX - VICs (VEHICLE INSTRUCTION CARD)

RENAULT VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Trafic 1.6DCI LL29 115ps	3 - 7 seats / panel van / passenger vehicle (minibus)
4	Master Busin LM 35 DCI 125	6 - 9 - 17 Seats / passenger vehicle (minibus)
5	Captur	5 seats / 3-5 door hatchback
6	Clio	5 seats / 3-5 door hatchback
7	Megane	5 seats / 3-5 door hatchback / 5 door estate
8	Kadjar	5 seats / 5 door crossover 4x4 or 2x4
9	Kangoo Busvan ML 1.9 DCI	2 seats / panel van
10	Twingo	5 seats / 5 door hatchback
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

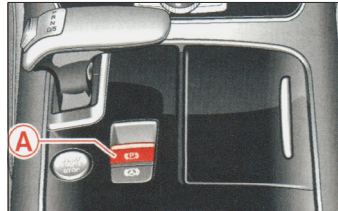

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



DIMENSIONS

Fuel Tank Capacity litres	90
Vehicle Length m	5.4
Vehicle Width m	2.28
Vehicle Height m	1.97
Cargo volume cu.m	5.2
Cargo Length m	2.94
Cargo Width m	1.66
Cargo Height m	1.39
Vehicle Weight (unladen) kg	1551
Payload Weight kg	1239
Maximum Weight kg	2900

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

DRIVER'S SEAT



FUEL

Only use the correct fuel type.
Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Van load compartment?** Centrally locked. Fitted with 1 sliding panel side door, with twin opening rear, or a single top hinged door. Loading floor is fitted with fixed tie-down eyes.
- Passenger van doors seats?** Centrally locked. Fitted with 2 sliding side doors, with a top-hinged rear tailgate. Seats are split folding and can be individually folded by releasing the seat locks. Check seats are secure before using them.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front (and rear if applicable) operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Twin electric tilt / slide. Operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the lefthand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Wheel is located beneath the rear of the vehicle. Lower the wheel to the ground by releasing the locking bolt using the tools located in the side compartment of the boot / load area. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the automatic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-01 / 25-05-2016

RENAULT TRAFIC 1.6DCI LL29 115PS

 
3 / 7 SEATS
PANEL VAN / PASSENGER VEHICLE (MINIBUS)

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

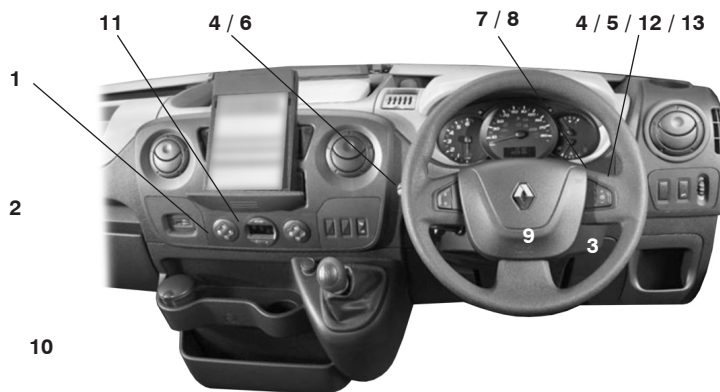

DIMENSIONS

Fuel Tank Capacity litres	80
Vehicle Length m	6.2
Vehicle Width m	2.47
Vehicle Height m	2.49
Cargo volume cu.m	13
Cargo Length m	3.73
Cargo Width m	1.77
Cargo Height m	1.89
Vehicle Weight (unladen) kg	1970
Payload Weight kg	1530
Maximum Weight kg	3500

 

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

DRIVER'S SEAT



FUEL

Only use the correct fuel type.
Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


Locking the doors?	Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
Anti-theft system?	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
Passenger van doors / seats?	Centrally locked. Fitted with 2 sliding side doors, with twin opening doors. Seats are split folding and can be individually folded by releasing the seat locks. Check seats are secure before using them. Door sills may have side steps fitted to aid access into the vehicle.
Adjusting door mirrors?	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front (and rear if applicable) operated via control buttons on the driver's door, with some manual operated windows.
Operating the sunroof?	If fitted. Twin electric tilt / slide. Operated by roof mounted switchgear.
Starting the engine?	Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
Opening fuel filler cap?	Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
How to change a tyre?	Wheel is located beneath the rear of the vehicle. Lower the wheel to the ground by releasing the locking bolt using the tools located in the side compartment of the boot / load area. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the automatic parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

 - 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

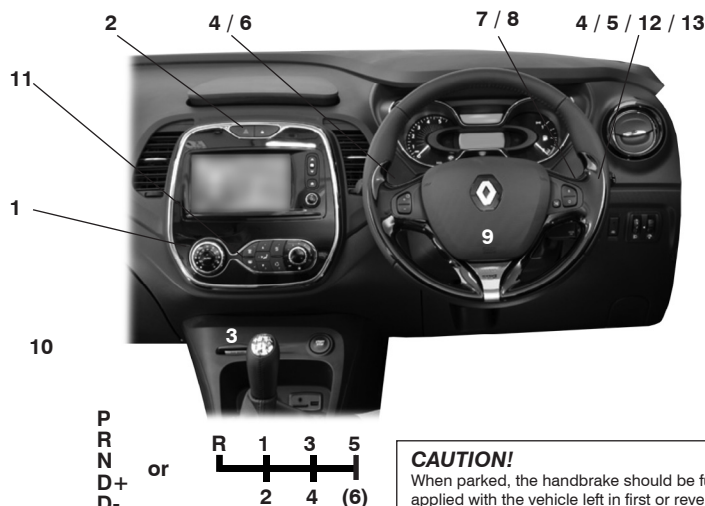

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/60 R16
205/55 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

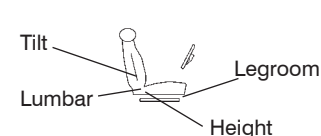

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor has a split-level feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button on dash board to lock or unlock.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place key card into slot in centre console. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel. The tool kit is located in the boot in the floor well. To use the tyre repair kit: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Follow the instructions on the tyre repair kit. Only if necessary: loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and remove / replace the wheel. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Folding the rear seats?** The rear seats can be folded, and feature 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-03 / 26-01-2014

RENAULT CAPTUR

 
**5 SEATS
5 DOOR CROSSOVER**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

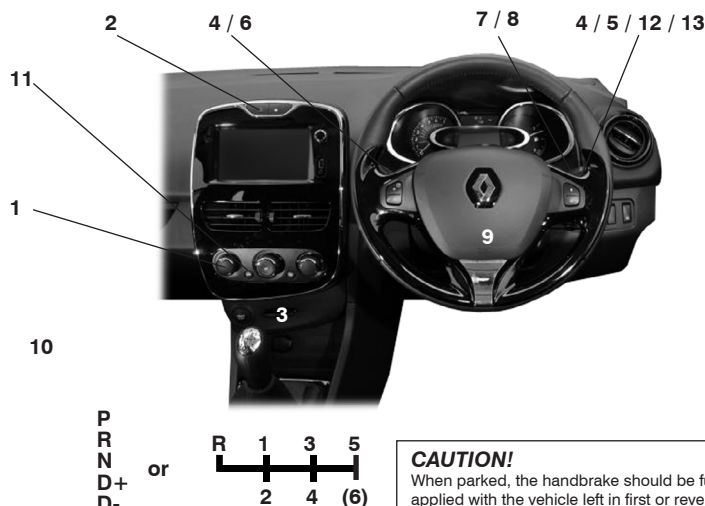

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

185/65 R15
195/55 R16
205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

Tilt
Lumbar
Legroom
Height
3 door:
Fold front seats to access rear

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor has a split-level feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front (and rear) operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button on dash board to lock or unlock.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place key card into slot in centre console. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel. The tool kit is located in the boot in the floor well. To use the tyre repair kit: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Follow the instructions on the tyre repair kit. Only if necessary: loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and remove / replace the wheel. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Folding the rear seats?** The rear seats can be folded, and feature 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-04 / 26-01-2014

RENAULT CLIO

5 SEATS
3-5 DOOR HATCHBACK

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

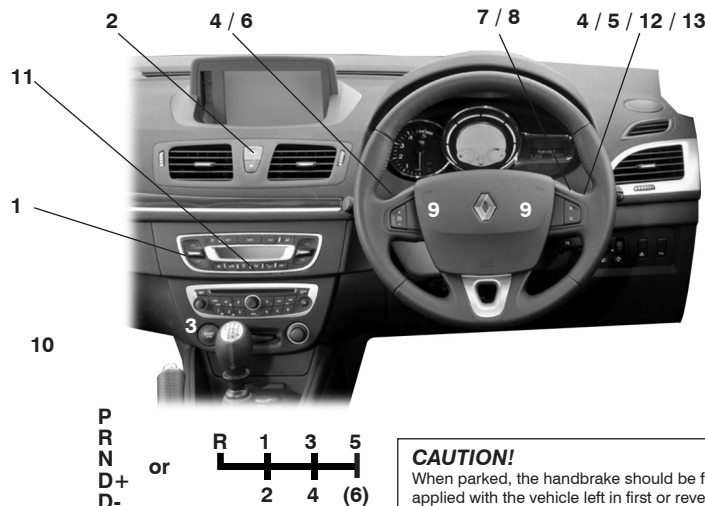

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
205/50 R17
225/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

Tilt
Lumbar
Legroom
Height
3 door:
Fold front seats to access rear

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. To lock the doors from the inside depress the central locking. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor has a split-level feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front (and rear) operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (N or P for automatic) and handbrake is on. Place the key card into the slot of centre console (or for the hands-free key card simply carry the card with you). Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button to lock or unlock.
- Folding the rear seats?** The rear seats can be folded, and feature 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.
- How to change a tyre?** Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel. The tool kit is located in the boot in the floor well. To use the tyre repair kit: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Follow the instructions on the tyre repair kit. Only if necessary: loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and remove / replace the wheel. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-05 / 27-07-2014

RENAULT MEGANE

 
 
5 SEATS
3-5 DOOR HATCHBACK / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

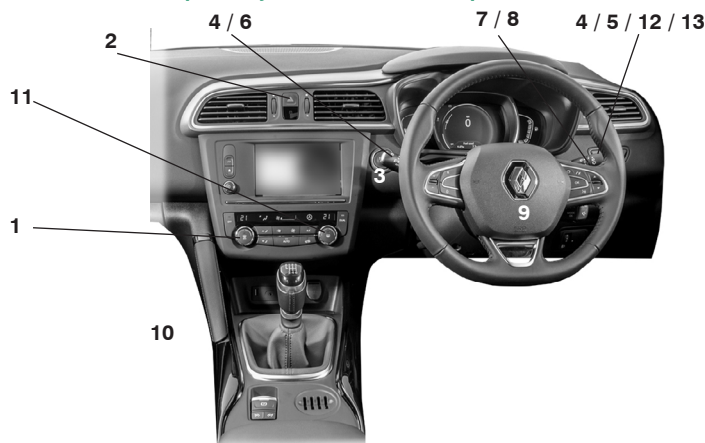

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R16
215/65 R17
225/45 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

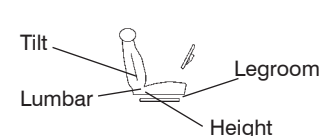

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor has a split-level feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button on dash board to lock or unlock.
- Starting the engine?** Ensure gear selector is in neutral and electronic parking brake is on. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto engine start/stop - engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The engine auto restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel. The tool kit is located in the boot in the floor well. To use the tyre repair kit: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the electronic parking brake. Follow the instructions on the tyre repair kit. Only if necessary: loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and remove / replace the wheel. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Folding the rear seats?** The rear seats can be folded, and feature 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.
- Selecting 4x4 modes?** Use the centre console rotating selector switch to easily choose different driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-06 / 24-10-2015

RENAULT KADJAR

 
5 SEATS
5 DOOR CROSSOVER 4X4 OR 2X4

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

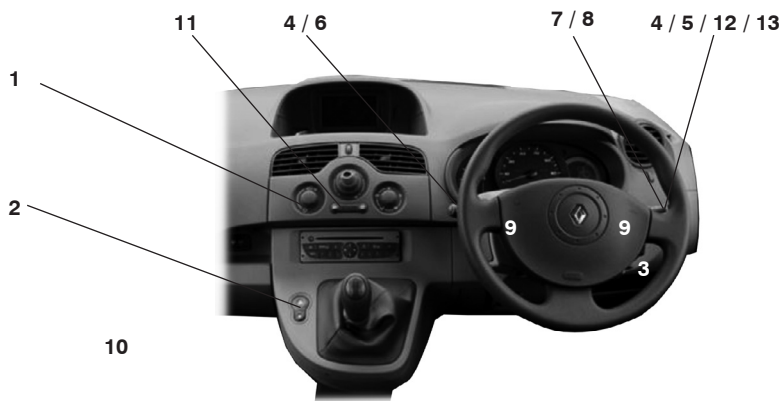

DIMENSIONS

Fuel Tank Capacity litres	60
Vehicle Length m	4.28
Vehicle Width m	2.14
Vehicle Height m	1.84
Cargo volume cu.m	3
Cargo Length m	1.48
Cargo Width m	1.22
Cargo Height m	1.13
Vehicle Weight (unladen) kg	1280
Payload Weight kg	650
Maximum Weight kg	1930

 

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/65 R15

Most vehicle are supplied with a standard spare wheel, some models may be fitted with a tyre repair kit in place of the spare.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

DRIVER'S SEAT



FUEL

Only use the correct fuel type.
Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Van load compartment?** Centrally locked. Fitted with 1 or 2 sliding panel side doors, with twin opening rear doors. Loading floor is fitted with fixed tie-down eyes.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto engine start/stop - engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The engine auto restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the lefthand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Wheel is located beneath the rear of the vehicle. Lower the wheel to the ground by releasing the locking bolt using the tools located in the side compartment of the boot / load area. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts. (Note: if vehicle is supplied with a tyre repair kit, follow the supplied instructions or contact the help phone number for further assistance).
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the automatic parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

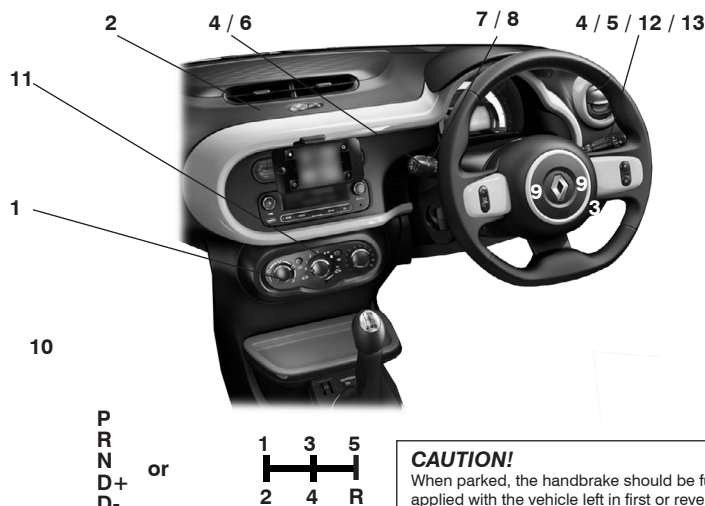

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

165/65 R15
185/60 R15
185/50 R16
205/45 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
35 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

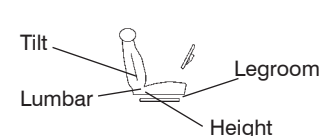

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Opening the boot?** Centrally locked. Use the handle to open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front (and rear pop-out windows) operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button on dash board to lock or unlock.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto engine start/stop - engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The engine auto restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are fitted with a tyre inflation kit in lieu of a spare wheel. The tool kit is located (without jack) stored under the passenger footrest. To use the tyre repair kit: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Follow the instructions on the tyre repair kit. Only if necessary: loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Remove all passengers from the vehicle before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and remove / replace the wheel. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- Folding the rear seats?** The rear seats can be folded, and features split 50:50 folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal acceleration use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-08 / 05-02-2016

RENAULT TWINGO

**5 SEATS
5 DOOR HATCHBACK**