

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## SEAT VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Leon</b>	5 seats / 3-5 door hatchback
4	<b>Ibiza</b>	5 seats / 3-5 door hatchback
5	<b>Alhambra</b>	5-7 seats / MPV
6	<b>Alhambra (2016 model)</b>	5-7 seats / MPV
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		


# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

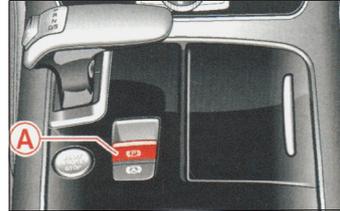

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

### RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

### YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

### GREEN

Green or blue is only telling you that a system is on or operating normally.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

- R15
- R16
- R17

Some models may be fitted with an electronic tyre pressure monitor.

 
Note: vehicles are equipped with an emergency tyre repair kit, for further assistance see the note below.

## FUEL

Fuel Tank Capacity: 55.0 litres

### AdBlue Fluid Levels

This vehicle uses AdBlue fluid to help minimise gaseous exhaust pollutants. **When fluid levels are low AdBlue must be refilled.** A white warning icon appears 1500 miles before a refill is needed; an amber warning icon and acoustic warning is repeated until the tank is empty; when the tank is empty a red warning icon is shown and the engine is stopped and cannot be restarted - this is not a fault. Whenever a warning appears use the contact numbers on the tax disc holder to arrange assistance.



## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

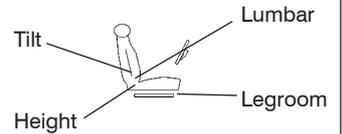

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Press the central locking switch mounted on the centre console. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. (Lift up the car badge to access the keyslot).
- Adjusting door mirrors?** Manual internal adjustment operated via a control lever on each door or electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
- Operating the sunroof?** If fitted. Electric tilt/slide controlled by roof mounted switchgear.
- Using child door locks?** Press the central locking switch on the centre console to lock the doors. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology: when the car is stopped, and the gear lever is in neutral and the clutch pedal is released, the start/stop system automatically switches the engine off. Once the clutch is engaged again the engine instantly re-starts.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel flap release. Lift the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the emergency tyre repair kit and tools. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit - for further assistance telephone the help number displayed on the rear of the tax disc holder. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SET-02 / 13-01-2013

# SEAT LEON


**5 SEATS**  
**3/5 DOOR HATCH**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

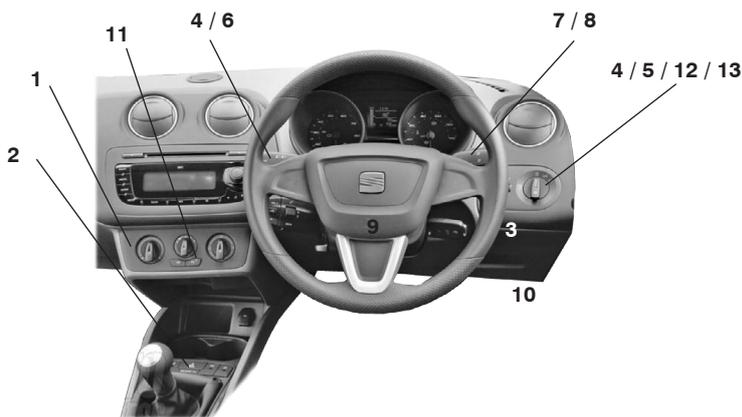

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

 
Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

## FUEL

Fuel Tank Capacity: 45.0 litres

### AdBlue Fluid Levels

This vehicle uses AdBlue fluid to help minimise gaseous exhaust pollutants. When fluid levels are low AdBlue must be refilled. A white warning icon appears 1500 miles before a refill is needed; an amber warning icon and acoustic warning is repeated until the tank is empty; when the tank is empty a red warning icon is shown and the engine is stopped and cannot be restarted - this is not a fault. Whenever a warning appears use the contact numbers on the tax disc holder to arrange assistance.



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

### DRIVER'S SEAT

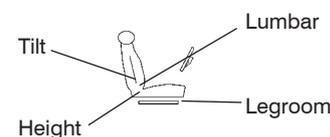

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central security deadlocking. Depress central locking switch mounted on the centre console to lock all doors.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. (Lift up the car badge to access the keyslot)
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
- Operating the sunroof?** If fitted. Electric tilt/slide controlled by roof mounted switchgear.
- Using child door locks?** Press the child lock switch on the driver's door, or some models are fitted with a manual lock located on edge of rear doors - use the ignition key twist key slot to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel flap release. Lift the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard size spare wheel and tools. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

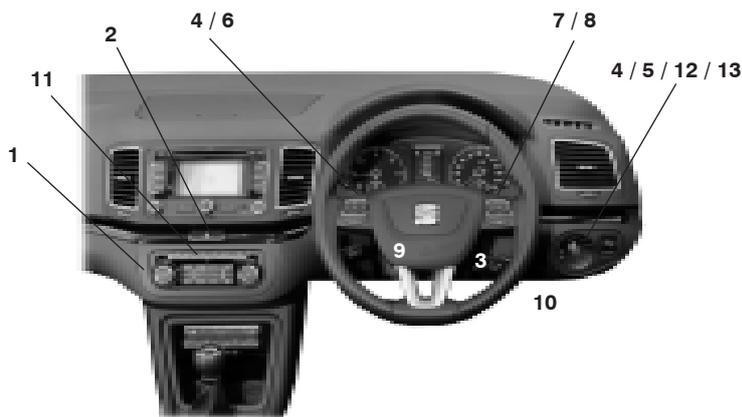

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

215/60 R16  
 225/50 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

 
Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

## FUEL

Fuel Tank Capacity: 70.0 litres

### AdBlue Fluid Levels

This vehicle uses AdBlue fluid to help minimise gaseous exhaust pollutants. When fluid levels are low AdBlue must be refilled. A white warning icon appears 1500 miles before a refill is needed; an amber warning icon and acoustic warning is repeated until the tank is empty; when the tank is empty a red warning icon is shown and the engine is stopped and cannot be restarted - this is not a fault. Whenever a warning appears use the contact numbers on the tax disc holder to arrange assistance.



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

### IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

### CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

### DRIVER'S SEAT

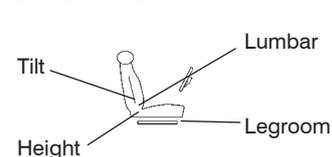

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central security deadlocking. Auto door locking on some models.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Press the marque's badge to open the tailgate from the outside. Some models feature a power operated tailgate controlled from the remote control and internal switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt/slide controlled by one-touch roof mounted switchgear.
- Using child door locks?** Press the child lock switch on the driver's door. Rear doors feature a pull and slide opening mechanism (some models feature power slide operation). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and electric handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release electric handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine start/stop technology - when the vehicle is stopped and vehicle is in neutral and clutch pedal is released, the start/stop technology switches the engine off, to restart just depress the clutch.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel flap release. Lift the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard size spare wheel and tools. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the electric handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

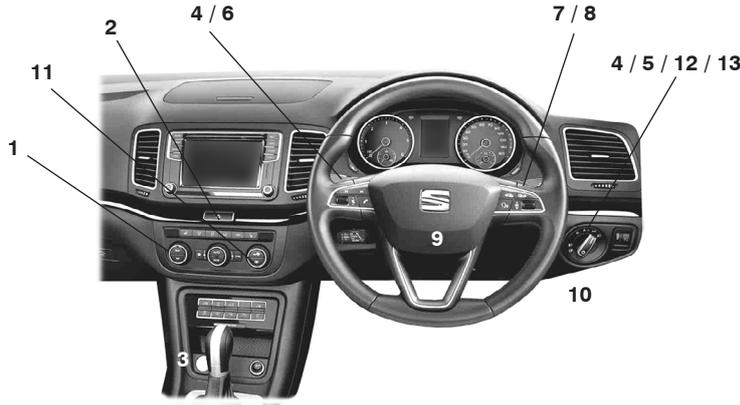

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

- 215/60 R16
- 225/50 R17
- 225/45 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Vehicles are fitted with runflat tyres.

Note: driving speeds and travel distances are restricted when using runflat tyres which have been punctured.

 
**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Fuel Tank Capacity: 70 litres

## AdBlue Fluid Levels

This vehicle uses AdBlue fluid to help minimise gaseous exhaust pollutants. When fluid levels are low AdBlue must be refilled. A white warning icon appears 1500 miles before a refill is needed; an amber warning icon and acoustic warning is repeated until the tank is empty; when the tank is empty a red warning icon is shown and the engine is stopped and cannot be restarted - this is not a fault. Whenever a warning appears use the contact numbers on the tax disc holder to arrange assistance.



## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

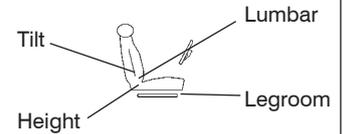

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Auto door locking on some models.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Press the marque's badge to open the tailgate from the outside. Some models feature a power operated tailgate controlled from the remote control and internal switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric power sliding panoramic sunroof controlled by one-touch roof mounted switchgear.
- Using child door locks?** Press the child lock switch on the driver's door. Rear doors feature a pull and slide opening mechanism (some models feature power slide operation). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and electric handbrake is on. Ensure the remote key is carried in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electric handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology - when the vehicle is stationary, gears are in neutral and foot pedals are not depressed, the engine auto shuts off - to restart just depress the foot pedal.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel flap release. Lift the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard size spare wheel and tools. Move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the electric handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the electric handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SET-06 / 25-05-2016

# SEAT ALHAMBRA 2016 MODEL

**5-7 SEATS  
MPV**