

INDEX - VICs (VEHICLE INSTRUCTION CARD)

TOYOTA VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Avensis	5 seats / 5 door hatchback / 5 door estate
4	Auris	5 seats / 5 door hatchback
5	Aygo	5 seats / 5 door hatchback
6	Verso	5-7 seats / 5 door hatchback
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED

Red indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW

Yellow/orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN

Green or blue is only telling you that a system is on or operating normally.

VEHICLE INSTRUCTION CARD


For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electric Parking Brake



To select reverse on manual transmission lift up the ring collar.

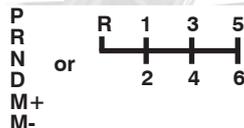

CAUTION!

When parked the electric parking brake (located at lower right of instrument panel) should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Fitted tyres include:

205/60 R16; 215/55 R17; 225/45 R18

On those vehicles fitted with spacesaver spare wheels - note that driving speed and travel distance is restricted.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

Some vehicles may be supplied with a tyre puncture repair kit in lieu of a standard or spacesaver spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

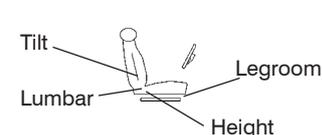

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Depress the central door locking switch located on the instrument panel to lock the doors from the inside. Auto door locking and re-locking.
- Anti-theft system?** Some models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models are fitted with a remote release button found on the lower right of the instrument panel.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the mid right of the instrument panel to right of steering wheel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked. Or use the central locking button to lock all doors from the inside. (Doors also auto-lock).
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electric parking brake (EPB) is on. Place smart key in starter switch / key slot. Twist the key or press the engine start/stop button on the lower right of dashboard to start or stop the engine. Select desired gear. Release EPB and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press remote fuel lock release on lower right of instrument panel. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the space saver tyre or tyre puncture repair kit. The tools and jack are stored above the wheel in a designated compartment. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the electric parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare (or use the puncture repair kit by following its instructions). Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-01 / 24-10-2015

TOYOTA AVENSIS

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE


design and production by : Drake Enterprises Limited - Phone : 0118 986 8526

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

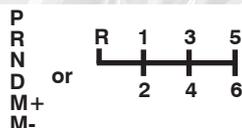

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- 195/65 R15
- 205/55 R16
- 225/45 R17

Vehicles are supplied with a temporary spare wheel

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

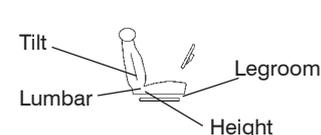

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the driver's door central locking switch to lock all the doors from the inside.
- Anti-theft system?** Some models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the lower right of the instrument panel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and handbrake is on. Insert key into key slot and use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models also feature a smart entry/start system - unlock doors by touching the handle, or start the engine at the touch of an engine start/stop button - just carry the smart key in your pocket or handbag). Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Remote release located on driver's door. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the temporary spare wheel. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. For further assistance phone the helpline on the reverse of the windscreen tax disc holder.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the M+ or M- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-02 / 24-10-2015

TOYOTA AURIS

 
**5 SEATS
 5 DOOR HATCHBACK**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R14
- R15

Vehicles are supplied with a tyre repair kit.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 35.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

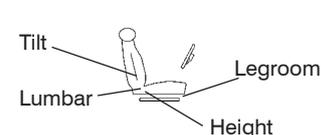

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the instrument panel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with a retractable sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and handbrake is on. Insert key into key slot and use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Remote release located on driver's door. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 50:50 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Follow the instructions on the tyre repair kit. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. For further assistance phone the helpline on the reverse of the windscreen tax disc holder.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

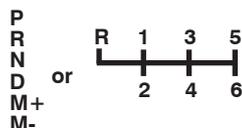

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R16
- R17

Vehicles are supplied with a tyre repair kit or space saver spare wheel.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

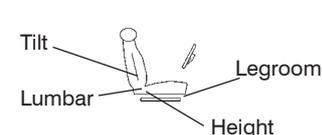

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the instrument panel to right of steering wheel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and handbrake is on. Insert key into key slot and use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Remote release located on driver's door. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the spacesaver spare wheel or tyre repair kit. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Follow the instructions on the tyre repair kit if applicable. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. For further assistance with changing the wheel phone the helpline on the reverse of the windscreen tax disc holder.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Release pressure on the accelerator to return to normal accelerator use. Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-04 | 11-07-2016

TOYOTA VERSO

**5-7 SEATS
 5 DOOR HATCHBACK**