

INDEX - VICs (VEHICLE INSTRUCTION CARD)

BMW VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	1 Series	5 seats / 5 door hatchback
4	2 Series	5 seats / 2 door convertible / 2 door coupe
5	3 Series	5 seats / 5 door estate / 4 door saloon
6	4 Series	5 seats / 2 door convertible / 2 door coupe
7	5 Series	5 seats / 5 door estate / 4 door saloon
8	6 Series	4 seats / 2 door convertible / 2 door coupe
9	X1 Series	5 seats / 5 door SUV / 4x4 or 2x4
10	X3 Series	5 seats / 5 door SUV / 4x4 or 2x4
11	X5 Series	5 seats / 5 door SUV / 4x4 or 2x4
12	X6 Series	5 seats / 5 door SUV / 4x4 or 2x4

 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

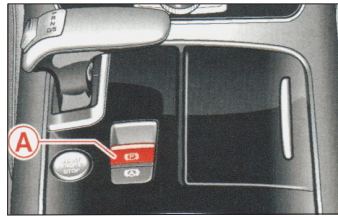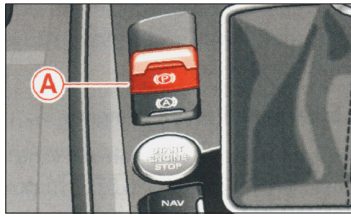

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

205/55 R16
225/45 R17
205/50 R17
225/40 R18
245/35 R18

Some vehicles are fitted with a remote tyre pressure monitor. **Run flat tyres have limited travel distance and road speed rating when punctured.**

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Visible VIN. Passive arming of electronic engine immobiliser after switching off the engine, and the system auto arms after 30 seconds if the engine is not started.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. An internal remote release switch may be fitted.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic glass sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Press the engine start/stop button to start or stop the engine whilst retaining the key in your pocket or bag. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply depress the accelerator or clutch pedals to instantly restart.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise to release it.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Some models may also feature steering wheel mounted paddle shift levers used to change up or down gears. Whenever the vehicle is at a standstill apply the parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

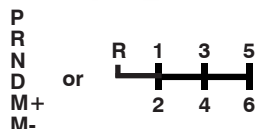

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

205/50 R17
225/45 R17
225/40 R18
245/35 R18

Vehicles are fitted with a remote tyre pressure monitor. Run flat tyres have limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
53.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

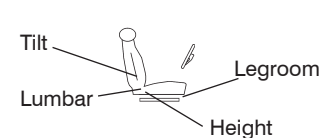

2 door: fold seats to access rear.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, the system auto arms after 30 seconds if the engine is not started.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. An internal remote release switch may be fitted.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Vehicles feature keyless entry (keep the key in your pocket or bag) - press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply depress the accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover in the boot to access the tools and jack. The vehicle is fitted with run-flat tyres. Once punctured these tyres have limited travel distance and road speeds. Should you need to use the jack: move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Once finished - lower the vehicle.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/50 R17
225/45 R18
225/40 R18
255/35 R19
255/40 R18

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor. Note - runflat tyres will have a limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
59.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with optional keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Non-estate versions have an internal remote release switch.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric slide glass panoramic sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Retain the key in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply release the foot brake (for auto) or depress the clutch (for manual) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Some models may also feature steering wheel mounted paddle shift levers used to change up or down gears. Whenever the vehicle is at a standstill apply the parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

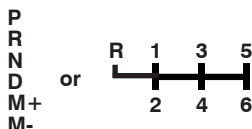

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/50 R17
225/45 R18
255/40 R18
225/40 R19
255/35 R19

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor. Note - runflat tyres will have a limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
57.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

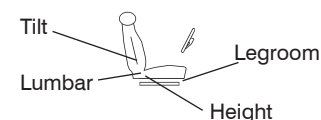

2 door: fold seats to access rear.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with optional keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, the system auto arms after 30 seconds if the engine is not started. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with an internal remote release switch.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric glass sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Vehicles feature keyless entry (keep the key in your pocket or bag) - press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply depress the accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed. Or press remote release on driver's door.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover in the boot to access the tools and jack. The vehicle is fitted with run-flat tyres. Once punctured these tyres have limited travel distance and road speeds. Should you need to use the jack: move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Once finished - lower the vehicle.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Some vehicles are fitted with a remote tyre pressure monitor.

225/55 R17
245/45 R18
275/35 R19
245/40 R19

Note - runflat tyres have a limited travel distance and road speed when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch adjacent to the hazard warning switch to lock the doors from the inside. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Press button in driver's door or on remote control key to open the boot remotely.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide glass sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (N or P for automatic) and parking brake is on. Place ignition key into key slot and turn on. Or for keyless entry - press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply release the foot brake (for auto) or depress the clutch (for manual) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Remote release on driver's door. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover in the boot to access the tools and jack. The vehicle may be fitted with run-flat tyres. Once punctured these tyres have limited travel distance and road speeds. Should you need to use the jack: move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Once finished - lower the vehicle.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-BMW-05 / 30-09-2017

BMW 5 SERIES

 
5 SEATS
5 DOOR ESTATE / 4 DOOR SALOON

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

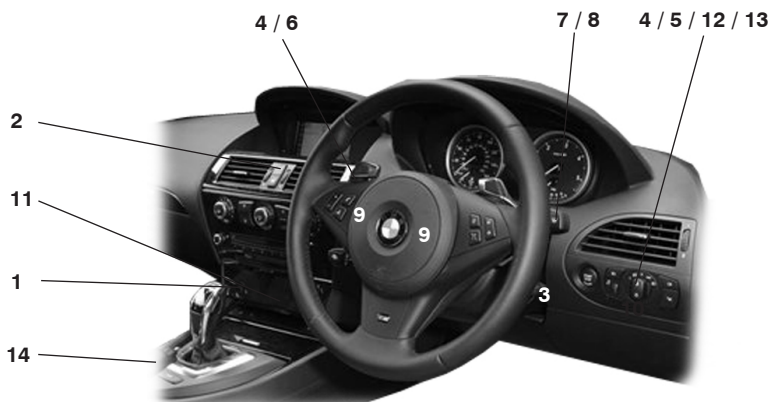

P
R
N
D
M+
M-

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

245/45 R18
275/40 R18
245/40 R19
275/35 R19
275/30 R19

Some vehicles are fitted with a remote tyre pressure monitor.

Note - runflat tyres have a limited travel distance and road speed when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with keyless entry. Press the central locking switch adjacent to the hazard warning switch to lock the doors from the inside. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Internal remote release switch.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric operated via control switches on the driver's door.
- Operating the sunroof or convertible roof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear. Or convertible roof operated by centre console switchgear - only open or close the roof when the vehicle is at a standstill or moving at less than 25 mph.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key into key slot. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. NOTE: vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary - simply depress the brake to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Remote release. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover in the boot to access the tools and jack. The vehicle is fitted with run-flat tyres. Once punctured these tyres have limited travel distance and road speeds. Should you need to use the jack: move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Once finished - lower the vehicle.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

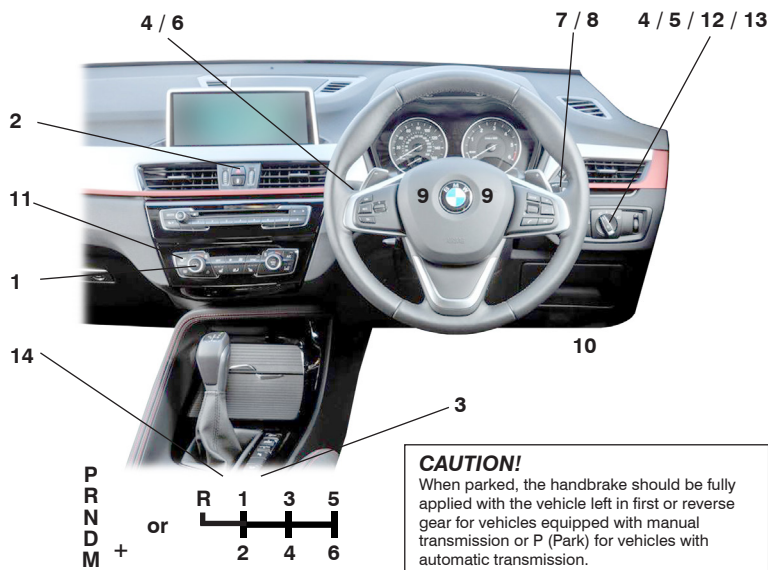

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/55 R17
225/50 R18

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor. Note - runflat tyres will have a limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

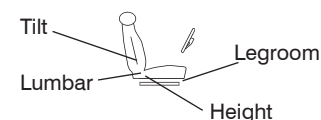

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with optional keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock above 10mph travel speed. Doors auto lock on driving away and when walking away from a parked vehicle.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Internal remote release switch, some models may also feature intelligent gesture opening of the tailgate - operated by foot motion below rear bumper to enable auto opening and closing
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric slide panoramic glass sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Keep the key in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply release the foot brake (for auto) or depress the clutch (for manual) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed. Or press remote release on the driver's door.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the **Europcar Tyre Helpline 0800 0280 999**.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Some models may also feature steering wheel mounted paddle shift levers used to change up or down gears and selectable 4x4 drive modes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-BMW-07 / 02-02-2020

BMW X1 SERIES

 
5 SEATS
5 DOOR SUV / 2X4 OR 4X4 MODELS

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

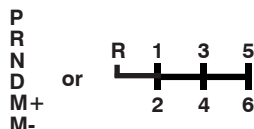

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/60 R18
245/50 R19
245/45 R20
275/40 R20
245/40 R21
275/35 R21

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor. Note - runflat tyres will have a limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

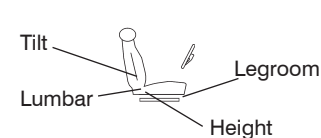

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking with optional keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock above 10mph travel speed.

Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started. Visible VIN.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Internal remote release switch, some models may also feature intelligent gesture opening of the tailgate - operated by foot motion below rear bumper to enable auto open/close.

Adjusting door mirrors?

Electric adjustment operated by the control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: Electric slide panoramic sunroof operated by roof mounted switchgear.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key into key slot (or for keyless models - keep the key in your pocket or bag). Press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply release the foot brake (for auto) or depress the clutch (for manual) to instantly restart the engine.

Opening fuel filler cap?

Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed. Or press remote release on the driver's door.

Releasing the bonnet?

Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999. Lift the carpet cover in the boot to access the tools and jack. The vehicle may be fitted with run-flat tyres. Once punctured these tyres have limited travel distance and road speeds. Should you need to use the jack: move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Once finished - lower the vehicle.

How to drive an automatic?

Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

265/50 R19
275/45 R20
305/40 R20
275/40 R21
315/35 R21

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor. Note - runflat tyres will have a limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
83.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with optional keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock above 10mph travel speed. Doors auto lock on driving away and when walking away from a parked vehicle.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Internal remote release switch, some models may also feature intelligent gesture opening of the tailgate - operated by foot motion below rear bumper to enable auto opening and closing
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric slide panoramic glass sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Keep the key in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply release the foot brake (for auto) or depress the clutch (for manual) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed. Or press remote release on the driver's door.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the **Europcar Tyre Helpline 0800 0280 999**.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Some models may also feature steering wheel mounted paddle shift levers used to change up or down gears and selectable 4x4 drive modes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-BMW-09 / 02-02-2020

BMW X5 SERIES

5 SEATS
5 DOOR SUV / 2X4 OR 4X4 MODELS

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

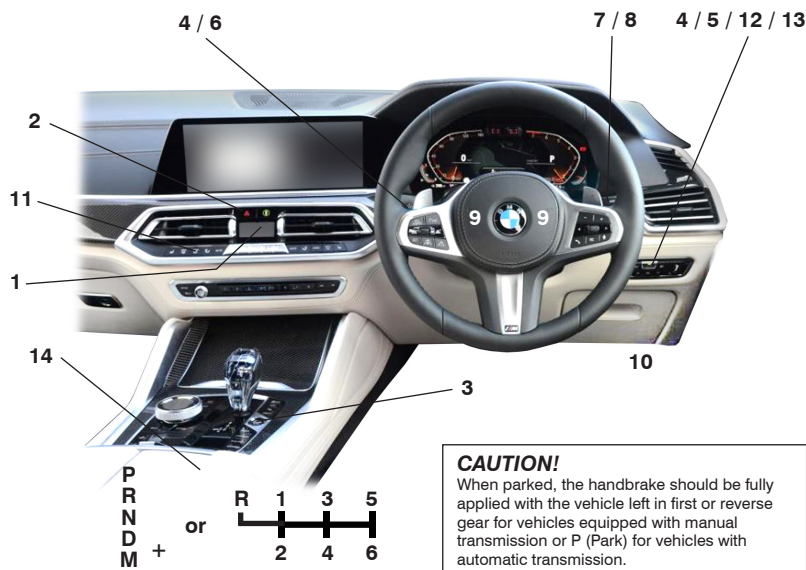

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

265/50 R19	315/35 R21
275/45 R20	275/35 R22
305/40 R20	315/30 R22
275/40 R21	

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor. Note - runflat tyres will have a limited travel distance and road speed rating when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
85.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking with optional keyless entry. Press the central locking switch located adjacent to the hazard light switch to lock the doors from the inside. Doors auto lock above 10mph travel speed. Doors auto lock on driving away and when walking away from a parked vehicle.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch, and the system auto arms after 30 seconds if the engine is not started. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Internal remote release switch, some models may also feature intelligent gesture opening of the tailgate - operated by foot motion below rear bumper to enable auto opening and closing
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: Electric slide panoramic glass sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Keep the key in your pocket or bag. Press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicles are fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply release the foot brake (for auto) or depress the clutch (for manual) to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed. Or press remote release on the driver's door.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the **Europcar Tyre Helpline 0800 0280 999**.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Some models may also feature steering wheel mounted paddle shift levers used to change up or down gears and selectable 4x4 drive modes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-BMW-10 / 02-02-2020

BMW X6 SERIES

5 SEATS
5 DOOR SUV / 2X4 OR 4X4 MODELS