

INDEX - VICs (VEHICLE INSTRUCTION CARD)

AUDI VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	A1	5 seats / 5 door hatchback
4	A3	5 seats / 3-5 door hatchback / 5 door estate
5	A3 sportback	5 seats / 5 door hatchback
6	A4	5 seats / 4 door Saloon / 5 door estate
7	A5	5 seats / 3 door coupe
8	A6	5 seats / 4 door Saloon / 5 door estate
9	Q2	5 seats / 5 door 4X4 SUV
10	Q3	5 seats / 5 door 4X4 SUV
11	Q5	5 seats / 5 door 4X4 SUV
12	Q7	5 seats / 5 door 4X4 SUV

 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

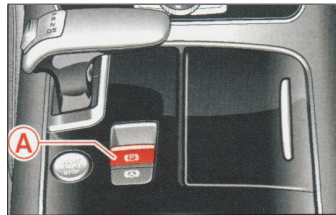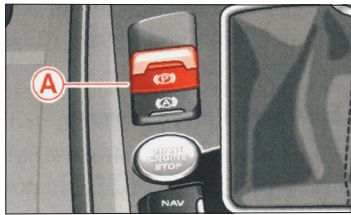

LOCATION

The diagrams indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

 
 
The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system.* To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot. Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction. On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

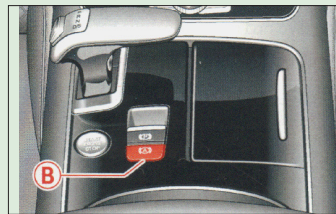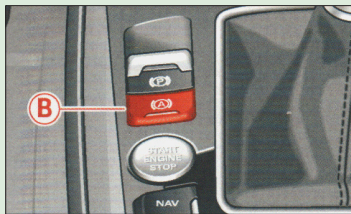

AUDI HOLD ASSIST

The diagrams above indicate example locations of the Audi hold assist switch (B) which is labelled with the universal icon symbol: **(A)**

ACTIVATION

Press the switch labelled B to apply the Audi hold assist function. The associated warning lamps on both the switch and dashboard instrument panel will light up to confirm its activation. **NOTE:** the driver's door must be closed, the driver's seat belt fastened and the engine must be running.

DEACTIVATION

Press the switch (B) to deactivate Audi hold assist. The associated warning lamps on the switch and dashboard instrument panel will go out confirming its deactivation. If you press the switch (B) while the vehicle is being held by the Audi hold assist function, the electronic parking brake will automatically take over. The electronic parking brake will not take over if the foot brake is simultaneously applied.

Audi hold assist is deactivated if the driver's door is opened, the driver's seat belt is unfastened or the engine is switched off. If this happens the parking brake will be automatically applied to ensure the vehicle is stopped safely. Audi hold assist helps the driver keep the vehicle stationary while the engine is running e.g. on steep gradients or at traffic lights. This avoids you having to use the foot brake to prevent the vehicle rolling away. A green illuminated parking brake icon indicates that the system is active (after an extended period the electronic parking brake function (red icon) will activate). As soon as you drive off in the normal way the brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
30	60	70	70

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

AUDI VEHICLES

Vehicle specifications are subject to change.
This vehicle does not include any manufacturer handbooks or manuals.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Electronic Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Handbrake

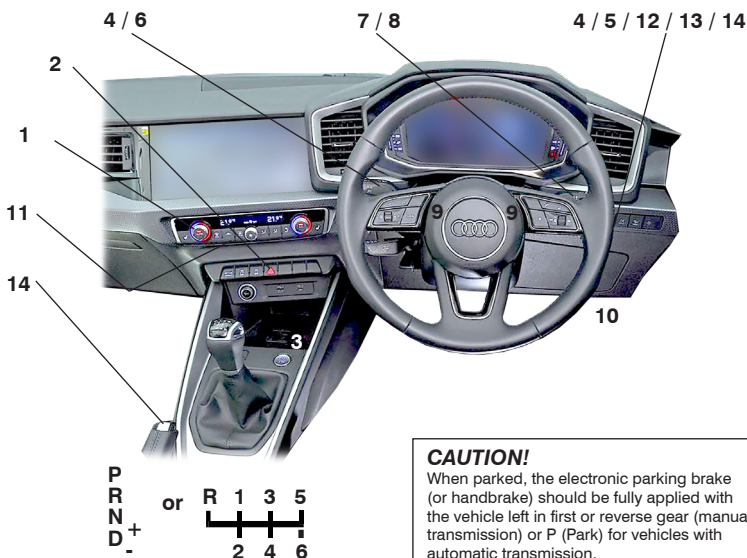

CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

185/65 R15

195/55 R16

215/45 R17

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
40.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

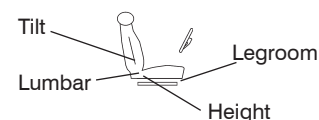

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press central locking switch to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.

Anti-theft system?

Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.

Opening boot/tailgate?

Centrally locked. Use the remote control to unlock / open.

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted. Electric tilt / slide operated by roof mounted switchgear.

Using child door locks?

Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or lock them by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Insert key into starter switch. Push the key to start/stop the engine. (For keyless entry models - ensure the key is carried in your pocket or bag and press the button to start or stop the engine). Vehicles are fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving and gear is in neutral and foot pedals are not depressed - depress the foot pedals to instantly restart the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open it and twist off the fuel cap anticlockwise to release it.

Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tyre, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

Driving an automatic?

To change gears using the s-tronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the s-tronic gear selector (some vehicles may also feature steering wheel mounted paddle shift gear selectors used to change up or down gears). Whenever the vehicle is at a standstill use the parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

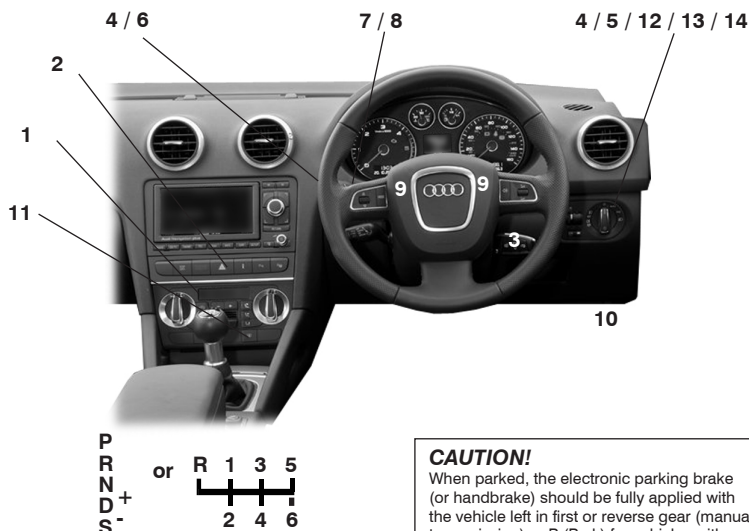

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

195/65 R15

205/55 R16

225/40 R18

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

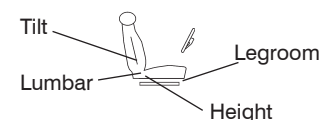

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release (not fitted on estate).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front (and rear) operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine (for vehicles fitted with an engine start/stop button fitted on the centre console - ensure the key is carried by the driver and press the button to start or stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the temporary spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-AUD-02 / 30-03-2011

AUDI A3

5 SEATS
3-5 DOOR HATCH / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Rotary Control Dial



TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

205/55 R16

205/50 R17

225/40 R18

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

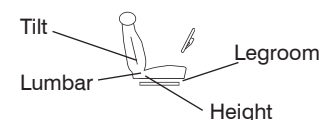

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser activates after the vehicle is locked.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release (not fitted on estate).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front (and rear) operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use driver's door child lock switch. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine (for vehicles fitted with an engine start/stop button fitted on the centre console - ensure the key is carried by the driver and press the button to start or stop the engine). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. **NOTE:** vehicle is fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply depress the foot pedal to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under a flap on the rear offside. To open: lightly press the edge of the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the **Europcar Tyre Helpline 0800 0280 999**.
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the paddle shift levers on the steering column to change up and down gears (if fitted) or the **D+** or **D-** positions to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the parking brake.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

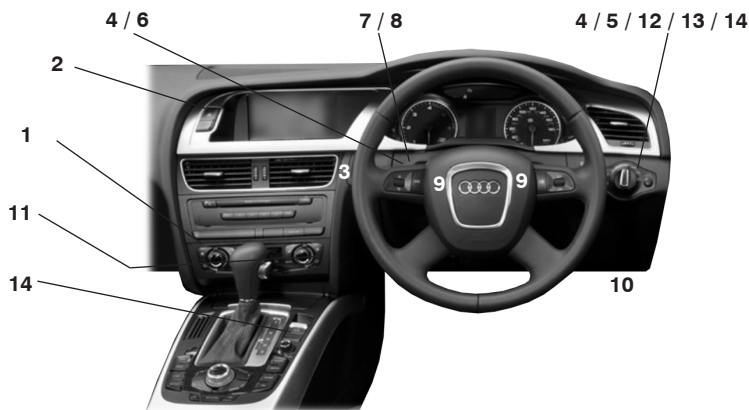

CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

225/55 R16
205/60 R16
225/50 R17
245/40 R18
255/35 R19

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
65.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.

Anti-theft system?

Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.

Opening boot/tailgate?

Centrally locked. Use the remote control to unlock / open. Remote release (not fitted on estate, auto opens on saloon).

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted. Electric tilt / slide operated by roof mounted switchgear.

Using child door locks?

Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or lock them by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in key slot - push the key to start/stop the engine. (For vehicles fitted with an engine start/stop button fitted on the centre console - ensure the key is carried by the driver and press the button to start or stop the engine). Some vehicles may be fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving - depress the clutch to restart the engine if this is fitted. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.

Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Lift the recess cover inside the boot to access the temporary spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

Driving an automatic?

To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill use the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-AUD-04 / 30-03-2011

AUDI A4

5 SEATS

4 DOOR SALOON / 5 DOOR ESTATE

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

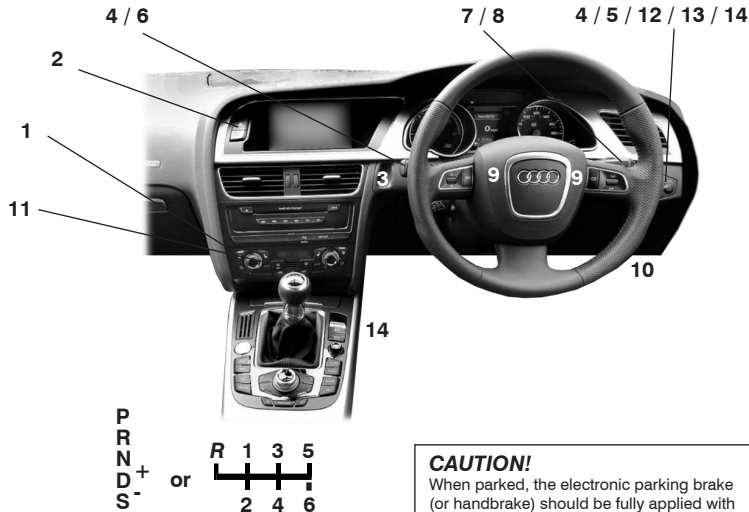

CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...
The legal minimum tread depth is 1.6 mm

225/45 R17
225/50 R17
245/40 R18
255/35 R19

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
65.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Fold seat to access rear seats.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release (auto opening).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in key slot in centre console - push the key to start/stop the engine. (For vehicles fitted with an engine start/stop button fitted on the centre console - ensure the key is carried by the driver and press the button to start or stop the engine). Some vehicles may be fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving - depress the clutch to restart the engine if this is fitted. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the temporary spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-AUD-05 / 30-03-2011

AUDI A5

**5 SEATS
3 DOOR COUPE**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

225/55 R17

245/45 R18

255/40 R19

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
65.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

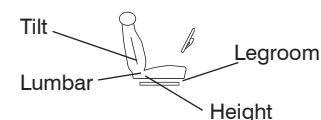

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.

Anti-theft system?

Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.

Opening boot/tailgate?

Centrally locked. Use the remote control to unlock / open. Remote release (not fitted on estate, auto opens on saloon).

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted. Electric tilt / slide operated by roof mounted switchgear.

Using child door locks?

Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or lock them by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in key slot - push the key to start/stop the engine. (For vehicles fitted with an engine start/stop button fitted on the centre console - ensure the key is carried by the driver and press the button to start or stop the engine). Some vehicles may be fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving - depress the clutch to restart the engine if this is fitted. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.

Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Lift the recess cover inside the boot to access the temporary spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

Driving an automatic?

To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill use the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-AUD-06 / 18-07-2011

AUDI A6

5 SEATS

4 DOOR SALOON / 5 DOOR ESTATE

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
(Engine start/stop)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

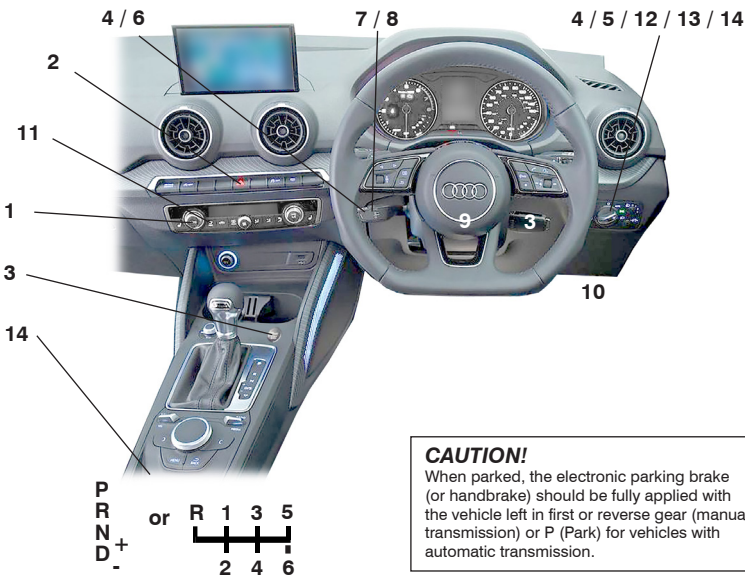

CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

205/60 R16
235/55 R17
235/50 R18
255/40 R19

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from vehicle.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release (fitted to some models).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use driver's door child lock switch. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in starter key slot next to the steering wheel. Press the engine start/stop button to start or stop the engine. (Or some models may use an intelligent key, just keep this key in your pocket or bag, and press the engine start/stop button to start or stop the engine). Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles are fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving and gear is in neutral and foot pedals are not depressed - depress the clutch (or brake / accelerator on auto) to instantly restart the engine.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** The tools and jack are stored in compartments within the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the electronic parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

235/55 R17
235/50 R18
255/40 R19
255/35 R20

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
64.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

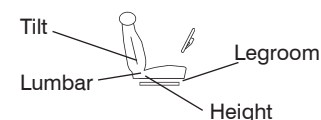

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from vehicle.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release (fitted to some models).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use driver's door child lock switch. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in starter key slot next to the steering wheel. Twist the key to start/stop the engine. (Or some models may use an intelligent key, just keep this key in your pocket or bag, and press the engine start/stop button to start or stop the engine). Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles are fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving and gear is in neutral and foot pedals are not depressed - depress the clutch (or brake / accelerator on auto) to instantly restart the engine.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The tools and jack are stored in compartments within the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-AUD-08 / 30-03-2011

AUDI Q3

**5 SEATS
5 DOOR 4X4 SUV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

235/65 R17

235/60 R18

235/55 R19

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
75.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

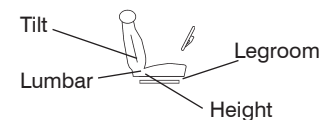

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release (fitted to some models).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in starter key slot to the left of the steering wheel. Press the key in to start/stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The tools and jack are stored in compartments within the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-AUD-09 / 30-03-2011

AUDI Q5

**5 SEATS
5 DOOR 4X4 SUV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

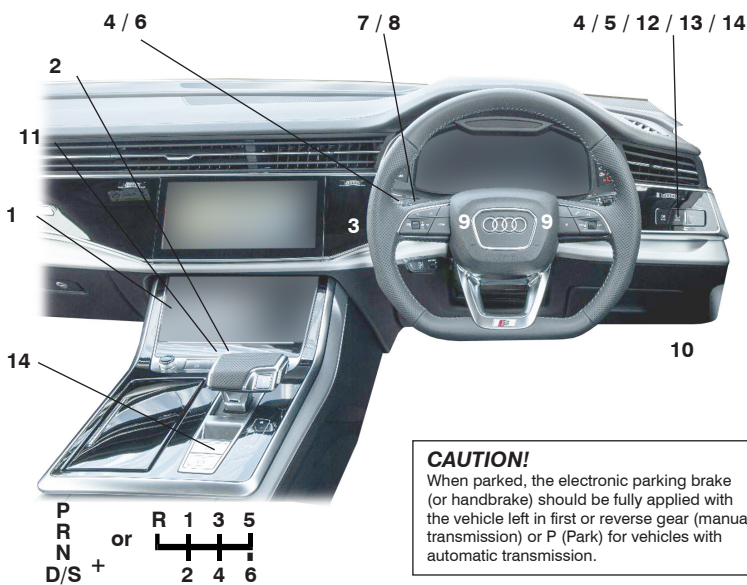

CAUTION!

When parked, the electronic parking brake (or handbrake) should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly...

The legal minimum tread depth is 1.6 mm

255/55 R19
285/45 R20
285/40 R21
285/35 R22

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
75.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

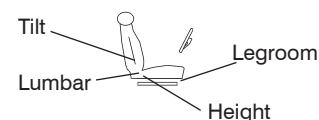

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.

Anti-theft system?

Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.

Opening boot/tailgate?

Centrally locked. Use the remote control to unlock / open. Remote release (fitted to some models).

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted. Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.

Using child door locks?

Located on the edge of the rear doors, use driver's door child lock switch. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Retain the vehicle key in your pocket or bag. Press the engine start/stop button to start/stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. NOTE: vehicle is fitted with auto start/stop technology whereby the engine shuts off automatically when stationary, gears are in neutral and foot pedals are not depressed - simply depress the foot pedal to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.

Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.

Driving an automatic?

To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **S+** or **S-** to manually select gears using the s-tronic gear selector (some vehicles may also feature steering wheel mounted paddle shift gear selectors used to change up or down gears). Whenever the vehicle is at a standstill use the parking brake.