

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## CHRYSLER VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Ypsilon</b>	5 seats / 5 door hatchback
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.





**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
			

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

 

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

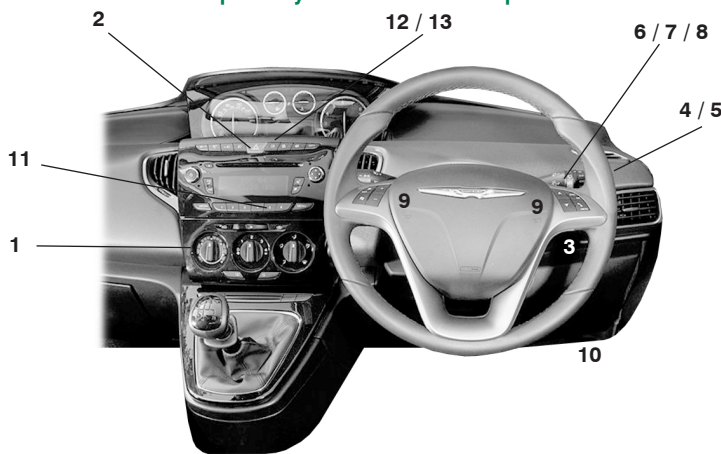

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
 Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

R15  
 R16

Some vehicles may be fitted with an automatic tyre pressure warning system. A temporary tyre repair and inflation kit is supplied in lieu of a spacesaver spare wheel. Note: this repaired tyre (or spacesaver spare wheel) can only be used for limited distances and reduced driving speeds.

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 40.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Depress the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion. Some models feature keyless entry.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models may be fitted with a remote control security alarm system and keyless entry system.
- Opening the boot?** Centrally locked. Use remote tailgate release switch to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
- Operating the sunroof?** If fitted. Electric panoramic sunroof with presets, controlled by roof mounted switchgear.
- Using child door locks?** Doors auto lock on vehicle motion. Can be centrally locked at any time by using the centre console central locking switch.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch, depress the clutch before attempting to start the car. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static - depress the clutch to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote release. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the tools, jack and tyre repair kit. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CHR-02 / 08-04-2012

# CHRYSLER YPSILON

**5 SEATS**  
**5 DOOR HATCH**