

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## CITROEN VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>C1</b>	4 seats / 3-5 door hatch
4	<b>C3</b>	5 seats / 5 door hatchback
5	<b>C3 Aircross</b>	5 seats / 5 door hatchback
6	<b>DS3</b>	5 seats / 3 door hatchback
7	<b>C4 Cactus</b>	5 seats / 5 door SUV
8	<b>C4 Spacetourer</b>	5 seats / 5 door MPV
9	<b>C5 Aircross</b>	5 seats / 5 door SUV
10	<b>DS3 Crossback</b>	5 seats / 5 door SUV
11	<b>DS7 Crossback</b>	5 seats / 5 door SUV
12	<b>Grand C4 Spacetourer</b>	7 seats / 5 door MPV
13	<b>Berlingo M</b>	5 seats / 5 door MPV
14	<b>Space Tourer</b>	7 seats / 5 door MPV
15	<b>Berlingo Van</b>	2 seats / small panel van
16	<b>Relay Van</b>	3 seats / panel van
17	<b>Dispatch Van</b>	3 seats / panel van

 
 
# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

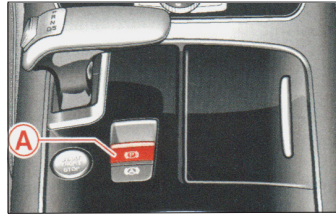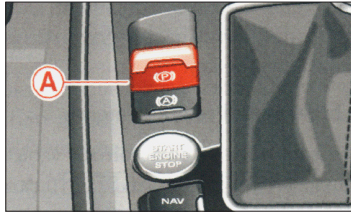

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.


Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

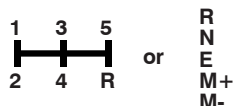

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

165/65 R14  
165/60 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicle is fitted with tyre pressure sensors.

Temporary spare wheels must only be used for limited distance and at reduced speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
35.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Models are fitted with key / remote control operated central locking. Depress the door locking switch integrated into door lever. Doors also auto lock when vehicle is in motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the boot?</b>	Models are centrally locked. Use the key or remote control to unlock / open.
<b>Adjusting door mirrors?</b>	Internal electric adjustment via control pad on bottom right of dashboard (or manual control on low-spec models).
<b>Opening the windows?</b>	Electric front operated via control switches on the driver's door. Hinged rear windows.
<b>Operating the sunroof?</b>	If fitted - retractable electric roof operated by roof mounted switchgear.
<b>Using child door locks?</b>	Located on the edge of the rear doors, twist the button to activate it. Check from inside that the doors are securely locked.
<b>Starting the engine?</b>	Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. (For keyless models, keep the key in your pocket or handbag, depress clutch and press engine start/stop button to start the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Centrally locked. Located on rear nearside. Lightly press the rear edge of fuel flap to open it. Twist off the cap anticlockwise.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seat is divided into 50:50 sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
<b>How to change a tyre?</b>	Lift the recess cover inside the boot to access the spare tyre. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>How to drive an automatic?</b>	To change gears press the foot operated brake pedal and move the lever forwards or backwards through the gate. Select <b>N</b> for neutral, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>E</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use <b>M+</b> or <b>M-</b> to manually select gears only. Whenever the vehicle is at a standstill fully apply the handbrake.


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch  
(push button OR  
ignition key starter)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

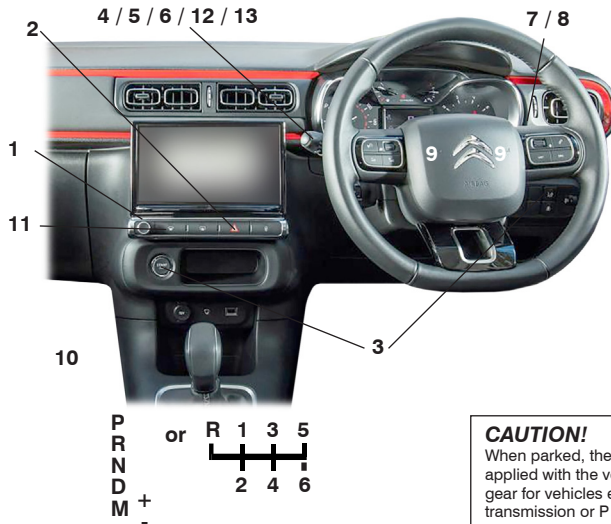

## IMPORTANT

You must check the oil with the dipstick every 1000 miles ! When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

R15  
R16  
R17

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap.

Spacesaver spare - in all cases these should only be used for limited distances and at a reduced speed.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
45.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

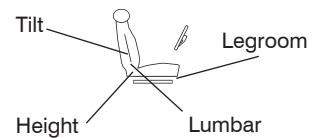

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion. Press the central locking button to lock all doors from inside.

### Anti-theft system?

Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system. Visible VIN.

### Opening the boot?

Centrally locked. Use the remote to unlock / open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear operated via control buttons on the driver's door. Or all manually opened.

### Operating the sunroof?

If fitted: Electric tilt/slide panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

Press the central locking button to lock all doors from inside. Check to ensure doors are locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Or for keyless entry, keep the key in your pocket or handbag, and press the engine start/stop button on the centre console to start and stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.

### Opening fuel filler cap?

Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap to close.

### Releasing the bonnet?

Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seats can be folded separately via a 60:40 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.

### How to change a tyre?

This vehicle may not be supplied with a conventional spare wheel and tyre. Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### How to drive an automatic?

The shift lever can only be disengaged from P when the brake pedal is pressed. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal D usage use the M + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-02 / 11-02-2018

# CITROËN C3

**5 SEATS  
5 DOOR HATCHBACK**



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch  
(push button OR  
ignition key starter)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Grip control dial

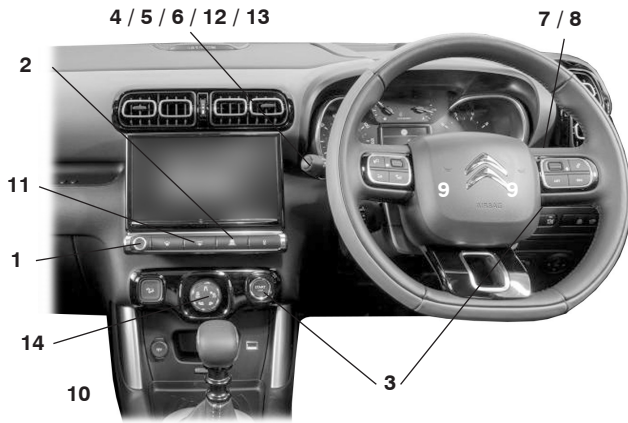

P  
R  
N  
D  
M  
+  
-

or

R 1 3 5  
2 4 6

### IMPORTANT

You must check the oil with the dipstick every 1000 miles !  
When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

R16  
R17

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap.

Spacesaver spare - in all cases these should only be used for limited distances and at a reduced speed.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
45 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

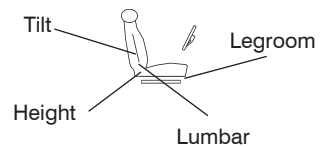

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion. Press the central locking button to lock all doors from inside.

### Anti-theft system?

Passive arming of electronic transponder engine immobiliser. Models are fitted with an alarm system. Visible VIN.

### Opening the boot?

Centrally locked. Use the remote to unlock / open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear operated via control buttons on the driver's door. Or electric front and manual opening rear windows.

### Operating the sunroof?

If fitted: Electric slide glass panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

Press the central locking button to lock all doors from inside. Check to ensure doors are locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Or for keyless entry, keep the key in your pocket or handbag, and press the engine start/stop button on the centre console to start and stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Use the central grip control dial to select various driving modes for varying road conditions.

### Opening fuel filler cap?

Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap to close.

### Releasing the bonnet?

Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seats can be folded and slid separately via a 60:40 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. (The front passenger seat can also be flat-folded to accommodate loads).

### How to change a tyre?

This vehicle may not be supplied with a spacesaver spare wheel and tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

### How to drive an automatic?

The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M** + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-03 / 13-04-2018

# CITROËN C3 AIRCROSS

**5 SEATS  
5 DOOR SUV**

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch  
(push button OR  
ignition key starter)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level for approximately 10 seconds.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

R16  
R17  
R18

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 litres (petrol)/ 48 litres (diesel)

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

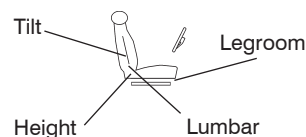

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central secure deadlocking. Doors auto lock when the vehicle is in motion. Press the central locking button on centre console to lock all doors from inside.

### Anti-theft system?

Passive arming of electronic transponder engine immobiliser. Models are fitted with an alarm system. Visible VIN.

### Opening the boot?

Centrally locked. Use the remote to unlock / open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear operated via control buttons on the driver's door. Or electric front manually opened rear windows.

### Operating the sunroof?

If fitted: Electric slide panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

Press the central locking button to lock all doors from inside. Check to ensure doors are locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Or for keyless entry, keep the key in your pocket or handbag, and press the engine start/stop button to start and stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.

### Opening fuel filler cap?

Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap to close.

### Releasing the bonnet?

Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seats can be folded separately via a 60:40 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.

### How to change a tyre?

This vehicle may not be supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

### How to drive an automatic?

The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M** + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch / Engine start / stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

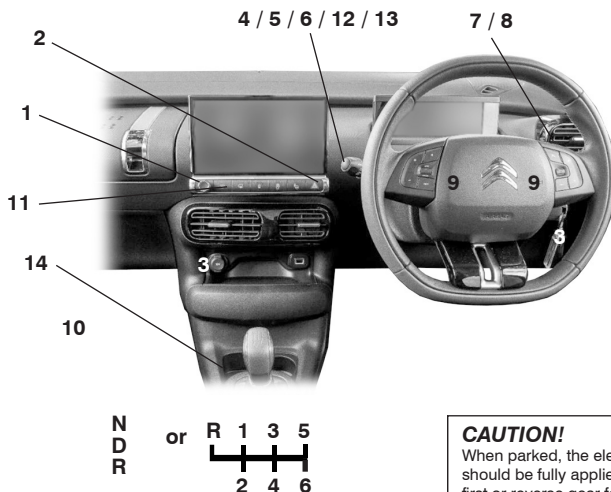

## IMPORTANT

You must check the oil with the dipstick every 1000 miles ! When the ignition is turned on the service indicator is shown followed by the engine oil level.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

195/65 R15  
205/55 R16  
295/50 R17

Note that driving speed ratings and travel distance are limited when using spacesaver spare wheels.

Vehicles are also fitted with a automatic tyre pressure monitor.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

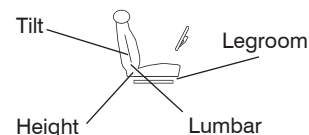

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system activated by the remote.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N if automatic) and electronic parking brake is on. Place ignition key in starter switch. Turn key to start or stop the engine. Some models feature an engine start/stop button - just push the button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop - when the engine automatically turns off when stationary, gears are in neutral and pedals are not depressed - simply depress a foot pedal to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Remote release may be fitted to some models. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded and feature a 60:40 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** This vehicle is not supplied with a conventional spare wheel and tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Press the brake before selecting gear. Select **N** for neutral, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-05 / 14-04-2019

# CITROËN C4 CACTUS

**5 SEATS  
5 DOOR SUV**

 


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

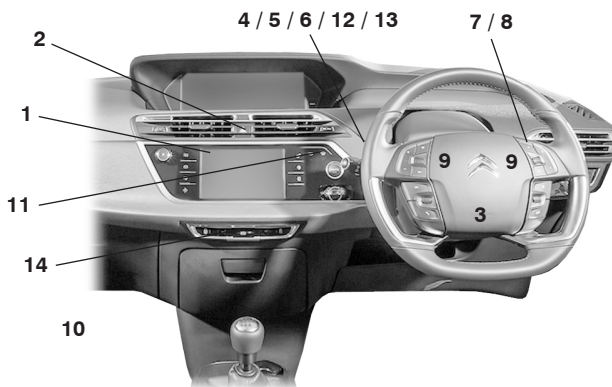

## IMPORTANT

You must check the oil with the dipstick every 1000 miles !  
When the ignition is turned on the service indicator is shown followed by the engine oil level.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.


205/60 R16  
205/55 R17  
225/45 R18

Note that driving speed and travel distance are limited when using spacesaver spare wheels.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

Vehicle features a steering wheel mounted gear shift lever - located on the upper right hand side of the steering wheel

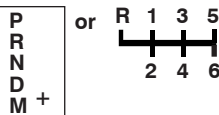

## CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
57 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

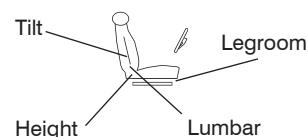

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system activated by the remote.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.  
**Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.  
**Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Place ignition key in starter switch. Press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop - when the engine automatically turns off when stationary, gears are in neutral and pedals are not depressed - simply depress a foot pedal to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Use the remote release on the lower left-hand side of the dashboard. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** This vehicle is not supplied with a conventional spare wheel and tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Vehicle features a gear shift lever located at upper right hand side of the steering wheel - move it up or down to select gears. The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D (A)** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-06 / 14-04-2019

# CITROËN C4 SPACETOURER

**5 SEATS**  
**5 DOOR MPV**



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch  
(push button OR  
ignition key starter)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Paddle Shift Levers

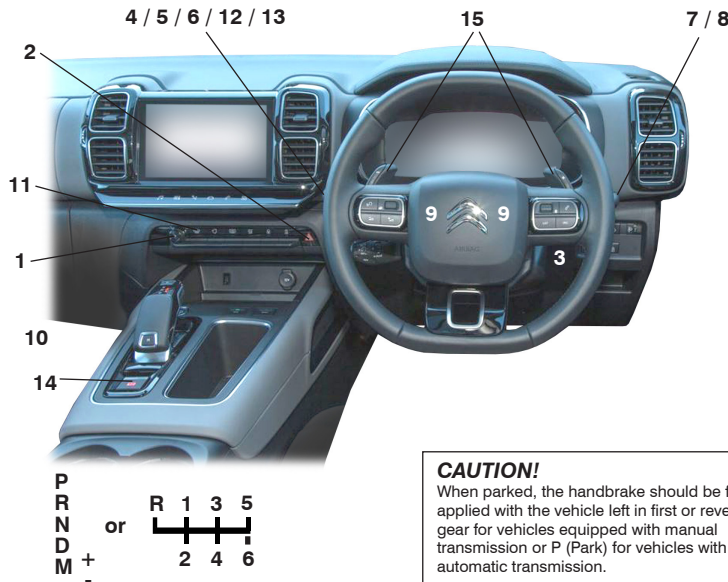

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

R17  
R18  
R19

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap.

Spacesaver spare - in all cases these should only be used for limited distances and at a reduced speed.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
53 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

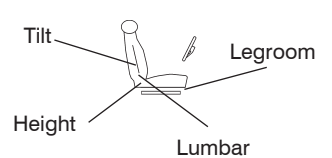

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Doors auto lock when the vehicle is in motion. Press the central locking button to lock all doors from inside.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser and alarm system. Visible VIN. Auto locking.
- Opening the boot?** Centrally locked. Use the remote to unlock / open. The boot floor features two configurable floor heights. Some models also feature hands-free tailgate opening operated by foot gesture control activation of sensors below the rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric slide glass panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Press the central locking button to lock all doors from inside. Use the ignition key to twist the slot on the edge of the rear doors to activate. Check to ensure that the doors are locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Keyless starting, keep the key in your pocket or bag, and press the engine start/stop button to start and stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are depressed (auto: accelerator / manual: clutch). Use the central grip control dial to select various driving modes for varying road conditions.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap to close.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats can be flat folded and slid separately via a 33:33:33 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. (The front passenger seat can also be flat-folded to accommodate loads).
- How to change a tyre?** This vehicle may not be supplied with a spacesaver spare wheel and tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-07 / 03-02-2020

# CITROËN C5 AIRCROSS

**5 SEATS  
5 DOOR SUV**

 
 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch  
(push button OR  
ignition key starter)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

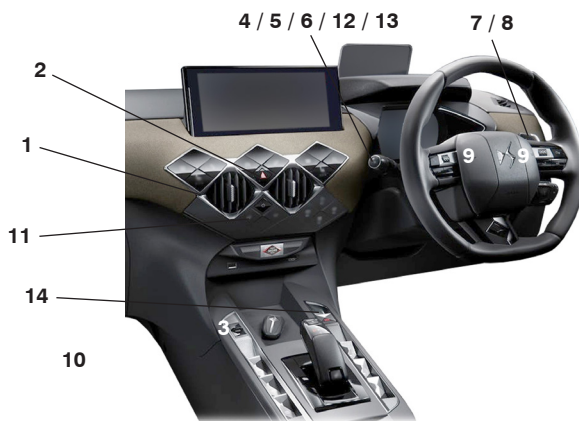

### CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

R17  
R18

Confirm tyre pressures by consulting the data tables on the driver's side B-pillar or inside the fuel flap.

Vehicles use a spacesaver spare wheel.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
44 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

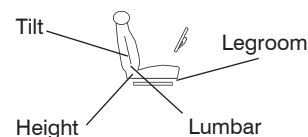

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Doors auto lock when the vehicle is in motion. Press the central locking button on centre console adjacent to gear shift lever to lock all doors from inside.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser. Models are fitted with an alarm system. Visible VIN.
- Opening the boot?** Centrally locked. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons adjacent to gear shift lever.
- Operating the sunroof?** If fitted: Electric slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Press the central locking button to lock all doors from inside. Check to ensure doors are locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Or for keyless entry, keep the key in your pocket or bag, and press the engine start/stop button to start and stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap to close.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats can be folded separately via a 60:40 split. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** This vehicle may not be supplied with a spacesaver spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the **D +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Use the Drive Mode switch to choose a suitable drive mode for specific road conditions. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-08 / 15-02-2019

# CITROËN DS3 CROSSBACK

 
 
**5 SEATS  
5 DOOR SUV**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

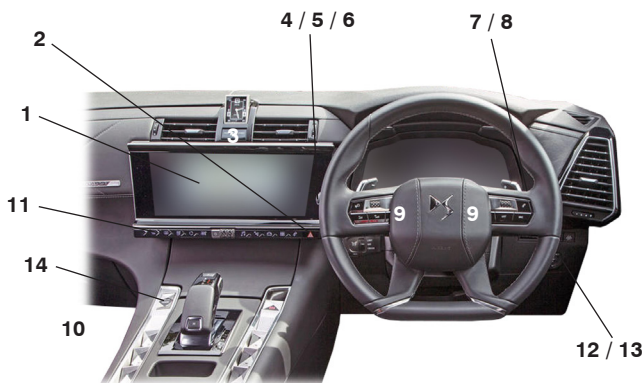

## IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

R18  
R19  
R20

Note that driving speed and travel distance are limited when using spare wheels.

Vehicles are also fitted with a tyre pressure monitor.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
62 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

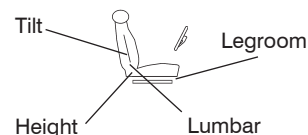

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the centre console central locking switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Models are fitted with an alarm system activated by the remote. Visible VIN plate.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the centre console.
- Operating the sunroof?** If fitted: Electric panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Use the centre console central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Models feature keyless starting, simply keep the key in your pocket or bag. Press the start / stop button on the upper dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop - where the engine automatically turns off when stationary and gear is in neutral and pedals are not depressed - simply depress the foot pedals to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat row feature a 60:40 split and can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** This vehicle is not supplied with a conventional spare wheel and tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Press the brake before selecting gear. Select **N** for neutral, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Use the drive mode switch to select various driving modes. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-09 / 10-01-2019

# CITROËN DS7 CROSSBACK

**5 SEATS**  
**5 DOOR SUV**

 


# VEHICLE INSTRUCTION CARD


**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

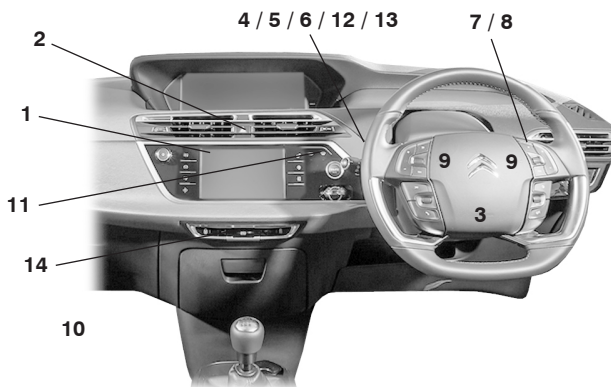

 Vehicle features a steering wheel mounted gear shift lever - located on the upper right hand side of the steering wheel



## IMPORTANT

You must check the oil with the dipstick every 1000 miles !  
When the ignition is turned on the service indicator is shown followed by the engine oil level.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

205/60 R16  
205/55 R17  
225/45 R18

Note that driving speed and travel distance are limited when using spacesaver spare wheels.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
57 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

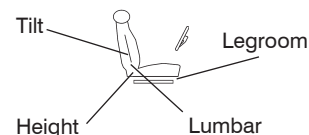

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Some models are fitted with an alarm system activated by the remote.
- Opening the boot?** Centrally locked tailgate. Use the remote to unlock / open.  
**Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.  
**Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Place ignition key in starter switch. Press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop - when the engine automatically turns off when stationary, gears are in neutral and pedals are not depressed - simply depress a foot pedal to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Use the remote release on the lower left-hand side of the dashboard. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use. The rear row of seats feature an underfloor foldaway system.
- How to change a tyre?** This vehicle is not supplied with a conventional spare wheel and tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Vehicle features a gear shift lever located at upper right hand side of the steering wheel - move it up or down to select gears. The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D (A)** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D (A)** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

 


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



## IMPORTANT

You must check the oil with the dipstick every 1000 miles! When the ignition is turned on the service indicator is shown followed by the engine oil level.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

R16  
R17

Note that driving speed and travel distance are limited when using spare wheels.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

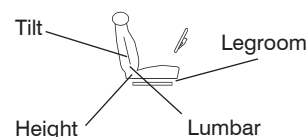

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Models are fitted with an alarm system activated by the remote. Visible VIN plate.
- Opening the boot?** Centrally locked tailgate, use the remote to unlock / open. Features a separately opening (top-hinged) tailgate window.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric glass panoramic sunroof with sun blinds operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch / electric child lock to activate it - a warning LED will light up on the dashboard confirming activation. Check from inside that the doors are securely locked. Features twin sliding rear side doors.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Place ignition key in starter switch, or for keyless models keep the key in your pocket or bag. Press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop - where the engine automatically turns off when stationary and gear is in neutral and pedals are not depressed - simply depress the foot pedals to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows can be flat-folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** This vehicle is not normally supplied with a conventional spare wheel and tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** The shift lever can only be disengaged from P when the brake pedal is pressed. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D (A) where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal D (A) usage use the M + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-11 / 10-01-2019

# CITROËN BERLINGO M

 
 
**7 SEATS**  
**5 DOOR MPV**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine Start / Stop

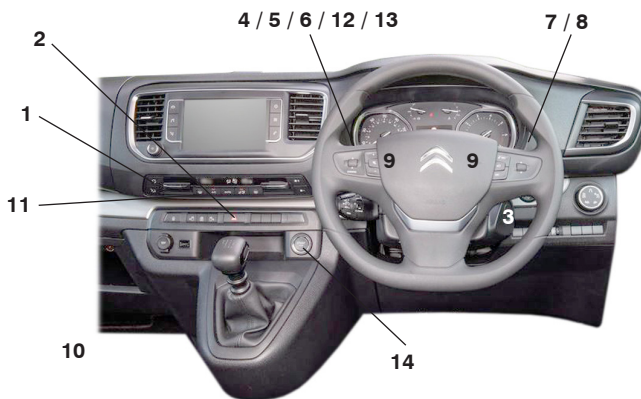

## IMPORTANT

You must check the oil with the dipstick every 1000 miles ! When the ignition is turned on the service indicator is shown followed by the engine oil level.

## TYRE PRESSURES (COLD)

**Check tyre pressure regularly**  
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure chart on the driver's door B-pillar or inside the fuel filler flap.

215/65 R16  
215/60 R17

Note that driving speed and travel distance are limited when using spacesaver spare wheels.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
70 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

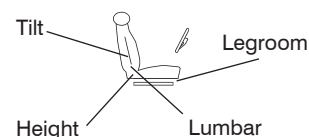

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the dashboard central locking switch to lock the doors from the inside. Door auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an alarm system that is auto activated by central locking.
- Opening the boot?** Centrally locked tailgate with split-opening. Use the remote to unlock / open. Floor features load retaining rings to help secure luggage.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric two-part panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Use the dash mounted central locking switch. Vehicle features twin sliding rear doors. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or (A) P if automatic) and electronic parking brake is on. Place ignition key in starter switch and turn to start/stop OR press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop - when the engine automatically turns off when stationary and gears are in neutral and pedals are not depressed - simply depress the clutch or brake pedals to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** Vehicle is fitted with two rear seat rows with 66:33 split, can be folded or removed separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** This vehicle is not supplied with a conventional spare wheel and tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the + or - selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-CIT-12 / 11-02-2018

# CITROËN SPACE TOURER

 
**8 SEATS**  
**5 DOOR MPV**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Windscreen Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

175/65 R14  
225/70 R15  
215/55 R16

Check the tyre pressure table found on the driver's door B-pillar.

Note that driving speed and travel distance are limited when using spare wheels.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Depress the door locking knobs to lock the doors from the inside. Doors auto lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicle is fitted with an alarm system. Visible VIN plate identification.
- Loading cargo?** Centrally locked. Use the handle to open. Vehicle has a nearside sliding door (and some models may feature an additional offside sliding door) and two rear wide-opening (180°) wing doors. Floor has load lashing rings to help secure loads. Front passenger seat can be folded forward to accommodate long loads or provide a flat surface for paperwork and mobile device usage. (To fold the seats, unlock the seat catches and fold seat flat. To return seats to normal use, fold them upright, check that they are secured in position before sitting on them).
- Adjusting door mirrors?** Fitted with extended width door mirrors for improved visibility. Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Place ignition key in starter switch, or for keyless models keep the key in your pocket or bag. Press the start / stop button on dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop - where the engine automatically turns off when stationary and gear is in neutral and pedals are not depressed - simply depress the foot pedals to instantly restart the engine.
- Opening fuel filler cap?** Centrally locked. Located on the offside rear. Unlock the cap using the ignition key. Twist the fuel-cap off anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right side of the driver's footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle is not normally supplied with a conventional spare wheel and tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**



 
 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

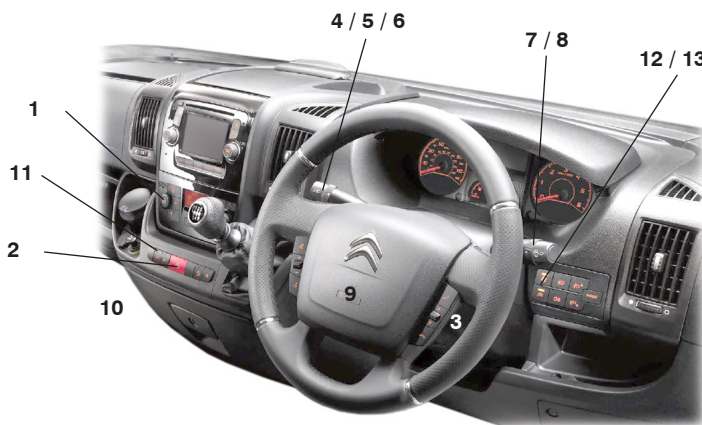

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

215/70 R15  
225/75 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
90 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the load doors?** Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors (180° opening) and one (nearside) or two side panel sliding doors. The loading bay is fitted with cargo retaining rings to help secure loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral, and no foot pedals are depressed - engine auto restarts when foot pedals are depressed).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on mid nearside. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle may not be supplied with a conventional spare wheel and tyre or tyre repair kit. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Wngine start/stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

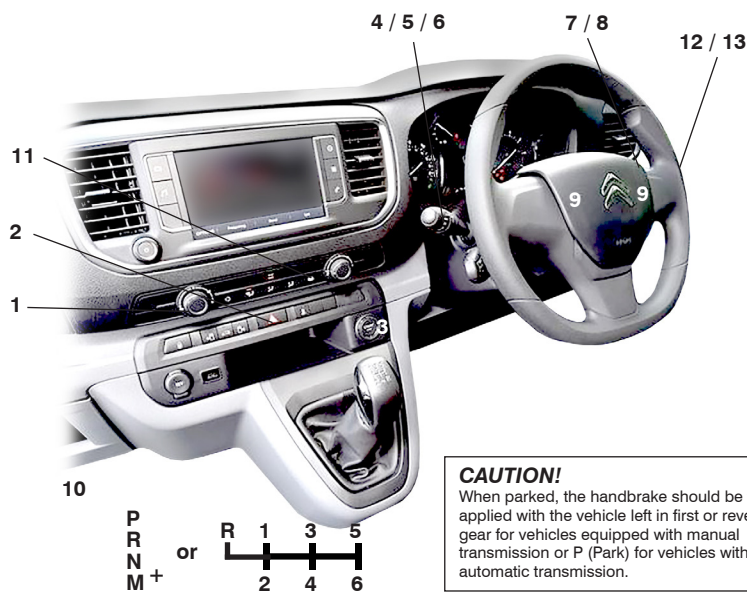

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

215/70 R16  
215/60 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
70 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
<b>Opening the load doors?</b>	Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors (180° opening) and one (nearside) or two side panel sliding doors. The loading bay is fitted with cargo retaining rings to help secure loads, plus a bulkhead with a load-through flap.
<b>Interior seating?</b>	Dual passenger seats, with fold-down writing table in central seat, and a fold-up outer seat to facilitate extra load storage.
<b>Adjusting door mirrors?</b>	Electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch or press the engine start/stop button to start or stop the engine (for models with an intelligent key, just keep the key in your pocket or bag and use the engine start/stop button). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral, and no foot pedals are depressed - engine auto restarts when foot pedals are depressed.
<b>Opening fuel filler cap?</b>	Models have a centrally locked fuel cap located under a flap on mid nearside. Press the edge of the flap to open it, and twist off the cap anticlockwise.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
<b>How to change a tyre?</b>	<b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b> This vehicle may not be supplied with a conventional spare wheel and tyre or tyre repair kit. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.