

INDEX - VICs (VEHICLE INSTRUCTION CARD)

FIAT VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	500	4 seats / 3 door hatchback
4	Ducato van 2.3 L3 H2	3 seats / panel van
5	500L	5 seats / 5 door small MPV
6	Panda	5 seats / 5 door hatchback
7	Scudo Panorama	5 or 8 seats / 5 door MPV
8	500L MPV	7 seats / 5 door MPV
9	Doblo	5-7 seats / 5 door MPV
10	500X	5 seats / 5 door SUV (2x4 or 4x4)
11	Ducato van 2.3 3450WB F1	3 seats / panel van
12	Tipo	5 seats / 5 door hatchback
13		
14		
15		
16		
17		
18		
19		
20		


 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

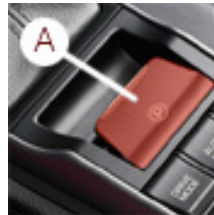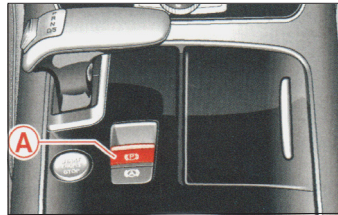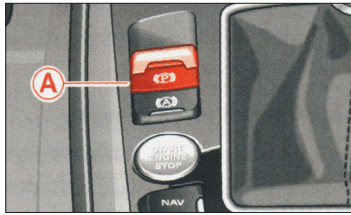

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

 
 
Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

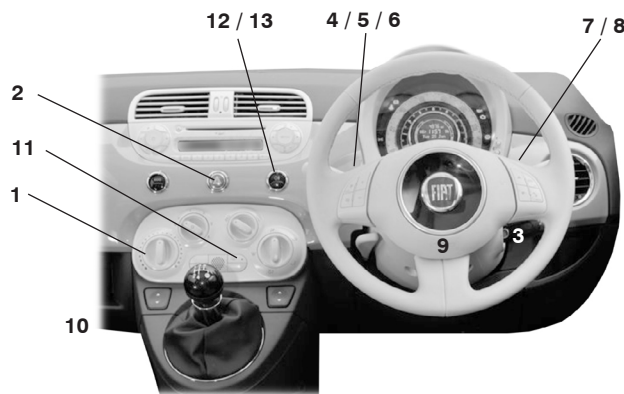

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

175/65 R14
185/55 R15

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
35.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Fold front seats to access rear.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


Locking the doors?	Key / remote control operated central dead locking. Depress the door central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
Opening the boot/ tailgate?	Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it.
Adjusting door mirrors?	Internal electric adjustment via a control pad on the driver's door.
Opening the windows?	Electric front operated via control buttons on adjacent to gear shift lever. Manually operated rear.
Operating the sunroof?	If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - auto restart on depression of the clutch.
Opening fuel filler cap?	Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
Folding the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance. Lift the carpet cover over the recess inside the boot to access spacesaver spare wheel, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


CONTROLS

 - 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

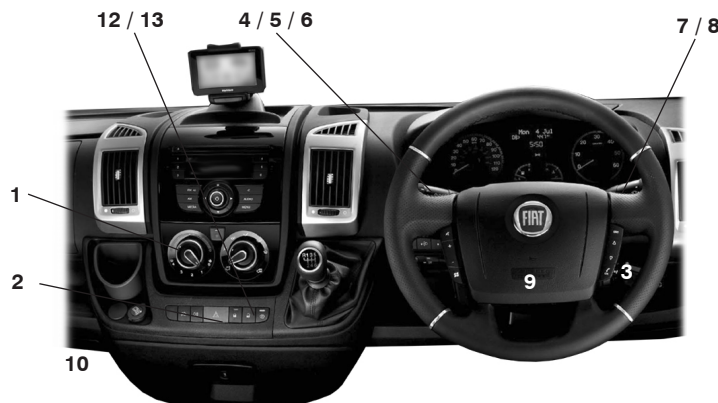

DIMENSIONS

Fuel Tank Capacity litres	70
Vehicle Length m	5.98
Vehicle Width m	2.05
Vehicle Height m	2.52
Cargo volume cu.m	13
Cargo Length m	3.7
Cargo Width m	1.87
Cargo Height m	1.93
Vehicle Weight (unladen) kg	1975
Payload Weight kg	1325
Maximum Weight kg	3300

 

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


Locking the doors?	Key / remote control operated central dead locking. Depress the central locking switch on the centre console to lock the doors from the inside.
Anti-theft system?	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Loading cargo?	Use the handle to open doors. Vehicle is fitted with one offside or two side sliding doors. Floor is fitted with fixed load lashing rings for securing loads. Twin rear doors can open up to 90, 180 or 270 degrees wide.
Adjusting door mirrors?	Electric adjustment operated by the control pad on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door.
Starting the engine?	Ensure gear selector is in neutral (or N) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles may be fitted with automatic transmission (use A for fully automatic, and select M- or M+ to manually select gears). Some vehicles may also be fitted with auto start-stop engines, whereby the engine shuts off when the gear selector is in neutral and the vehicle is at a standstill. To restart just depress the clutch.
Opening fuel filler cap?	Located on mid offside of vehicle. Centrally locked (or use key to unlock). Twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located in the passenger footwell. Unhook catch under bonnet.
How to change a tyre?	NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance. The tools and jack are stored under the driver's seat. The standard spare wheel is found slung underside the vehicle, secured by a retaining bolt. Use the tools to undo the bolt, and lower the wheel to the ground. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

 - 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
205/50 R17

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
36.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


Locking the doors?	Key / remote control operated central dead locking. Depress the door central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
Opening the boot/ tailgate?	Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it. The boot floor level can be set at various heights to accommodate storage.
Adjusting door mirrors?	Internal electric adjustment via a control pad on the upper part of driver's door.
Opening the windows?	All electric operated via control buttons on driver's door. Or manually operated rear.
Operating the sunroof?	If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - auto restart on depression of the clutch.
Opening fuel filler cap?	Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
Folding the rear seats?	The rear seat is divided into sections which can be tumble-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance. Lift the carpet cover over the recess inside the boot to access the tyre repair kit, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

 - 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

175/65 R14
185/55 R15

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
37.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


Locking the doors?	Key / remote control operated central dead locking. Depress the door central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
Opening the boot/ tailgate?	Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it.
Adjusting door mirrors?	Internal electric adjustment via a control pad on the driver's door.
Opening the windows?	Electric front operated via control buttons adjacent to gear lever, with manually operated rear. Or all electric.
Operating the sunroof?	If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - auto restart on depression of the clutch.
Opening fuel filler cap?	Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
Folding the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance. Lift the carpet cover over the recess inside the boot to access the tyre repair kit, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

 - 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

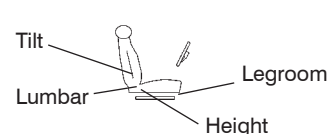

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central dead locking. Depress the door locking levers or central locking switch on the driver's door to lock the doors from the inside.
- Anti-theft system?** Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
- Opening the boot/tailgate?** Centrally locked. Use the remote key to unlock / open. Press the badge logo on the boot to open the tailgate.
- Adjusting door mirrors?** Internal electric adjustment via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door. Or manually operated rear.
- Operating the sunroof?** If fitted. Electric panoramic sliding sunroof is controlled via the roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear sliding doors, twist the key slot to activate it. Check from inside that the doors are secure. Or use the central locking switch to lock all the doors.
- Starting the engine?** Ensure gear selector is in neutral (or N) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles may be fitted with automatic transmission (use A for fully automatic, and select M- or M+ to manually select gears). Some vehicles may also be fitted with auto start-stop engines, whereby the engine shuts off when the gear selector is in neutral and the vehicle is at a standstill. To restart just depress the clutch.
- Opening fuel filler cap?** Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** *NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance.* Lift the carpet covered panel to access the tools and jack. The standard spare wheel is found slung underside the vehicle, secured by a retaining bolt. Use the tools to undo the bolt, and lower the wheel to the ground. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
205/50 R17

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
36.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

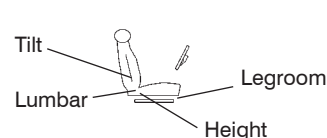

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE


Locking the doors?	Key / remote control operated central dead locking. Depress the door central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
Opening the boot/ tailgate?	Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it.
Adjusting door mirrors?	Internal electric adjustment via a control pad on the upper part of driver's door.
Opening the windows?	All electric operated via control buttons on driver's door. Or manually operated rear.
Operating the sunroof?	If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - engine automatically turns off when stationary, gear in neutral, and pedals are not depressed - auto restart on depression of the clutch (or brake for auto).
Opening fuel filler cap?	Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
Folding the rear seats?	The second seat row is divided into sections which can be tumble-folded separately. The third seat row can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance. Lift the carpet cover over the recess inside the boot to access the tyre repair kit, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Follow the instructions when using the tyre repair kit.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

 - 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

185/65 R16

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

Driving speed and travel distance are limited when using a spacesaver spare wheel.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
35.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

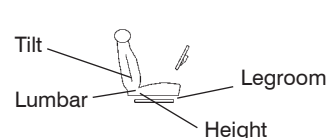

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central dead locking. Depress the door central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion. The vehicle features sliding rear doors.
Anti-theft system?	Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
Opening the boot/ tailgate?	Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it.
Adjusting door mirrors?	Internal electric adjustment via a control pad on the upper part of driver's door.
Opening the windows?	All electric operated via control buttons on driver's door. Manually operated hinged rear quarter windows.
Operating the sunroof?	If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - engine automatically turns off when stationary, gear in neutral, and pedals are not depressed - auto restart on depression of the clutch (or brake for auto).
Opening fuel filler cap?	Located under flap on rear nearside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
Releasing the bonnet?	Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
Folding the rear seats?	The second and third seat rows are divided into sections which can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance. Lift the carpet cover over the recess inside the boot to access the tools and jack, the spacesaver spare is stored underneath the vehicle, undo the internal retaining bolt to release it. Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FIA-09 / 26-01-2014

FIAT DOBLO

 
5-7 SEATS
5 DOOR MPV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R16
R17
R18

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
48.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

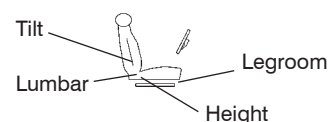

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the door central locking switch on the driver's door to lock the doors from the inside. Doors auto lock on vehicle motion.
- Anti-theft system?** Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.
- Opening the boot/tailgate?** Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it.
- Adjusting door mirrors?** Internal electric adjustment via a control pad on the driver's door.
- Opening the windows?** All electric operated via control buttons on driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - engine automatically turns off when stationary, with gears in neutral, and pedals are not depressed - auto restart on depression of the clutch (or brake for auto).
- Opening fuel filler cap?** Located under flap on rear offside. Lift the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat row is divided into sections which can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** *NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance.* Lift the carpet cover over the recess inside the boot to access the spacesaver spare wheel, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the electronic parking brake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spacesaver spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use).
- Using 4x4 mode?** Whenever the vehicle is at a standstill apply the electronic parking brake. The drive mode selector dial adjacent to the gear selector can be used to select three types of 4x4 driving modes - this is only available if the vehicle is fitted with 4x4 wheel drive.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



DIMENSIONS

Fuel Tank Capacity litres	70
Vehicle Wheelbase mm	3450
Vehicle Width m	n/a
Vehicle Height m	n/a
Cargo volume cu.m	10
Cargo Length m	3.1
Cargo Width m	1.87
Cargo Height m	1.62
Vehicle Weight (unladen) kg	-
Payload Weight kg	995
Maximum Weight kg	3000

 

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

Full size spare wheel.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the centre console to lock the doors from the inside.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Loading cargo?** Use the handle to open doors. Vehicle is fitted with one offside or two side sliding doors. Floor is fitted with fixed load lashing rings for securing loads. Twin rear doors can open up to 90, 180 or 270 degrees wide.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral (or N) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles may be fitted with automatic transmission (use A for fully automatic, and select M- or M+ to manually select gears). Some vehicles may also be fitted with auto start-stop engines, whereby the engine shuts off when the gear selector is in neutral and the vehicle is at a standstill. To restart just depress the clutch.
- Opening fuel filler cap?** Located under flap on mid nearside of vehicle. Centrally locked (or use key to unlock). Twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located in the passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** The tools and jack are stored under the driver's seat. The standard spare wheel is found slung underside the vehicle, secured by a retaining bolt. Use the tools to undo the bolt, and lower the wheel to the ground. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.

 
 
NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

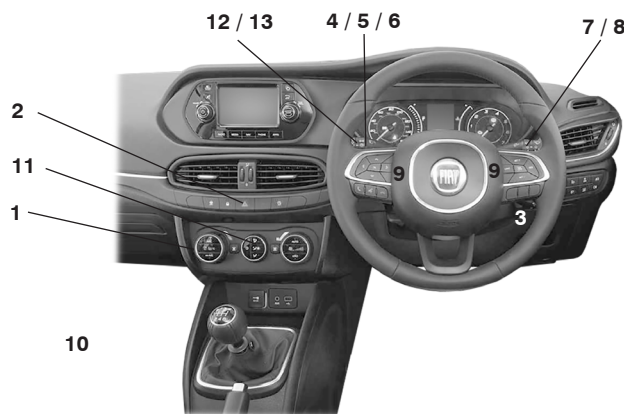

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/55 R15
205/55 R16
225/45 R17

Consult the tyre pressure tables found on the driver's door B-pillar or inside the fuel filler cap.

This vehicle may not carry a spare wheel, or is supplied with a spacesaver spare. For any assistance with tyres or punctures, please call the Europcar Tyre Helpline on 0800 0280 999.

Driving speed and travel distance are limited when using a spacesaver spare.

NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

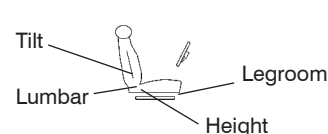

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the door central locking switch on the dashboard to lock the doors from the inside. Doors auto lock on vehicle motion.

Anti-theft system?

Some models are fitted with a remote anti-theft alarm. Passive arming of immobiliser when key is removed.

Opening the boot/ tailgate?

Centrally locked. Use the remote key or internal boot release switch to unlock / open. Press the badge logo on the boot to open it. The boot floor level can be set at various heights to accommodate storage.

Adjusting door mirrors?

Internal electric adjustment via a control pad on the driver's door.

Opening the windows?

All electric operated via control buttons on the driver's door. Or manually operated rear.

Operating the sunroof?

If fitted. Electric tilt / slide panoramic sunroof. Use the roof mounted switchgear to operate it.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot and turn it to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. The vehicle may feature automatic engine start/stop technology - where engine auto shuts off when gears are in neutral, vehicle is stopped, and foot pedals are not depressed - engine auto restarts on depression of the accelerator.

Opening fuel filler cap?

Located under flap on rear offside. Lightly press the edge of the flap to open it, centrally locked, twist off the cap anticlockwise.

Releasing the bonnet?

Pull bonnet release lever located to the lower left of the front passenger footwell. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.

How to change a tyre?

Lift the carpet cover over the recess inside the boot to access the tools, spacesaver spare wheel and jack (note: some vehicles may not be supplied with a spare wheel). Move the vehicle to firm / level ground. Turn the engine off, select first gear (or P if automatic). Apply the handbrake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. **NOTE: This vehicle is not usually supplied with a conventional spare wheel and tyre, in the event of having a punctured tyre please call the Europcar Tyre Helpline 0800 0280 999 for assistance.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. To manually select gears move the gear shift lever into the + and - positions to change gears up or down. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.