

INDEX - VICs (VEHICLE INSTRUCTION CARD)

FORD VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Fiesta	5 seats / 3-5 door hatchback
4	Focus	5 seats / 3-5 door hatchback / 5 door estate
5	C-Max	5 seats / 5 door MPV
6	Kuga	5 seats / 5 door SUV
7	Mondeo	5 seats / 3-5 door hatchback / 4 door saloon / 5 door estate
8	Galaxy	6-7 Seats / 5 door MPV
9	Galaxy NEW	6-7 Seats / 5 door MPV
10	Tourneo Custom	8-9 seats / 5 door MPV
11	Tourneo Custom NEW	8-9 seats / 5 door MPV
12	Ranger	2-5 seats / 2-4 door 4x4 truck
13	Transit Van Luton	3 seats / van
14	Transit Connect Van	3 seats / small panel van
15	Transit Connect Van NEW	3 seats / small panel van
16	Transit Custom Van	3 seats / panel van
17	Transit Custom Van NEW	3 seats / panel van
18	Transit Cab Tipper	3 seats / tipper truck
19		
20		

 
 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

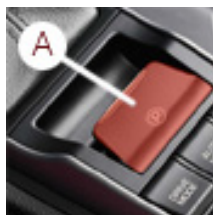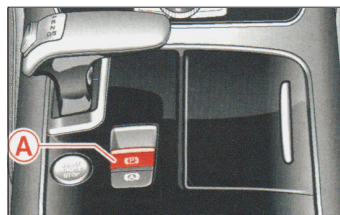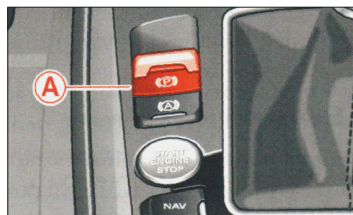

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine Start / Stop



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

R15 195/60
R16 195/55
R17 205/45
R18 205/40

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
42.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

Tilt
Lumbar
Legroom
Height
3 door: tilt seat to access rear.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking with high security double locking. Depress the central door locking button integrated into centre console to lock / unlock the doors from the inside. Doors auto lock on vehicle motion.
- Anti-theft system?** Vehicles are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / locking car. Visible VIN plate.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models have an internal remote release.
- Adjusting door mirrors?** Internal electric adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door. Or manually operated rear (3 door model).
- Operating the sunroof?** If fitted. Electric panoramic sunroof operated by roof mounted controls.
- Using child door locks?** Located on the edge of the rear doors, twist the key slot to activate it. Check from inside that the doors are securely locked. Or press the central locking switch to lock all of the doors.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Or some models feature a start/stop button, just keep the key in your pocket or bag, press the button to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move. Vehicles also feature engine start/stop technology whereby the engine auto shuts off when stationary, and gear is in neutral and pedals are not depressed. It instantly restarts when the brake is released (or clutch is depressed).
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open it, features a capless refuelling system.
- Releasing the bonnet?** Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The vehicle is not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use S+ or S- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-01 / 11-02-2018

FORD FIESTA

5 SEATS
3-5 DOOR HATCHBACK

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap). Some models may be fitted with an electronic tyre pressure monitor.

R16 205/55
R16 215/55
R17 215/50
R18 235/40
R19 235/35

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

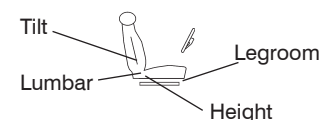

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking with high security double locking. Depress the central door locking button integrated into centre console to lock/unlock the doors from the inside.
- Anti-theft system?** Models are fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models have an internal remote release.
- Adjusting door mirrors?** Internal electric adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / power slide. Operated via roof mounted controls.
- Using child door locks?** Depress the central locking button integrated into the centre console to lock/unlock. Check from inside that the rear doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Or some models feature a start/stop button, press it to start/stop the engine (and just keep the key in your pocket or bag). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move. Vehicles also feature engine start/stop technology whereby the engine auto shuts off when stationary, gear in neutral and pedals are not depressed - it auto restarts when the brake is released (or clutch is depressed).
- Opening fuel filler cap?** Located on rear offside. Centrally locked. Press the edge of the flap to open and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.
- How to fold the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the spacesaver spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-02 / 30-09-2017

FORD FOCUS

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
215/50 R17
235/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central double locking. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto lock on vehicle motion.

Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Some models feature a power-tailgate (operated from the tailgate handle / remote key / front seats).

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front operated via control buttons on the driver's door. Electric or manually operated rear.

Using child door locks?

Pull the handle on the rear sliding doors (Grand C-Max) and slide them open/closed. Activate the driver's door power child locks. Check from inside that the doors are securely locked. Note: the rear doors are hinged at the rear C-pillar.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and linear handbrake is on by pulling it upwards. Place ignition key in starter switch. Use a normal starting routine (or insert key into key slot and press the power button to start/stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine auto start/stop technology - where the engine shuts down when idling or at a standstill - simply depress the clutch (manual) or accelerator (auto) to restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Press the remote release to right of driver's seat. Press the edge of the flap to open and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.

Releasing the bonnet?

Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check the seats are securely locked before use.

How to change a tyre?

Lift the recess cover inside the boot to access the tools. Loosen the retaining bolt to lower the spare wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the S+ and S- gear selector. Whenever the vehicle is at a standstill apply the linear handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-03 / 24-10-2015

FORD C-MAX

**5 SEATS
5 DOOR MPV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Parking Brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R17 235/55
R18 235/50
R19 235/45

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Models are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

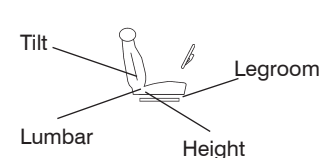

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. All doors will auto lock on vehicle motion.

Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Some vehicles feature hands-free opening, with the keys in your pocket or bag, simply use a gentle kicking motion under the centre of the rear bumper to open it hands-free.

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front and rear windows operated via control buttons on the driver's door.

Using child door locks?

Press the centre console central locking button. Check from inside that the doors are securely locked.

Operating the sunroof?

If fitted. Electric power slide sunroof with blind. Operated via roof mounted controls.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Vehicles feature keyless entry and starting, just keep the key in your pocket or bag. Press the "start/stop" button on the left of the steering wheel to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine auto engine start/stop technology - where the engine shuts down at a standstill, gears are in neutral and foot pedals are not depressed - simply depress the clutch (manual) or accelerator (auto) to restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lift the edge of the flap to open and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.

Releasing the bonnet?

Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check the seats are securely locked before use.

How to change a tyre?

Vehicle is not normally supplied with a spacesaver spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools. Loosen the retaining bolt to lower the spare wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For sportier gear changes use the S gear mode. Whenever the vehicle is at a standstill apply the parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

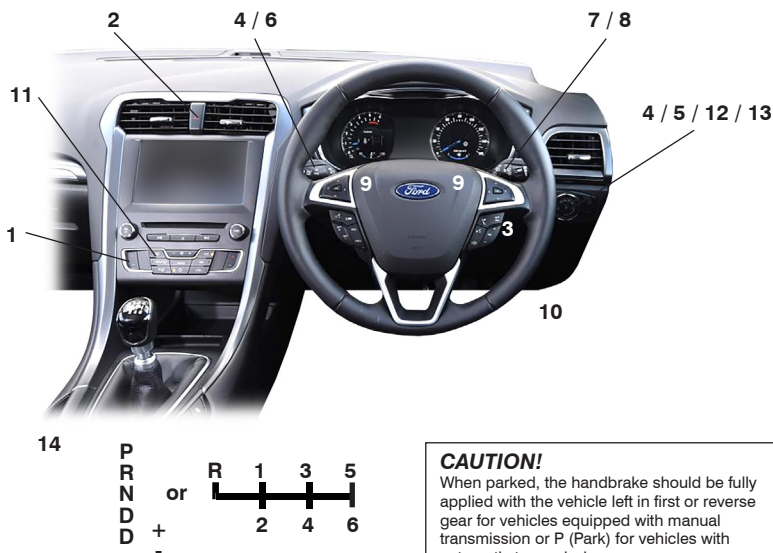

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

215/60 R16
235/50 R17
235/45 R18
235/40 R19

Models are fitted with an electronic tyre pressure monitor.
Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
51 litres (saloon) or 62 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

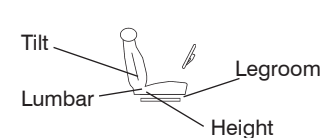

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control central double-locking. Vehicle will auto lock if doors / boot are not opened within 45 seconds.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser. Visible VIN.
- Opening the boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Or if fitted, press the remote tailgate release on the centre console.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric panoramic sunroof - operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or use the central locking button to lock all doors.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in the key slot to right of steering wheel. Press the "Power" button to the left of the steering wheel to start/stop the engine (or turn the key for models without the "Power" button). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature engine start/stop technology whereby the engine auto shuts off when stationary, gears in neutral and pedals are not depressed - auto restarts when the accelerator is pressed (or clutch is depressed).
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the remote release to right of driver's seat. Press the edge of the flap to open and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.
- How to fold the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-05 / 30-09-2017

FORD MONDEO

5 SEATS
5 DOOR HATCHBACK / 4 DOOR SALOON / 5 DOOR ESTATE

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Releas
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine start/stop switch
- 15 Electronic parking brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Models are fitted with an electronic tyre pressure monitor.

235/55 R17

235/50 R18

245/45 R19

Some models may feature run flat tyres which have limited range and speed ratings when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66.0 litres (68 litres - for diesel)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

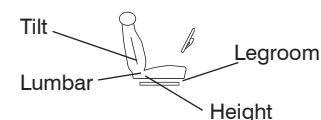

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central double locking. Doors will auto lock on vehicle motion. Doors can also be locked using the central locking button on the driver's door.

Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Press internal remote release on centre console to open. Some models also feature a powered tailgate switch.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Opening the sunroof?

If fitted. Electric full-length panoramic sunroof - operated by roof mounted switchgear.

Using child door locks?

Located on the edge of the rear doors, slide the lever to activate it (or use the central locking button on the driver's door, doors also auto-lock on vehicle motion). Check from inside that the doors are securely locked.

Starting the engine?

Ensure gear selector is in neutral. Press the "Power" button on the left of the steering wheel to start/stop the engine, or insert and turn the starter key in the starter switch for models without the "Power" button. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature engine start/stop technology whereby the engine auto shuts off when stationary, gears in neutral and pedals are not depressed - auto restarts when the accelerator is pressed (or clutch is depressed).

Opening fuel filler cap?

Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.

Releasing the bonnet?

Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be flat-folded, slid and reclined separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. To remove the seats unlock the floor lock and slide / lift the seat out. Check the seats are locked before use.

How to change a tyre?

Lift the recess cover inside the boot to access the tools and jack (some vehicles may be fitted with run-flat tyres). Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the S mode for sportier gear changes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-06 / 30-09-2017

FORD GALAXY

**6-7 SEATS
5 DOOR MPV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine start/stop switch
- 15 Electronic parking brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Models are fitted with an electronic tyre pressure monitor.

235/55 R17

235/50 R18

245/45 R19

Some models may feature run flat tyres which have limited range and speed ratings when punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66.0 litres (68 litres - for diesel)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Doors will auto lock on vehicle motion. Doors can also be locked using the central locking button on the driver's door.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Press internal remote release on centre console to open. Some models also feature a powered tailgate switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Opening the sunroof?** If fitted. Electric full-length panoramic sunroof - operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the lever to activate it (or use the central locking button on the driver's door, doors also auto-lock on vehicle motion). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral. Press the "Power" button on the left of the steering wheel to start/stop the engine, or insert and turn the starter key in the starter switch for models without the "Power" button. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature engine start/stop technology whereby the engine auto shuts off when stationary, gears in neutral and pedals are not depressed - auto restarts when the accelerator is pressed (or clutch is depressed). Some models may feature all wheel drive (AWD).
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Pull the internal bonnet release to lower right of the dashboard, lift the bonnet slightly, and press the bonnet release lever under the front centre of the bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be flat-folded, slid and reclined separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. To remove the seats unlock the floor lock and slide / lift the seat out. Check the seats are locked before use.
- How to change a tyre?** Lift the recess cover inside the boot to access the tools and jack (some vehicles may be fitted with run-flat tyres). Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the S mode for sportier gear changes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-07 / 11-02-2018

FORD GALAXY NEW

**6-7 SEATS
5 DOOR MPV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

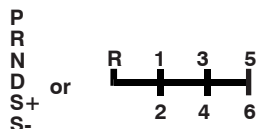

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R15
215/65 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: this vehicle is equipped with a full-size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central double locking. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto lock on vehicle motion.

Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Some models feature a power-tailgate (operated from the tailgate handle / remote key / front seats).

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front operated via control buttons on the driver's door. Electric or manually operated rear.

Using child door locks?

Pull the handle on the twin rear sliding doors and slide them open/closed. Activate the driver's door power child locks. Check from inside that the doors are securely locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and linear handbrake is on by pulling it upwards. Place ignition key in starter switch. Use a normal starting routine (or insert key into key slot and press the power button to start/stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine auto start/stop technology - where the engine shuts down when the vehicle is at a standstill and foot pedals are not depressed and gears are in neutral - simply depress the clutch or accelerator to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under flap on mid near-side at lower edge of front passenger door. Lift the flap to open. Open flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.

Releasing the bonnet?

Rotate the Ford logo on the radiator grille, insert the ignition key and turn it to unlock / open the bonnet.

Folding the rear seats?

The rear seats are divided into two rows of three seats sections which can be reclined and/or flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check the seats are securely locked before use.

How to change a tyre?

Lift the recess cover inside the boot to access the full-size spare tyre. Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the S+ and S- gear selector. Whenever the vehicle is at a standstill apply the linear handbrake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R16
235/55 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: this vehicle is equipped with a full-size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central double locking. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto lock on vehicle motion.

Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Some models feature a power-tailgate (operated from the tailgate handle / remote key / front seats).

Adjusting door mirrors?

Electric internal adjustment operated via a control knob on the driver's door.

Opening the windows?

Electric front operated via control buttons on the driver's door. Flip-open second row windows.

Using child door locks?

Pull the handle on the twin rear sliding doors and slide them open/closed. Activate the driver's door power child locks. Check from inside that the doors are securely locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and linear handbrake is on by pulling it upwards. Place ignition key in starter switch. Use a normal starting routine (or keep key in your pocket or bag and press the power button to start/stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine auto start/stop technology - where the engine shuts down when the vehicle is at a standstill and foot pedals are not depressed and gears are in neutral - simply depress the clutch or accelerator to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under a long flap on mid near-side at edge of front passenger door. Press the flap to open, and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.

Releasing the bonnet?

Rotate the Ford logo on the radiator grille, insert the ignition key and turn it to unlock / open the bonnet.

Folding the rear seats?

The rear seats are divided into two rows of individual seats (or third row with a 2:1 split), individual seats can be reclined and/or flat-folded separately. Second row seats can rotate to face rear seats. Third row seats can be removed. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check the seats are securely locked before use.

How to change a tyre?

The vehicle is not normally supplied with a full-size spare tyre. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the M+ and M- gear selector. Whenever the vehicle is at a standstill apply the handbrake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 4x4 Selector
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

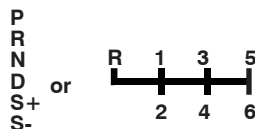

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/70 R16
255/70 R16
265/65 R17
265/60 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: a full size spare wheel is carried.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. A single bottom hinged tailgate provides access to a large flat open load area with tie-down securing points.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Electric operated rear.
- Using child door locks?** Activate the driver's door power child locks. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and linear handbrake is on by pulling it upwards. Place ignition key in starter switch. Use a normal starting routine (and - if fitted - press the power button to start/stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine auto start/stop technology - where the engine auto shuts down when at a standstill and foot pedals are not depressed - simply depress the clutch (manual) or accelerator (auto) to restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the remote release to right of driver's seat. Lift the flap to open. Open flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Rotate the Ford logo on the radiator grille, insert the ignition key and turn it to unlock / open the bonnet.
- How to change a tyre?** Lift the recess cover inside the boot to access the tyre repair kit or standard spare tyre. Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are inside the wheel recess. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the S+ and S- gear selector. Whenever the vehicle is at a standstill apply the linear handbrake.
- Selecting 4WD modes?** Use the rotating selector switch found adjacent to the gear shift lever to easily choose various 4WD driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-FRD-10 / 25-05-2016

FORD RANGER

2-5 SEATS
2-4 DOOR 4X4 TRUCK

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R15
235/65 R16
195/75 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models feature tyre pressure monitoring sensors.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80-95 litres (depends on model)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking, high security locks. Depress the central locking switch to lock the doors from the inside. Auto re-locking. All doors will auto lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Load compartment?** Luton van with tail lift.
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles are fitted with auto start-stop technology, whereby engine automatically shuts off when in neutral, pedals are not depressed and the vehicle is not moving. To re-start just depress the clutch. Some vehicles may also be fitted with permanent 4WD.
- Opening fuel filler cap?** Centrally locked. Located under panel on inside of front passenger door. Open flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Rotate the blue oval badge on the bonnet to insert key to unlock and open the bonnet. Unhook catch under bonnet.
- How to change a tyre?** Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are stored behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

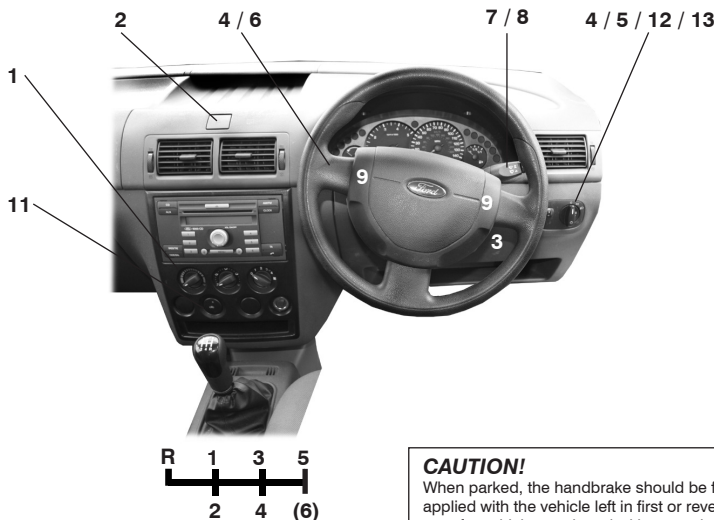

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
100.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central double locking. Depress the door locking knobs to lock the doors from the inside. Auto re-locking.
Anti-theft system?	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
Load compartment?	Centrally locked. Fitted with 1 or 2 sliding panel side doors, with twin opening rear doors. Loading floor is fitted with fixed tie-down eyes.
Adjusting door mirrors?	Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
Opening fuel filler cap?	Centrally locked. Located at rear offside of vehicle. Lift the flap and twist off the cap anticlockwise.
Releasing the bonnet?	Rotate the blue oval badge on the bonnet to insert key to unlock and open the bonnet. Unhook catch under bonnet.
How to change a tyre?	Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are stored inside the rear doors. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 -
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

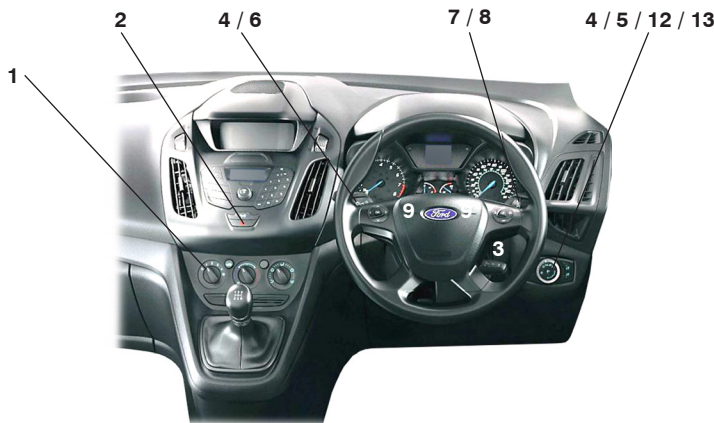

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

R16 205/60

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

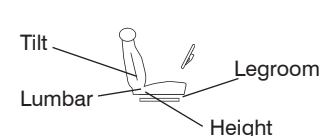

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the door locking knobs to lock the doors from the inside. Auto re-locking.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Load compartment?** Centrally locked. Fitted with 1 or 2 sliding panel side doors, with twin opening rear doors. Loading floor is fitted with fixed tie-down eyes to help secure loads. The load-through bulk head can help accommodate long length objects.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start-stop technology, whereby the engine automatically shuts off when in gears are in neutral, foot pedals are not depressed and the vehicle is not moving. To re-start just depress the clutch or accelerator.
- Opening fuel filler cap?** Centrally locked. Located at rear offside of vehicle. Lift the flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Rotate the blue oval badge on the bonnet to insert key to unlock and open the bonnet. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre inflation kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are stored inside the rear doors. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the S gear selector. Whenever the vehicle is at a standstill apply the handbrake.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

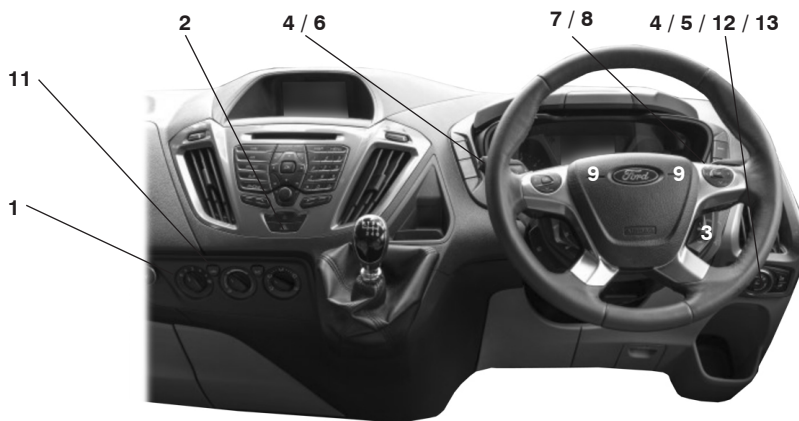

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R15
215/65 R16
235/50 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models feature tyre pressure monitoring sensors.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking, high security locks. Depress the central locking switch to lock the doors from the inside. Auto re-locking. All doors will auto lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Load compartment?** Centrally locked. Fitted with a single nearside sliding panel door or a sliding panel door on each side. Also fitted with twin wide-opening rear doors, or a single top hinged rear door. The sidewalls are fitted with fixed tie-down eyes.
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles are fitted with auto start-stop technology, whereby engine automatically shuts off when in neutral, pedals are not depressed and the vehicle is not moving. To re-start just depress the clutch. Some vehicles may also be fitted with permanent 4WD.
- Opening fuel filler cap?** Centrally locked. Located under panel on inside of front passenger door. Open flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Rotate the blue oval badge on the bonnet to insert key to unlock and open the bonnet. Unhook catch under bonnet.
- How to change a tyre?** Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are stored behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 -
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R15
215/65 R16
235/55 R17
235/50 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models feature tyre pressure monitoring sensors.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking, high security locks. Depress the central locking switch to lock the doors from the inside. Auto re-locking. All doors will auto lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Load compartment?** Centrally locked. Fitted with a single nearside sliding panel door or a sliding panel door on each side. Also fitted with twin wide-opening (180°) rear doors, or a single top hinged rear door. The cargo bay is fitted with fixed tie-down eyes to help secure loads.
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles are fitted with auto start-stop technology, whereby the engine automatically shuts off when gears are in neutral, pedals are not depressed and the vehicle is not moving. To re-start just depress the clutch or accelerator. Some vehicles may also be fitted with permanent 4WD.
- Opening fuel filler cap?** Centrally locked. Located under panel on inside of front passenger door. Open flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
- Releasing the bonnet?** Rotate the blue oval badge on the bonnet to insert key to unlock and open the bonnet. Unhook catch under bonnet.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are stored behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the M gear selector. Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 -
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R15
235/65 R16
195/75 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models feature tyre pressure monitoring sensors.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80-95 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central double locking, high security locks. Depress the central locking switch to lock the doors from the inside. Auto re-locking. All doors will auto lock on vehicle motion.
Anti-theft system?	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some vehicles may be fitted with an alarm.
Load compartment?	Tipper variant.
Adjusting door mirrors?	Internal electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric front operated via control switches on the driver's door.
Starting the engine?	Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles are fitted with auto start-stop technology, whereby engine automatically shuts off when in neutral, pedals are not depressed and the vehicle is not moving. To re-start just depress the clutch. Some vehicles may also be fitted with permanent 4WD.
Opening fuel filler cap?	Centrally locked. Located under panel on inside of front passenger door. Open flap and insert the fuel pump nozzle, the capless refuelling system will differentiate between petrol and diesel fuel pump nozzles.
Releasing the bonnet?	Rotate the blue oval badge on the bonnet to insert key to unlock and open the bonnet. Unhook catch under bonnet.
How to change a tyre?	Loosen the retaining bolt to lower the wheel to the ground. The tools and jack are stored behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.