

INDEX - VICs (VEHICLE INSTRUCTION CARD)

HYUNDAI VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	i10	5 seats / 5 door hatchback
4	i20	5 seats / 3 door hatchback
5	ix20	5 seats / 5 door hatchback
6	i30	5 seats / 3-5 door hatchback / estate
7	i40	5 seats / 4 door saloon / 5 door estate
8	Kona	5 Seats / 5 door SUV / 2x4 or 4x4
9	Tucson	5 Seats / 5 door SUV / 2x4 or 4x4
10	Ioniq	5 seats / 5 door hatchback hybrid
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

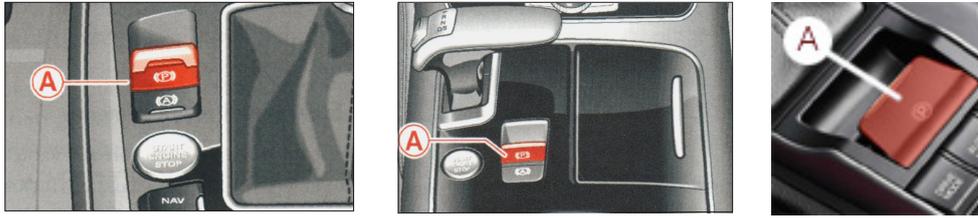

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

 
Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

175/65 R14
 155/70 R13

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 40.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

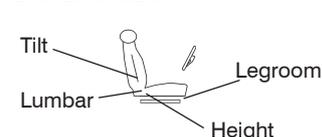

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the centre console to lock the doors from the inside. Auto door locking on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door, with electric or manually operated rear windows.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the door locking lever on the edge of the door to activate it. Or press the central locking switch on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover in the boot to access the storage housing the tools and jack, lift out this tray to reveal the spare wheel. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake or parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 185/65 R15
- 195/55 R16
- 205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



3 door: Tilt front seats to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the driver's door to lock the doors from the inside. Auto door locking on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Release it using the internal remote release. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover in the boot to access the storage tray housing the tools and jack, lift out this tray to reveal the spare wheel. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/65 R15
 205/55 R16

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the driver's door to lock the doors from the inside. Auto door locking on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door, with electric or manually operated rear windows.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, press the central locking switch on the dashboard to activate child proof locks. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Some vehicles also feature automatic engine start/stop technology - whereby the engine automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - engine instantly restarts on depression of the clutch (or accelerator pedal for autos). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover in the boot to access the tools and jack, and the spacesaver spare wheel. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake or parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-HYU-03 / 28-01-2015

HYUNDAI ix20

 
**5 SEATS
 5 DOOR HATCHBACK**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

- 195/65 R15
- 205/55 R16
- 225/45 R17

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

Fitted with auto tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

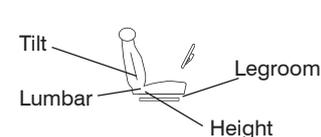

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door, with electric or manually operated rear windows.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the door locking lever on the edge of the door to activate it. Check from inside that the doors are securely locked. Or press the centre console central locking button.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine (or some vehicles feature an engine start/stop button, simply keep the key in your pocket or handbag, and press the engine start/stop button to start or stop the engine). Select desired gear. Release parking brake (on some models the parking brake will normally auto release) and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature automatic engine start/stop technology - whereby engine auto shuts off when stationary, gears are in neutral and foot pedals are not depressed - engine instantly restarts on depression of the clutch or accelerator.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is securely locked before using the seat.
- How to change a tyre?** Vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover to access the storage tray housing the tools and jack. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the D +/- selector to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-HYU-04 | 11-02-2018

HYUNDAI i30



5 SEATS
5 DOOR HATCHBACK / ESTATE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

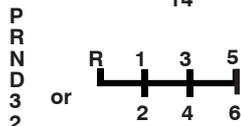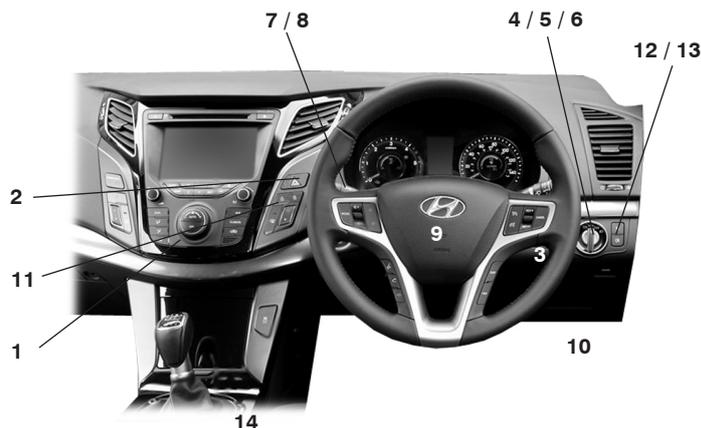

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

205/60 R16
 215/50 R17
 225/45 R18

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 70 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the centre console to lock the doors from the inside. Auto door locking on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open. Saloon has a remote release.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door, with electric or manually operated rear windows.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the door locking lever on the edge of the door to activate it. Or use the central locking switch on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in starter switch. Use a normal starting routine (or some vehicles feature an engine start/stop button, simply keep the key in your pocket or handbag, and press the engine start/stop button to start or stop the engine). Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature automatic engine start/stop technology where the engine shuts off when the vehicle is stationary, gears in neutral and pedals are not depressed - engine instantly restarts on depression of the clutch (or brake on auto).
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Release it using the internal remote release adjacent to the driver's seat. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the storage tray housing the tools and jack, lift out this tray to reveal the temporary spacesaver spare wheel. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the 3 or 2 selector positions to select lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-HYU-05 / 26-01-2014

HYUNDAI i40

 
5 SEATS
4 DOOR SALOON / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

205/60 R16
 215/55 R17
 235/45 R18

Note: travel distance and driving speeds are limited using spacesaver spare tyre or tyres repaired by emergency tyre repair kits.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 50 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

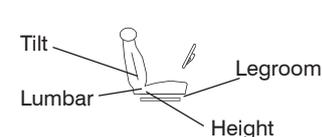

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

 
- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch to lock the doors from the inside. Auto door locking on vehicle motion. Some models feature keyless entry.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open. Some models feature a smart auto hands-free opening power tailgate.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic electric / tilt slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors. Press central locking button to lock all doors, or for each rear door, insert ignition key into key slot on edge of rear door, and turn to activate child locks. Repeat process for each door. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch and use a normal starting routine or press the engine start/stop button to turn the engine on or off. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature automatic engine start/stop technology - engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed, engine auto restarts on depression of the clutch or accelerator.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Release it using the internal remote release adjacent to the driver's seat. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or emergency tyre repair inflation kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

215/70 R16
 225/60 R17
 245/45 R19

Note: vehicle is supplied with a full-size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 62.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

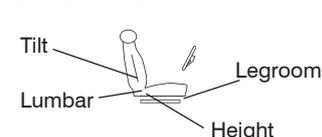

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the driver's door to lock the doors from the inside. Auto door locking on vehicle motion. Some models feature keyless entry.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open. Some models feature a smart auto hands-free opening power tailgate.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic electric / tilt slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, depress the central locking switch on the dashboard / driver's door to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake (or electronic parking brake) is on. Place ignition key in starter switch and use a normal starting routine. (Some models are fitted with an engine start/stop button to turn the engine on or off). Release handbrake (or electronic parking brake) and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature automatic engine start/stop technology - engine auto shuts off when vehicle is stationary and foot pedals are not depressed, engine auto restarts on depression of the clutch or accelerator.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Release it using the internal remote release adjacent to the driver's seat. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the storage tray housing the tools and jack, lift out this tray to reveal the full size spare wheel. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake (or electronic parking brake).

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-HYU-07 / 24-10-2015

HYUNDAI TUCSON

 
5 SEATS
5 DOOR SUV 2X4 OR 4X4

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Ignition key slot
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine start/stop



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap). Electronic tyre pressure monitor.

195/65 R15

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

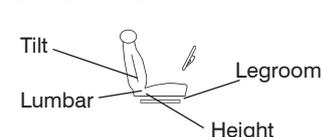

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the driver's door to lock the doors from the inside. Auto door locking on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, press the central locking switch on the dashboard to activate child proof locks. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Insert key into key slot and turn on. Press the engine start/stop button to left of steering wheel to manually start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature automatic engine start/stop technology - whereby the engine and electric motor automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - engine and electric motor instantly restart on depression of the clutch.
- NOTE: the hybrid electric engine works automatically together with the petrol engine - with ECO (economy) and SPORT (more responsive) driving mode options. Electric engine is used at low speed and during acceleration, it is auto recharged during deceleration and downhill driving. During mid speeds only the petrol engine is used.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located under the steering wheel column. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover in the boot to access the tools and jack, and the spacesaver spare wheel. Release the wheel by turning the retaining bolt anticlockwise. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**