

INDEX - VICs (VEHICLE INSTRUCTION CARD)

JAGUAR VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	XE	5 seats / 4 door saloon
4	XF	5 seats / 4 door saloon
5	E-Pace	5 seats / 5 door 4x4 SUV
6	F-Pace	5 seats / 5 door 4x4 SUV
7	I-Pace	5 seats / 5 door 4x4 SUV

ELECTRIC

VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE

INFORMATION

Where fitted, the electronic parking brake (EPB) replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R17
225/50 R17
225/45 R18
225/40 R19
255/35 R19
235/35 R20
265/30 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar. Vehicles are fitted with an electronic tyre pressure monitoring system. Spacesaver spare wheels have limited speed and distance ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
56 litres (petrol 63 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

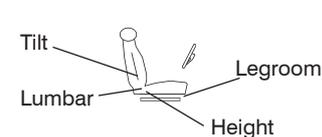

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Models feature power operation via the remote fob or dashboard switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks on rear doors. Press the button on the driver's door to activate. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely closed and locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Depress the clutch (or brake pedal on automatics). Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lightly press the edge of the flap to open and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears use the shift lever. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the S+ and S- selector to manually change gears up or down (or if fitted, use the steering wheel mounted left and right paddle shift levers to change gears down and up). Use the drive mode selector adjacent to the gear lever to choose different comfort and responsive options. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-01 / 19-06-2021

JAGUAR XE

**5 SEATS
4 DOOR SALOON**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/55 R17
245/45 R18
245/40 R19
255/35 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Vehicles are fitted with an electronic tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
74 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models feature power operation via the remote fob or dashboard switch.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric tilt and slide panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks on rear doors. Press the button on the driver's door to activate. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely closed and locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Depress the clutch (or brake pedal on automatics). Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lightly press the edge of flap to open and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears use the shift lever. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the S+ and S- selector to manually change gears up or down (or if fitted, use the steering wheel mounted left and right paddle shift levers to change gears down and up). Use the drive mode selector adjacent to the gear lever to choose different comfort and responsive options. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-02 / 19-06-2021

JAGUAR XF

**5 SEATS
4 DOOR SALOON**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



P
R
N
D
S

or R 1 3 5
2 4 6

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/65 R17
235/65 R17
235/60 R18
235/55 R19
235/50 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Some vehicles are fitted with an electronic tyre pressure monitoring system. Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
67 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central console.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Models feature power operation via the remote fob or dashboard switch or may feature hands-free opening via a foot gesture sensing mechanism under the rear bumper flanks.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks on rear doors. Press the button on the driver's door to activate. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely closed and locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Depress the clutch (or brake pedal on automatics). Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lightly press the edge of the flap to open and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (60:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears use the gear lever to select a gear option or driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the S+ and S- selector to manually change gears up or down (or if fitted, use the steering wheel mounted left and right paddle shift levers to change gears down and up). Whenever the vehicle is at a standstill apply the parking brake.
- Using other driving options?** Some vehicles may feature all wheel drive (AWD) in place of 2WD. Use the drive mode selector switch adjacent to the gear shift lever to choose optional comfort or performance driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-03 / 11-02-2019

JAGUAR E-PACE

5 SEATS
2WD OR 4X4 / 5 DOOR SUV

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

235/65 R18
255/55 R19
265/45 R21
295/40 R21

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Some vehicles are fitted with an electronic tyre pressure monitoring system. Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
82 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Keyless entry. Auto-locking on driving away. To lock all doors press the central locking switch on the central dashboard.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Models feature power operation via the remote fob or dashboard switch or may feature hands-free opening via a foot gesture sensing mechanism under the rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding panoramic glass sunroof with electric blind, operated by roof mounted switchgear.
- Using child door locks?** Power operated child locks on rear doors. Press the button on the driver's door to activate. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely closed and locked for safety.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Ensure that the remote key is carried in your pocket or bag. Depress the clutch (or brake pedal on automatics). Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake (this may auto release depending upon driving mode selected) and release foot brake pedal and gently press the accelerator to move the vehicle. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.
- Opening fuel filler cap?** Located on the rear offside. Centrally locked. Lightly press the edge of the flap to open and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch to release the bonnet.
- Folding the rear seats?** The rear seats are divided into sections (40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears use the pop-up rotary selector, and turn to select a gear option or driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the S+ and S- selector to manually change gears up or down (or if fitted, use the steering wheel mounted left and right paddle shift levers to change gears down and up). Whenever the vehicle is at a standstill apply the parking brake.
- Using other driving options?** This vehicle is fitted with four wheel drive (4WD). The vehicle features a pop-up rotating selector (adjacent to gear selector lever) for selecting optimum engine, transmission, suspension and traction settings for a variety of driving conditions (including off-road). The vehicle has electronic Hill Descent Control (HDC) for use when descending hilly off-road terrain.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-04 | 11-02-2019

JAGUAR F-PACE

**5 SEATS
5 DOOR 4X4 SUV**


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake
- 15 Tailgate Release

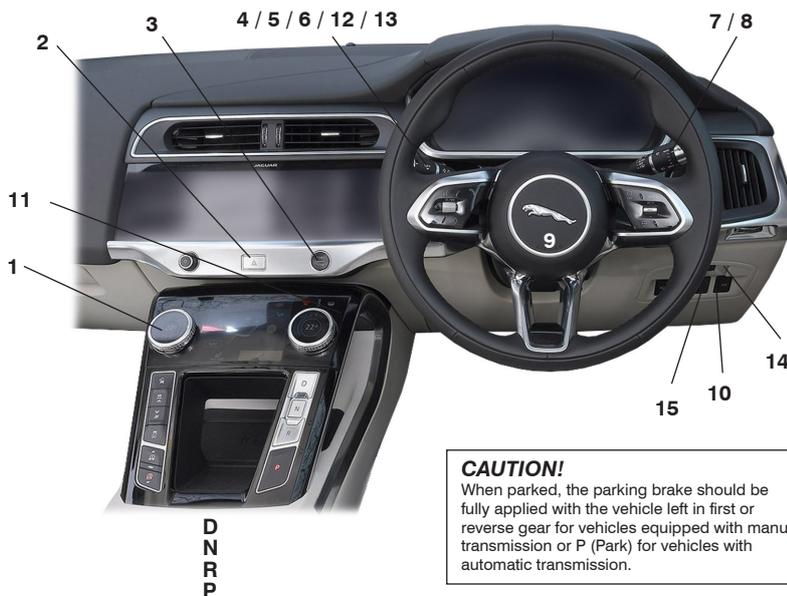

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

235/55 R19
235/50 R20

Confirm tyre inflation pressures by consulting the tyre pressure table found on the driver's door B-pillar.

Some vehicles are fitted with an electronic tyre pressure monitoring system. Spacesaver spare wheels have limited distance and speed ratings.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Electric:
High voltage lithium ion battery.

Dual electric motors front and rear. 4WD.
90kWh lithium ion battery with 290 mile range.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

— Use the smart key. Centrally locked. Deadlocked. Press to lock or unlock and disable the alarm. For 2 stage unlocking: Single press unlocks driver's door. Double press unlocks all doors and tailgate. Press and hold the hazard triangle button to activate the panic alarm. For keyless entry - retain the key in your pocket or bag and press the button on the door handle to unlock and disarm the alarm. Doors auto lock on driving away. When leaving the vehicle, switch off, select Park (P), apply parking brake, press the lock button on smart key to lock and arm alarm. To double lock, press the button twice within 3 seconds, an audible beep confirms double locking.

Anti-theft system?

— Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser. Visible VIN.

Opening the tailgate?

— Centrally locked. To release tailgate - press the smart key button to unlock and open, or close. All other doors and alarm remain locked and active. For hands-free opening - sensors under the rear bumper are activated by foot gesture movement which is used to auto open or close the powered tailgate (if fitted).

Adjusting door mirrors?

— Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

— Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

— If fitted: electric sliding panoramic glass sunroof, operated by roof mounted switchgear.

Using child door locks?

— Power operated child locks on rear doors. Press the button on the driver's door to activate. Or lock all doors and tailgate with the central locking button. Ensure the doors are securely closed and locked for safety.

Starting the engine?

— Ensure that the smart key is carried in your pocket or bag. Ensure Park (P) is selected and parking brake is on. Press the brake pedal. Press the motor start/stop button to start or stop the engine. Move the gear selector to select N for neutral, R for reverse or D for drive. To select R, N or D, wear the seatbelt and depress the brake pedal, then move gear selector. Auto deactivate parking brake by selecting D or R on gear selector. Select gear. Release brake pedal and gently press the accelerator. When switching off, select Park (P) and apply the parking brake. Models feature automatic engine start/stop whereby the engine automatically shuts off when stationary, foot pedals are not depressed and gears are in neutral - engine instantly restarts when the foot pedals are depressed.

Battery charging?

— Charging port located under flap on front nearside wing. With vehicle unlocked, lightly press the mid rear flap edge to open to reveal charge port and cable unlock button. **UNLOCKING CHARGE PORT:** To unlock the port, press the smart key button OR driver's door button. Ensure the key is carried with you when pressing the cable unlock button to ensure it will release. To connect the cable, unlock the vehicle, ensure Park (P) is selected, turn off the vehicle and open the charge port. **CABLE CONNECTION:** First connect the cable to the power source, then connect the cable to the vehicle input charge port. Follow any instructions on charging stations. The cable is locked in position once connected. Charging will commence once cable is connected and charging status is displayed on the drivers touchscreen. **CHARGING STATUS LEDs:** White - normal; White flashing - initialisation; Blue flashing - charging is paused; Green flashing - charging in progress; Green solid - charging is complete; Red flashes - charging fault. **CABLE DISCONNECTION:** Unlock the cable from the vehicle charge port by pressing the button next to the plug. Press the cable release button as necessary. Replace the protective cap as necessary. Close the charge port. Remove the connector from the charge station as required. **RECHARGE TIME:** 0-80% recharge with 11kW wall box takes 9 hours or 7 hours for a 7kW wall box; 50kW public charging 0-80% in 85 minutes; 100kW rapid DC chargers take 40 minutes. **BATTERY CONDITION:** Avoid repetitive charging to 100%. To maintain battery condition recharge to 80% (this level can be set on the touchscreen in the *vehicle preconditioning menu*). The touchscreen indicates current battery status and estimated range. **REGENERATIVE BRAKING:** whenever the accelerator is not depressed whilst driving surplus energy may be fed back to the battery. **VEHICLE RANGE:** driving range displayed is only an estimation and is indicative only. **Always ensure that charging is stopped and the charge cable is unlocked before disconnection.**

Releasing the bonnet?

— To release - press the smart key button to unlock or press the button on the lower right of dashboard, pull the safety catch under the bonnet lid. All other doors and alarm remain locked and active if these have been secured.

Folding the rear seats?

— The rear seats are divided into sections (60:40 or 40:20:40) which can be separately folded. Unlock the seat catch before folding. When returning the seat to normal use ensure seat is firmly locked into position.

How to change a tyre?

— Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

Using other driving options?

— To scroll between various driving modes for various road and environmental conditions, use the buttons on right of centre console to choose and select a relevant driving mode option (rain ice snow; dynamic; comfort; or eco).

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-JAG-05 / 30-11-2021

JAGUAR I-PACE

ELECTRIC

**5 SEATS
2WD OR 4X4 / 5 DOOR SUV**