

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## KIA VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Picanto</b>	4 seats / 5 door hatchback
4	<b>Rio</b>	5 seats / 5 door hatchback
5	<b>Ceed</b>	5 seats / 5 door hatchback / estate
6	<b>ProCeed</b>	5 seats / 5 door estate
7	<b>XCeed</b>	5 seats / 5 door SUV
8	<b>XCeed PHEV Hybrid</b> <span>HYBRID</span>	5 seats / 5 door hybrid SUV
9	<b>Venga</b>	5 seats / 5 door hatchback
10	<b>Optima</b>	5 seats / 4 door saloon
11	<b>Niro Hybrid Self-Charging</b> <span>HYBRID</span>	5 seats / 5 door hybrid SUV
12	<b>Niro PHEV Hybrid</b> <span>HYBRID</span>	5 seats / 5 door hybrid SUV
13	<b>Niro EV</b> <span>ELECTRIC</span>	5 seats / 5 door hybrid / Electric
14	<b>Sportage</b>	5 seats / 3 door hatchback
15	<b>Stinger</b>	5 seats / 5 door / Saloon
16	<b>Stonic</b>	5 seats / 5 door SUV
17	<b>Sorento</b>	7 seats / 5 door SUV


# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

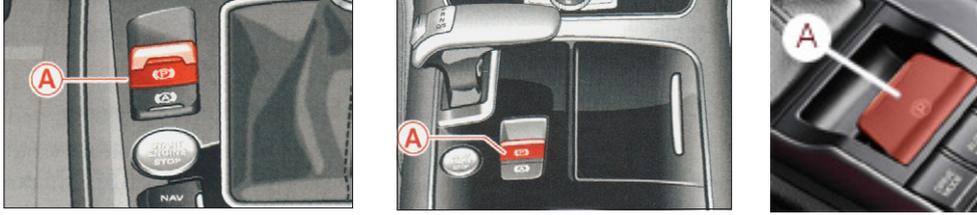

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.


Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

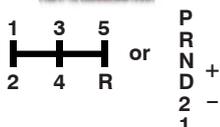

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

- 175/65 R14
- 185/55 R15
- 195/45 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 35.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central dead locking. Depress the button on the centre console to lock from inside or depress the door locking knobs.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door (or manual adjustment on lower specification models).
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door. Or manually operated rear windows.
- Operating the sunroof?** If fitted - electric sunroof operated by roof mounted switches.
- Using child door locks?** Press the centre console central locking button to lock them. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter switch next to steering wheel / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. A remote release button may be present on right hand side of driver's seat. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be separately folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the carpet cover to access the storage area housing the tools. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. follow the instruction when using the tyre repair kit. Lower the vehicle.
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use low gear **1** and **2** at low speed only. Whenever the vehicle is at a standstill apply the handbrake or parking brake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Handbrake

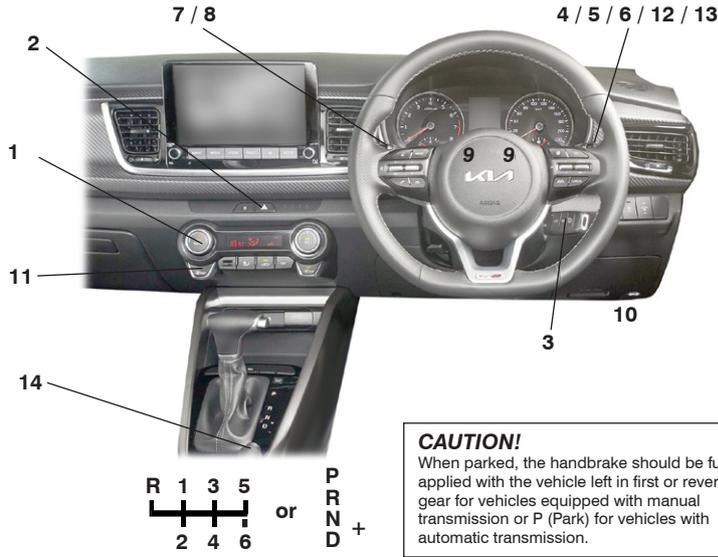

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

- 185/65 R15
- 195/55 R16
- 205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 45 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and parking brake is on. Place ignition key in starter switch next to steering wheel / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 split sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-02 / 20-08-2022

# KIA RIO

**5 SEATS / 5 DOOR HATCH**  
**5 SEATS**

 
design and production by : Drake Enterprises Limited - drakeenterprises@btinternet.com

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

205/55 R16  
225/45 R17  
225/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Estate features a switch controlled power tailgate.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Place ignition key in starter switch next to steering wheel / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Remote release. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 split sections (estate has 40:20:40) which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-03 / 19-06-2021

# KIA CEED

 
**5 DOOR HATCH / ESTATE**  
**5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

225/45 R17  
 225/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Vehicle features a switch controlled power tailgate.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart ignition key in your pocket or bag / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Remote release. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options (or steering wheel paddle shift levers) to select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-04 | 19-06-2021

# KIA PROCEED

 
**5 DOOR ESTATE  
 5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

205/60 R16  
 235/45 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models feature a switch controlled power tailgate.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or handbag (or insert the fold-away key into ignition switch) / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Remote release. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 split sections (some models have a 40:20:40 split) which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-05 / 19-06-2021

# KIA XCEED

 
**5 DOOR SUV  
 5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

205/60 R16  
 235/45 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 50 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch to lock the doors from the inside. Auto locking of doors on pulling away. Some vehicles feature a keyless entry system.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** — Centrally locked. Use the key or remote control to unlock / open. Some models feature a switch controlled power tailgate.
- Adjusting door mirrors?** — Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** — Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it (or press the central locking switch). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or handbag (or insert the fold-away key into ignition switch) / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** — Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Electric charging?** — Charging port located under flap on front nearside. Centrally locked. Lightly press the edge of the flap to open it. Charge via a regular 230V household socket or public charging station. Charge at a public charging station (3.3kW) up to 100% in approximately 2 hours 15 minutes. A charging indicator is located within speaker grille in middle of dashboard. 3 LED lights indicate charging status - also visible from outside the vehicle. SatNav system will indicate electric charging stations. Engine will also partially recharge the battery when driving at a constant speed, and during deceleration and braking.
- Releasing the bonnet?** — Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** — The rear seat is divided into 40:20:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** — Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-06 / 19-06-2021

**KIA XCEED PHEV** HYBRID

 
**5 DOOR HYBRID SUV**  
**5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/65 R15  
 205/50 R16

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 48.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles may be fitted with an alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Boot is fitted with luggage net hooks.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door. Some models feature an electric folding facility.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Place ignition key in starter key slot to right of steering wheel. Turn the key to start / stop. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the remote release button on the driver's door. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. The seats feature a slide and recline option. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-07 / 23-06-2018

# KIA VENGA

**5 DOOR HATCHBACK**  
**5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release (not shown)
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

 
- 205/65 R16
- 215/55 R17
- 225/45 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).



## CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 70.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

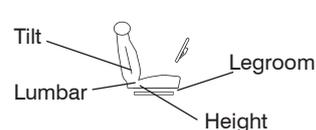

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Locking the doors?** Key / remote control operated central dead locking. Depress the centre console central locking switch to lock the doors from the inside. Auto locking of doors on vehicle motion. Some vehicles feature a keyless entry system.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted, roof mounted switchgear is used to control the electric tilt / slide panoramic sunroof.
- Using child door locks?** Located on the edge of the rear doors. Press the central locking switch to activate. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electric parking brake is on. Use a normal ignition key start/stop procedure, or some vehicles are fitted with an engine start/stop button (simply carry the key in your pocket or handbag, and press the button to start or stop the engine). Select desired gear. Release electric parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start/stop technology where the engine switches off at standstill or when idling - just depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Remote release. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be separately folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). For manual selection of gears use the **D+** or **D-** options to select gears. Whenever the vehicle is at a standstill apply the electric parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-08 / 18-05-2018

# KIA OPTIMA


**4 DOOR SALOON**  
**5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Engine Start / Stop

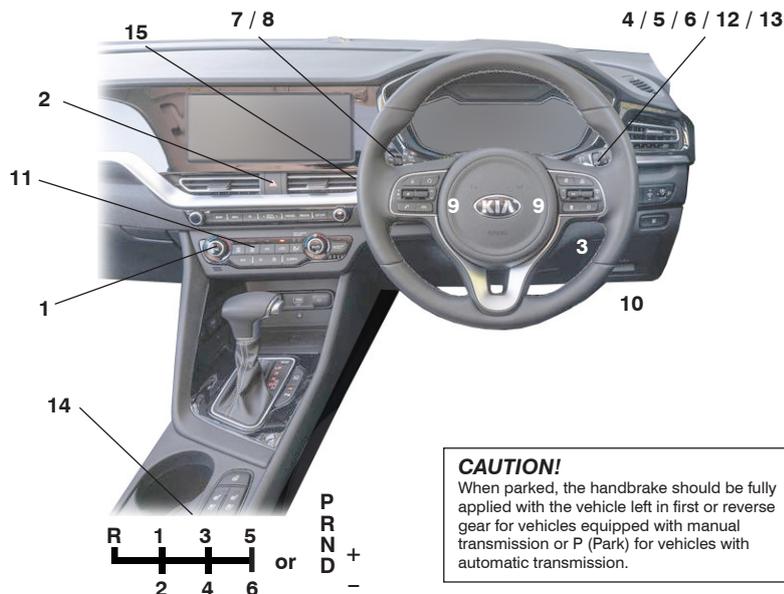

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

- 205/60 R16
- 215/55 R17
- 225/45 R18

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 45.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Anti-theft alarm.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Press lower right dashboard switch for remote release.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or handbag (or insert the fold-away key into ignition switch) / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the remote release button on the driver's door. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into 60:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To remove it, release the seat lock and slide / lift it out. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.
- Using the hybrid mode?** Hybrid power: electric power is used when starting from a stop; mid-acceleration uses electric power; full acceleration uses electric motor and petrol engine; cruising uses hybrid power assisting the main petrol power; during deceleration and braking the electric hybrid battery energy regenerates

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Engine Start / Stop

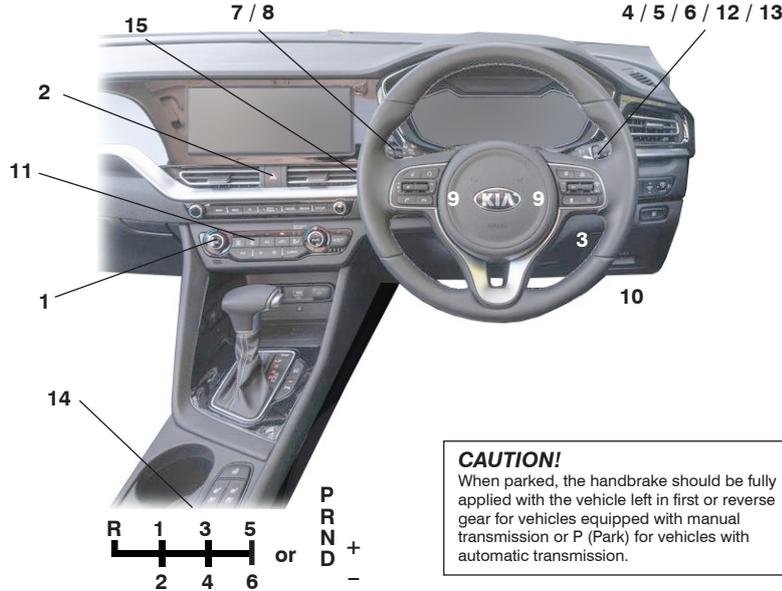

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

205/60 R16  
 225/45 R18

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 45.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.

### Anti-theft system?

Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Anti-theft alarm.

### Opening the boot?

— Centrally locked. Use the key or remote control to unlock / open. Press lower right dashboard switch for remote release.

### Adjusting door mirrors?

Electric adjustment operated by the control pad on the driver's door.

### Opening the windows?

— Electric front and rear operated via control buttons on the driver's door.

### Operating the sunroof?

If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

— Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked.

### Starting the engine?

Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or handbag (or insert the fold-away key into ignition switch) / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.

### Opening fuel filler cap?

— Located under flap on rear nearside. Centrally locked. Press the remote release button on the driver's door. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.

### Electric charging ?

— Charging port located under flap on front nearside. Centrally locked. Lightly press the edge of the flap to open it. Charge via a regular 230V household socket or public charging station. Charge at a public charging station (3.3kW) up to 100% in approximately 2 hours 15 minutes. An in-cable control box uses a colour display to indicate battery charging status. SatNav system will indicate electric charging stations. Engine will also partially recharge the battery when driving at a constant speed, and during deceleration and braking. Hybrid power: electric power is used when starting from a stop; mid-acceleration uses electric power; full acceleration uses electric motor and petrol engine; cruising uses hybrid power assisting the main petrol power; during deceleration and braking the electric hybrid battery energy regenerates.

### Releasing the bonnet?

— Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.

### Folding the rear seats?

— The rear seats are divided into 60:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To remove it, release the seat lock and slide / lift it out. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

**Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### How to drive an automatic?

Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever at a standstill apply the parking brake.

 


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

225/60 R17  
 245/45 R19

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 62.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Anti-theft alarm.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Press lower right dashboard switch for remote release.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the slot to activate it. Or press the central locking switch on the driver's door. Doors also auto-lock on vehicle motion. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or handbag (or insert the fold-away key into ignition switch) / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the remote release button on the driver's door. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into 60:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To remove it, release the seat lock and slide / lift it out. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-12 / 19-06-2021

# KIA SPORTAGE

 
**SUV 2X4 OR 4X4**  
**5 DOOR / 5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

225/45 R18  
 225/40 R19  
 225/35 R19

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 60.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock doors from the inside. Doors will also auto-lock on vehicle motion. For keyless models: retain the key in your pocket or bag to enable auto opening and unlocking when in close proximity to vehicle.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Anti-theft alarm.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Press switch for remote powered release.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** All doors are centrally locked. Located on the edge of the rear doors. Press the child locking switch to activate. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or bag, press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine. The parking brake will normally auto engage and release.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the remote release button on the driver's door. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into 60:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **The vehicle is not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Change gears up or down using the steering wheel mounted paddle shift levers. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-13 / 20-08-2022

# KIA STINGER


**5 DOOR SALOON / HATCHBACK**  
**5 SEATS**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

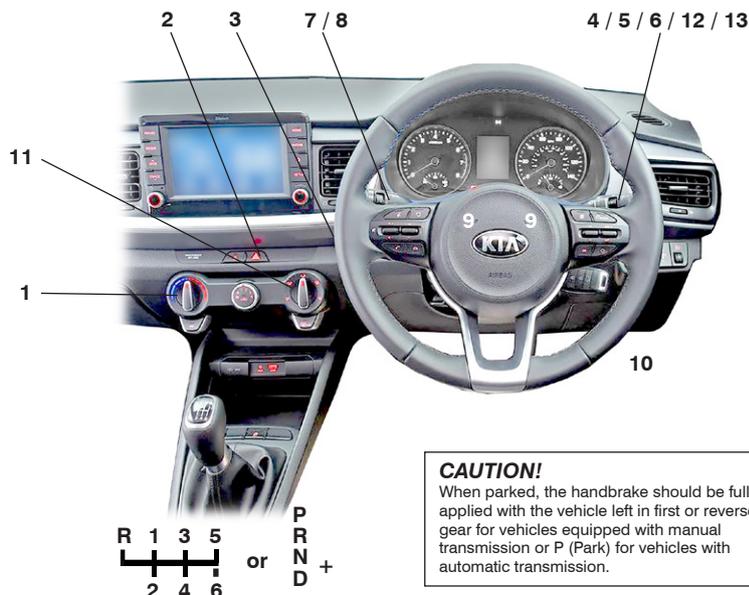

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/55 R16  
 205/55 R17

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 45.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE


- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking button on centre console to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Press the centre console central locking button to lock them. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or handbag (or insert the fold-away key into ignition switch) / press the engine start/stop button on the dashboard to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The second and third rear seat rows are divided into 60:40 sections which can be separately flat-folded. Cargo floor can be flush or lowered to increase load space. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

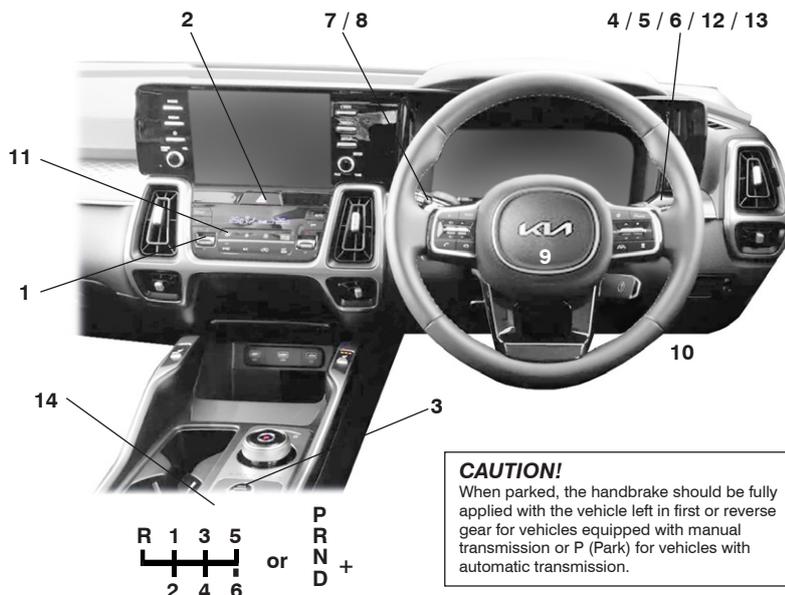

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

235/65 R17  
 235/55 R19  
 255/45 R20

Some models may be fitted with an electronic tyre pressure monitor.  
 Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or repaired tyres.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 67.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** — Key / remote control operated central dead locking. Depress the central locking button on centre console to lock the doors from the inside. For keyless opening, retain the key in your pocket or bag to enable auto unlocking when in close proximity to vehicle.
- Anti-theft system?** — Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Vehicles are fitted with an alarm. Visible VIN plate.
- Opening the boot?** — Centrally locked. Use the key or remote control to unlock / open. Smart power tailgate opening and closing controlled by foot gesture activation of sensors on underside of rear bumper.
- Adjusting door mirrors?** — Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** — Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** — If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** — Press the centre console central locking button to lock them. Check from inside that the doors are securely locked.
- Starting the engine?** — Ensure gear selector is in neutral (or P if automatic) and electronic parking brake is on. Retain the smart key in your pocket or bag, press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology where the engine switches off when at standstill, gears are in neutral and foot pedals are not depressed - just depress the clutch or accelerator to instantly restart the engine. The parking brake will normally auto engage and release.
- Opening fuel filler cap?** — Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** — Pull bonnet release lever located on the right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** — The second and third rear seat rows are divided into 60:40 and 50:50 sections respectively which can be separately flat-folded. Cargo floor can be flush or lowered to increase load space. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** — **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** — Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Use **D+** or **D-** to manually select gears. Change gears up or down using the steering wheel mounted paddle shift levers. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake. Use the mode selector dial to choose various driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-KIA-15 / 20-08-2022

# KIA SORENTO

**5 DOOR MPV  
 7 SEATS**