

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## MAZDA VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Mazda 3</b>	5 seats / 5 door hatchback / 4 door saloon
4		
5		
6		
7		
8		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.





**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
			

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.


Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

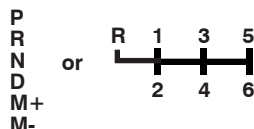

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

- 195/65 R15
- 195/55 R15
- 205/55 R16
- 205/50 R17

**NOTE: SHOULD THIS VEHICLE NOT BE SUPPLIED WITH A SPARE WHEEL, PLEASE REFER TO THE TELEPHONE NUMBERS SHOWN ON THE TAX DISC HOLDER.**

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
55.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control (keyless) operated central deadlocking. Auto door locking when vehicle is moving.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Or open from inside using the remote release in the driver's footwell.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the key slot to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Keyless vehicle entry. Ensure gear selector is in neutral (or P if automatic) and handbrake is on. Press the engine start/stop button to start or stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto start/stop "smart idling" technology whereby the engine shuts off automatically when stationary - simply depress the clutch to instantly restart the engine.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Release it using the internal remote release. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the carpet cover to access the storage area housing the space saver spare wheel, tools and jack. To change the wheel: move the vehicle to firm / level ground. Turn the engine off, select first gear. Apply the handbrake. Loosen the wheel nuts by turning them anticlockwise (do not remove them) before jacking up. Only use the specific reinforced jack points on the underside of the vehicle. Fit the jack. Crank the jack to lift the vehicle. Completely loosen / remove nuts and wheel and replace with the spare. Refit / tighten the wheel nuts. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually select gears use the M+ or M- selector (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.