

INDEX - VICs (VEHICLE INSTRUCTION CARD)

MERCEDES VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	A Class	5 seats / 5 door hatchback
4	B Class	5 seats / 5 door MPV
5	GLA Class	5 seats / 5 door SUV 4x4
6	GLC Class	5 seats / 5 door SUV
7	GLE Class Coupe	5-7 seats / 5 door 4x4 SUV
8	GLE Class	5-7 seats / 5 door 4x4 SUV
9	GLS Class	5-7 seats / 5 door 4x4 SUV
10	GLB Class	5-7 seats / 5 door 4x4 SUV
11	CLS Class	4 seats / 4 door coupe
12	C Class	5 seats / 5 door estate / 4 door saloon
13	E Class	5 seats / 4 door saloon / 5 door estate
14	S Class	5 seats / 4 door saloon
15	Vito Tourer	5-7 seats / 5 door / MPV
16	V Class	7 seats / 5 door / MPV
17	Vito Van	2-3 seats / panel van
18	SLC Class	2 seats / 2 door convertible
19	Sprinter Van	3 seats / panel van

 
 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

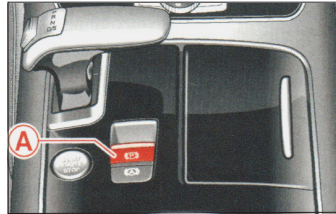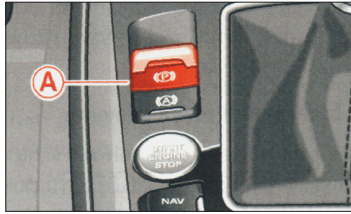

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake
- 15 Automatic gear change lever (if fitted) (some models may have paddle shift levers as well)



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
225/45 R17
205/55 R18
225/40 R18
235/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.
Note: driving speeds and travel distances are restricted when using the tyre repair kit.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Depress the central locking button on the driver's door to lock the doors from the inside, or depress the door locking knob.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric panoramic sunroof operated by roof mounted switchgear.

Using child door locks?

Fitted to the rear passenger doors. To operate press the central locking switch on the driver's door. Ensure the doors are securely locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press the clutch or accelerator to instantly restart the engine.

Opening fuel filler cap?

Centrally locked. Located under flap on rear nearside. Lightly press the edge of the flap to open it, and twist the cap off anticlockwise. Press the flap closed.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the release lever which protrudes through the bonnet grille to release the bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are not normally supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** The tools and jack are stored in the side storage bins. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears use the righthand steering wheel stalk shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). If fitted: use + or - switch (or paddle shift levers) to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-01 / 10-01-2019

MERCEDES A CLASS

**5 SEATS
5 DOOR HATCHBACK**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
225/45 R17
225/40 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Depress the central locking button on the driver's door to lock the doors from the inside, or depress the door locking knobs.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sunroof operated by roof mounted switchgear.
- Using child door locks?** Fitted to the rear passenger doors. To operate press the central locking switch on the driver's door. Check the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just select first gear to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the edge of the flap to open it, and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the release lever which protrudes through the bonnet grille to release the bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. (The rear seat and front passenger seat can also be removed, to remove them: fold them flat and unlock the floor locks and slide/lift the seats out. To replace them: slide/lock them securely in place).
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the temporary spare tyre. The tools and jack are stored in the side storage bins. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-02 / 30-09-2017

MERCEDES B CLASS

**5 SEATS
5 DOOR MPV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

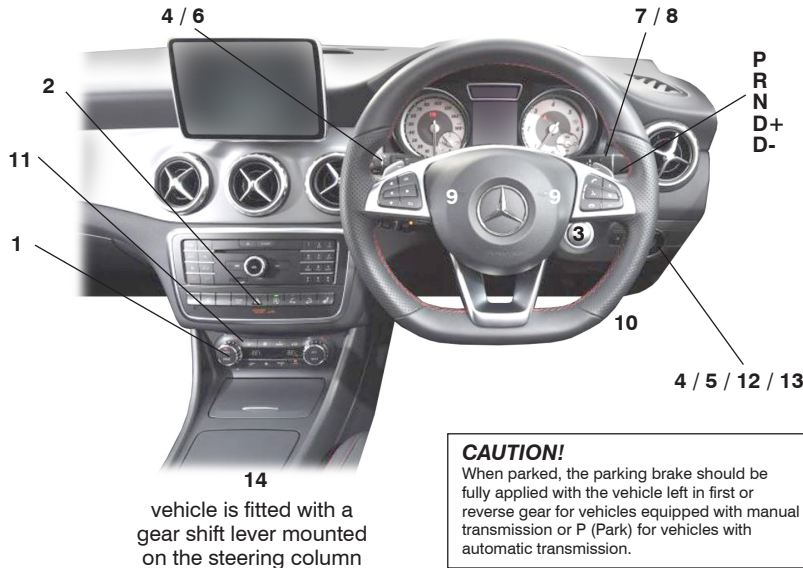

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

235/50 R18
235/45 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using runflat tyres which have been punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the door locking knobs or central locking button on the driver's door to lock from the inside.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with a powered system to automatically open/close the tailgate. Some vehicles feature foot gesture opening - activated by sensors on underside of rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric glass panoramic sunroof, operated by roof mounted switchgear.
- Using child door locks?** To operate press the central locking switch on the driver's door to lock or unlock them. Ensure the doors are securely locked.
- Starting the engine?** Ensure gear selector is in N or P if automatic and parking brake is on. For keyless starting, just keep the key in your pocket or bag and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press clutch or accelerator to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open it, and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- Folding rear seats?** The rear seat is divided into 60:40 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare tyre or tyre repair kit (some vehicles may be fitted with runflat tyres which can be driven at reduced speeds and distance when punctured). **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears use the righthand steering wheel stalk shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). If fitted: use the steering column mounted + or - paddle shift levers to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-03 / 03-02-2020

MERCEDES GLA CLASS

5 SEATS
5 DOOR SUV (2X4 OR 4X4)

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



vehicle is fitted with a gear shift lever mounted on the steering column

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

235/65 R17
235/60 R18
235/55 R19
255/50 R19
255/45 R20

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50 litres (diesel) / 66 litres (petrol)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

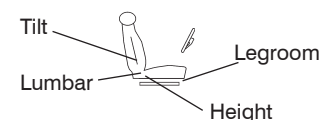

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the door locking knobs or central locking switch on the driver's door to lock from the inside.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with a powered system to automatically open/close the tailgate. Some vehicles feature foot gesture opening - activated by sensors on underside of rear bumper.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric glass panoramic sunroof with electric sunblind, operated by roof mounted switchgear.

Using child door locks?

To operate press the central locking switch on the driver's door to lock or unlock them. Ensure the doors are securely locked.

Starting the engine?

Ensure gear selector is in N or P if automatic and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - depress to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Press the edge of the flap to open it, and twist the cap off anticlockwise.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch which protrudes through the bonnet grille to release the bonnet.

Folding rear seats?

The rear seat is divided into 60:40 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears use the righthand steering wheel stalk shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). If fitted: use + or - switch to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Use the dynamic selector to quickly choose four road driving modes.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



vehicle is fitted with a gear shift lever mounted on the steering column

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

275/45 R21
315/40 R21
285/40 R22
325/35 R22

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
93 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

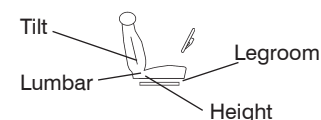

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the door locking knobs or central locking switch on the driver's door to lock from the inside.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with a powered system to automatically open/close the tailgate. Some vehicles feature foot gesture opening - activated by sensors on underside of rear bumper.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric glass panoramic sunroof with sunblind, operated by roof mounted switchgear.

Using child door locks?

To operate press the central locking switch on the driver's door to lock or unlock them. Ensure the doors are securely locked.

Starting the engine?

Ensure gear selector is in N or P if automatic and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - depress to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Press the edge of the flap to open it, and twist the cap off anticlockwise.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch which protrudes through the bonnet grille to release the bonnet.

Folding rear seats?

The rear seat is divided into 66:33 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears use the righthand steering wheel stalk shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). If fitted: use + or - switch to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Use the dynamic selector to quickly choose four road driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-05 / 11-02-2018

MERCEDES GLE COUPE

5 SEATS
5 DOOR / 4X4 / SUV COUPE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



Auto

vehicle is fitted with a gear shift lever mounted on the steering column

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

275/50 R20
285/40 R22
325/35 R22

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
85 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

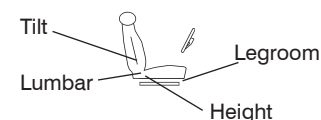

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the door locking knobs or central locking switch on the driver's door to lock from the inside.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with a powered system to automatically open/close the tailgate. Remote boot release. Some vehicles feature foot gesture opening - activated by sensors on underside of rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric glass panoramic sunroof with sunblind, operated by roof mounted switchgear.
- Using child door locks?** To operate press the central locking switch on the driver's door to lock or unlock them. Manually operated child locks on rear doors. Ensure the doors are securely locked.
- Starting the engine?** Ensure gear selector is in N or P if automatic and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press foot pedals to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open it, and twist the cap off anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- Folding rear seats?** The rear seat is divided into 66:33 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears use the righthand steering wheel stork shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use gear shift paddles to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Use the dynamic selector to quickly choose four road driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-06 / 10-01-2018

MERCEDES GLE

5 SEATS
5 DOOR / 4X4 / SUV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



Auto

vehicle is fitted with a gear shift lever mounted on the steering column

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

275/50 R20
285/40 R22
325/35 R22

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
85 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

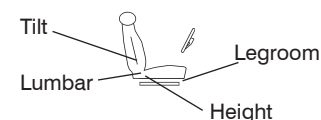

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the door locking knobs or central locking switch on the driver's door to lock from the inside.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser. Visible VIN plate.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with a powered system to automatically open/close the tailgate. Remote boot release. Some vehicles feature foot gesture opening - activated by sensors on underside of rear bumper.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric glass panoramic sunroof with sunblind, operated by roof mounted switchgear.

Using child door locks?

To operate press the central locking switch on the driver's door to lock or unlock them. Manually operated child locks on rear doors. Ensure the doors are securely locked.

Starting the engine?

Ensure gear selector is in N or P if automatic and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press foot pedals to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open it, and twist the cap off anticlockwise. Press the flap closed.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch which protrudes through the bonnet grille to release the bonnet.

Folding rear seats?

The rear seat is divided into 66:33 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears use the righthand steering wheel stalk shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use gear shift paddles to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Use the dynamic selector to quickly choose four road driving modes.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

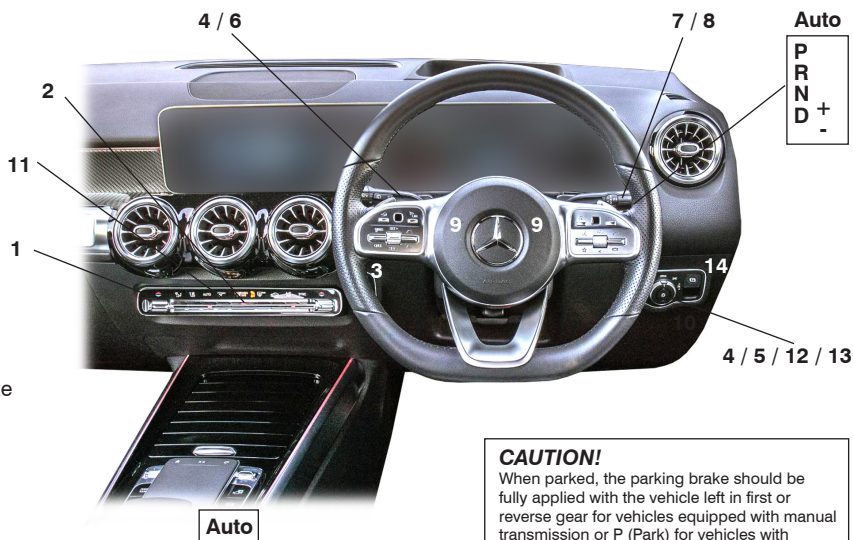

vehicle is fitted with a gear shift lever mounted on the steering column

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/45 R18
235/50 R19
255/40 R20

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
52 litres / 60 litres (4MATIC)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the central locking switch on the driver's door to lock from the inside.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser. Visible VIN plate.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Vehicles are fitted with a powered system to automatically open/close the tailgate. Remote boot release. Some vehicles may feature foot gesture remote opening - activated by motion sensors on underside of rear bumper.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric glass panoramic glass sunroof with sunblind, operated by roof mounted switchgear.

Using child door locks?

To operate press the central locking switch on the driver's door to lock or unlock them. Manually operated child locks on rear doors. Ensure the doors are securely locked.

Starting the engine?

Ensure gear selector is in N or P if automatic and parking brake is on. Keyless starting, just keep the key in your pocket or bag and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press the accelerator foot pedal to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under flap on rear nearside. Lightly press the edge of the flap to open it, and twist the cap off anticlockwise. Press the flap closed.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's footwell. Pull the catch which protrudes through the bonnet grille to release the bonnet.

Folding rear seats?

The rear seat rows are divided into 66:33 sections which can be flat-folded separately. To release the seat press the seat unlatching catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears use the righthand steering wheel stalk shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Where fitted, use the gear shift paddle levers to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Use the rotary dynamic selector to quickly choose various road driving modes and 4x4 modes for vehicles with 4WD.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-08 / 03-02-2020

MERCEDES GLB

5-7 SEATS
5 DOOR / 4X4 / SUV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



Vehicle is fitted with a dash mounted parking / hand brake, located on lower right of dashboard.

Auto

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

245/40 R19, 275/35 R19
245/35 R20, 275/30 R20

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66 or 80 litres (diesel / petrol)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central-locking button on the driver's door to lock them from the inside.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Or use the internal remote boot release.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric sliding glass sunroof, operated by roof mounted switchgear.
- Using child door locks?** Depress the central-locking button on the driver's door to lock them. Check doors are secure before use.
- Starting the engine?** Ensure gear selector is in neutral (N or P if automatic) and electronic parking brake is on. Models feature keyless starting, just keep the key in your pocket or bag, and press engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press the clutch or accelerator to instantly restart the engine.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open it, and twist the cap off anticlockwise. Press flap closed.
- Folding the rear seats?** The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears move the shift lever stork mounted on the right of the steering wheel. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - (or the right and left paddle shift levers) to manually change gears up or down. Whenever the vehicle is at a standstill apply the parking brake.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Paddle Gear Shift

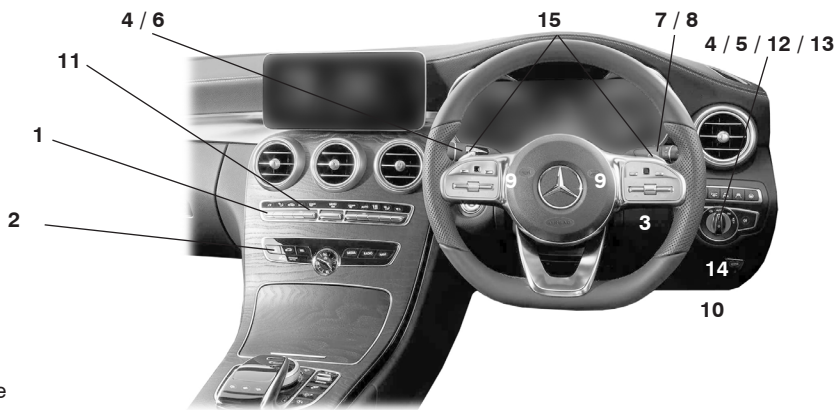

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/70 R17
225/45 R18 and 245/40 R18
225/40 R19 and 255/35 R19
245/40 R18 and 265/40 R18
245/35 R19 and 265/35 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap). Models are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the central locking button on the driver's door to lock the doors from the inside.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Or use the internal remote boot release located on the driver's door. Models may feature hands-free foot gesture operated remote boot opening via foot activation of sensors below the rear bumper.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric glass panoramic sunroof, operated by roof mounted switchgear.

Using child door locks?

Fitted to the rear passenger doors. To operate press the central locking switch on the driver's door. Ensure the doors are securely locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. (Some models feature an engine start/stop button, just push to stop or start the engine). For keyless models, just keep the key in your pocket or bag and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just press clutch or accelerator (auto) to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under a flap on the rear offside. Lightly press the edge of the flap to open it, and twist the fuel cap off anticlockwise.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch protruding through the bonnet grille to release the bonnet.

Folding the rear seats?

The rear seat is divided into 40:20:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999. Lift the recess cover inside the boot to access the space saver spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down, or use the steering wheel mounted paddle shift levers. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-10 / 14-04-2019

MERCEDES C CLASS

5 SEATS
5 DOOR ESTATE / 4 DOOR SALOON

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake
- 15 Paddle Gear Shift

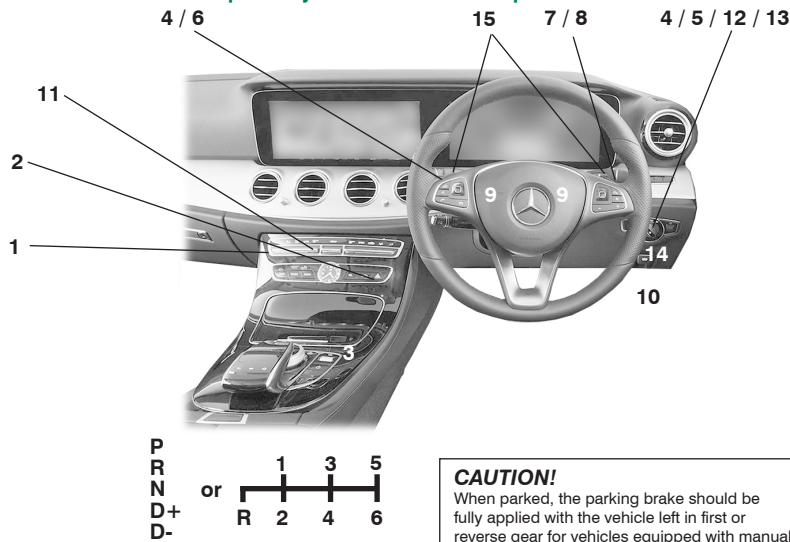

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/55 R17
245/45 R18 and 275/40 R18
245/40 R19
275/35 R19
245/35 R20
275/30 R20

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap). Models are fitted with an electronic tyre pressure monitor.
Note: driving speeds and travel distances are restricted when runflat tyres that have been punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central dead locking. Depress the central locking buttons on the driver's door to lock and unlock the doors from the inside.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser engine is turned off.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open. Saloons: use the internal remote boot release to unlock it. Estate models: use the automatic powered tailgate button in the rear compartment and on driver's door. Models may feature hands-free foot gesture operated remote boot opening via foot activation of sensors below the rear bumper.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control switches on the driver's door.

Operating the sunroof?

If fitted: electric panoramic sunroof, operated by roof mounted switchgear.

Using child door locks?

To operate press the manual locking switch for the rear doors to lock or unlock them. Ensure the doors are securely locked.
Note: all doors auto lock on vehicle motion.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. (Some models feature an engine start/stop button, just push to stop or start the engine). For keyless models, just keep the key in your pocket or bag and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just press clutch or accelerator (auto) to instantly restart.

Opening fuel filler cap?

Centrally locked. Located under a flap on the rear offside. Lightly press the edge of the flap to open it, and twist the fuel cap off anticlockwise.

Folding rear seats?

The rear seat is divided into 40:20:40 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.

How to change a tyre?

Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999. Lift the recess cover inside the boot to access the space saver spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.

How to drive an automatic?

To change gears use the rotary selector dial to select the driving mode. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down, or use the steering wheel mounted paddle shift levers. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-11 / 14-04-2019

MERCEDES E CLASS

5 SEATS
4 DOOR SALOON / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine start/stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Parking brake



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

245/45 R19 + 275/40 R19
245/40 R20 + 275/35 R20

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.
Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

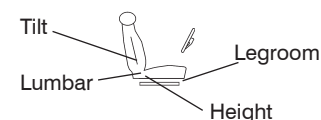

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the central locking button on the driver's door to lock the doors from the inside. Auto door locking.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Use the internal remote boot release located on the driver's door or the auto release on the key.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating the sunroof?** If fitted: electric glass sunroof, operated by roof mounted switchgear.
- Using child door locks?** Fitted to the rear passenger doors. To operate press the central locking switch on the driver's door. Ensure the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (N or P for an automatic) and parking brake is on. Keep the key in your pocket or handbag and just simply press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just select first gear to instantly restart.
- Opening fuel filler cap?** Centrally locked. Press the remote release on the driver's door. Located under flap on rear offside. Press the edge of the flap to open it, and twist the cap off anticlockwise. Press flap closed.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- How to change a tyre?** Lift the recess cover inside the boot to access the standard spare tyre. The tools and jack are stored with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Note: you must fit the steel spare using the dedicated wheel nuts - do not use those from an alloy wheel.
- How to drive an automatic?** To change gears use the steering wheel mounted shift lever (some vehicles may be fitted with paddle shift gear selectors). Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually change gears up or down. Whenever the vehicle is at a standstill apply the parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar.

195/65 R16

Vehicles feature an automatic tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
57.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. All doors auto-lock on vehicle motion. Press the central locking switch to lock or unlock them manually.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch or on locking the vehicle.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in N or P if automatic and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press to instantly restart.
- Opening fuel filler cap?** Located behind a panel, on mid-nearside of vehicle accessed by opening the front passenger door. Lift the edge of the flap to open it, and twist the cap off anticlockwise.
- Opening rear doors?** Vehicle features twin sliding rear doors. Centrally locked. Press driver's door central locking switch to manually lock them.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- Folding rear seats?** The rear seat rows can be flat-folded separately. The third seat row can be removed. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears use the righthand steering wheel stork shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). If fitted: use + or - switch to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-13 / 11-02-2018

MERCEDES VITO TOURER

**9 SEATS
5 DOOR / MPV**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar.

245/45 R18
245/45 R19

Vehicles feature an automatic tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
70.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. All doors auto-lock on vehicle motion. Press the central locking switch to lock or unlock them manually.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch or on locking the vehicle.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some vehicles feature split tailgate opening.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press to instantly restart.
- Opening fuel filler cap?** Located behind a panel, on mid-nearside of vehicle accessed by opening the front passenger door. Lift the edge of the flap to open it, and twist the cap off anticlockwise.
- Opening rear doors?** Vehicle features electric twin sliding rear doors. Centrally locked. Press driver's door central locking switch to manually lock.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- Folding rear seats?** The rear seat rows can be flat-folded separately. The third seat row can be removed. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. Some models also feature swivelling front seats.
- How to change a tyre?** Vehicles are not normally supplied with a spare tyre or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears use the righthand steering wheel stork shift lever and move the lever to change gear. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). If fitted: use + or - switch to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-14 / 30-09-2017

MERCEDES V CLASS

**7 SEATS
5 DOOR / MPV**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
75.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking.
- Anti-theft system?** Most vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening rear doors?** Centrally locked. Use the key or remote control to unlock / open. The vehicle is fitted with hinged rear doors and sliding side panel doors. Cargo securing rings are fitted to the floor to help secure loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the extreme right-side of the dashboard.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in N or P if automatic and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. For models with keyless starting, just keep the key in your pocket or handbag and press engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when the vehicle is motionless, neutral gear is selected, and foot pedals are not depressed - press to instantly restart.
- Opening fuel filler cap?** Located behind a panel, accessed by opening the front passenger door. The access panel is located near the floor next to the B-pillar. Lift the edge of the flap to open it, and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** The tools and jack are stored behind a panel under the drivers seat, accessed from the right-hand side of the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. Note: you must fit the steel spare using the dedicated wheel nuts - do not use those from an alloy wheel.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually change gears up or down. Whenever the vehicle is at a standstill apply the parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/45 R17 + 245/40 R17
225/40 R18 + 245/35 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Depress the door locks or central locking button on the centre console to lock the doors from the inside.
- Anti-theft system?** Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Or use the internal remote boot release located on the driver's door.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Opening the roof?** To raise or lower the convertible roof, press the switch located on the centre console. **IMPORTANT:** Only operate this button when at a complete standstill.
- Starting the engine?** Ensure gear selector is in neutral (N or P) and parking brake is on. Place ignition key in starter switch and use a normal starting routine. Vehicles feature an engine start/stop button, just push the button to stop or start the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected and the vehicle is motionless and foot pedals are not depressed - just select gear to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the edge of the flap to open it, and twist the cap off anticlockwise.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.
- How to change a tyre?** Lift the floor recess cover inside the boot to access the tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use + or - to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



Gear shift lever mounted on steering wheel column



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/65 R16
235/65 R16

Check the tyre pressure table found on the inside of driver's door B-pillar.

Some vehicles may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
65.0 - 71.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central deadlocking. Press the central locking switch on the driver's door to manually lock/unlock the doors.

Anti-theft system?

Vehicles are fitted with an alarm system. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.

Opening rear doors and loading area?

Centrally locked. Use the key or remote control to unlock / open. The vehicle is fitted with hinged rear doors and sliding side panel door(s). Cargo securing rings are fitted to the floor to help secure loads. Some models feature keyless entry / automatic sliding door opening. Load floor is lined with wood.

Adjusting door mirrors? Opening the windows?

Electric internal adjustment operated via a control pad on the driver's door.

Electric front operated via control switches on the driver's door.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake (located on lower right of dashboard) is on. Gears are selected via the steering wheel shift lever (on right hand side). Place ignition key in starter switch. Use a normal starting routine. For keyless starting, just keep the key in your pocket or bag and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just press the clutch or accelerator to instantly restart.

Opening fuel filler cap?

Located behind a panel, accessed by opening the front passenger door. The access panel is located near the floor next to the B-pillar. Press the edge of the flap to open it, and twist the cap off anticlockwise.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Pull the catch which protrudes through the bonnet grille to release the bonnet.

How to change a tyre?

For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999. For information only: The wheel is located in spare wheel bracket below frame end. Use the tools to undo the retaining screws located under small access covers adjacent to the door lock mechanism on the floor, seen when the rear doors are opened. The tools and jack are stored behind a panel under the floor of the passenger footwell, accessed from the passenger side of the vehicle. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. Note: you must fit the steel spare using the dedicated wheel nuts - do not use those from an alloy wheel.

How to drive an automatic? To change gears use the steering wheel mounted shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MRC-17 / 10-01-2019

MERCEDES SPRINTER VAN

3 SEATS
2WD (OR PERMANENT 4X4) PANEL VAN