

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## MG VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>MG 3</b>	5 seats / 5 door hatchback
4	<b>MG ZS</b>	5 seats / 5 door SUV
5	<b>MG ZS EV</b> <span>ELECTRIC</span>	5 seats / 5 door SUV / Electric
6	<b>MG 4 EV</b> <span>ELECTRIC</span>	5 seats / 5 door SUV / Electric
7	<b>MG HS</b>	5 seats / 5 door SUV
8	<b>MG HS PHEV</b> <span>HYBRID</span>	5 seats / 5 door SUV / Plug-in Hybrid

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Fuel Flap Release



## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

185/70 R14  
 195/55 R16

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 45 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

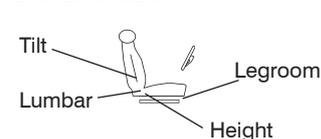

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the driver's door to lock the doors from the inside. Auto door locking on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use a key to twist the knob on the edge of the rear doors to activate child proof locks. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Depress the clutch pedal. Use a normal starting routine. Vehicles also feature automatic engine start/stop technology - whereby the engine automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - engine instantly restarts on depression of the clutch. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Pull remote release lever to lower right of steering wheel. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located at rear left of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/65 R15  
 215/50 R17

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 48 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

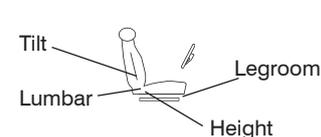

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto-lock on vehicle motion.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open. The boot features a split level load level to accommodate various load depths.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the lower right of the dashboard.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, press the central locking switch to lock all doors, or insert the ignition key into slot on edge of rear door and turn to activate child proof locking on the door. Repeat process for each rear door. Check from inside that the door is securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Depress the clutch pedal. Use a normal starting routine. Vehicles also feature automatic engine start/stop technology - whereby the engine automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - engine instantly restarts on depression of the accelerator. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Note: the electronic parking brake will normally auto release).
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Pull remote release lever to lower right of steering wheel. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located at rear left of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Press the unlock button on the gear lever to shift between gears. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the + or - options to manually change gears. Use the S mode for sportier gear responses. Whenever the vehicle is at a standstill apply the handbrake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

215/50 R17

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Electric vehicle powered by lithium ion battery

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

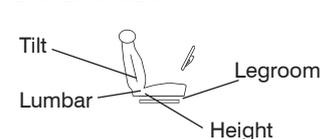

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central high security dead locking. Keyless entry - just retain key in your bag or pocket and vehicle automatically unlocks. Depress the central locking switch on the centre console to lock the doors from the inside. All doors will auto-lock on vehicle motion.

### Anti-theft system?

Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.

### Opening boot/tailgate?

Centrally locked. Keyless unlocking. Pull the release handle to open. The boot features a split level load level to accommodate various load depths.

### Adjusting door mirrors?

Electric adjustment operated by the control pad on the lower right of the dashboard.

### Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

### Operating the sunroof?

If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, press the central locking switch to lock all doors, or twist slot on edge of rear door to activate child proof locking on the door. Repeat the process for each rear door. Check from inside that the door is securely locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Retain the key in your pocket or bag and press the engine start/stop switch to start or stop the engine. Depress the brake pedal. Use a normal starting routine. Vehicles feature automatic electronic motor start/stop technology - whereby the electronic motor automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - motor instantly restarts on depression of the accelerator. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the electronic parking brake will normally auto release).

### Electric charging ?

Charging socket is located under the marque badge on the front grille. Centrally locked. A water-cooled 44.5 kWh lithium ion battery provides a driving range up to 163-231 miles (dependent on driving style and regenerative braking) and 105 kWh of power. A toggle switch in the centre console can select one of three levels of regenerative braking help recharge the battery to maximise driving range. Recharging takes 6.5 hours with a 7kW domestic charger, or rapid charge to 80% capacity in 40 minutes using a Type 2 CCS public charging point.

### Releasing the bonnet?

Pull bonnet release lever located at rear left of front passenger footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### How to drive an automatic?


Use the rotary gear selector to shift between gears. Select N for neutral, P when leaving the vehicle, R for reversing. For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select ECO, NORMAL or SPORT driving modes to match your driving needs. Whenever the vehicle is at a standstill apply the parking brake.

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Rotary Gear Selector
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

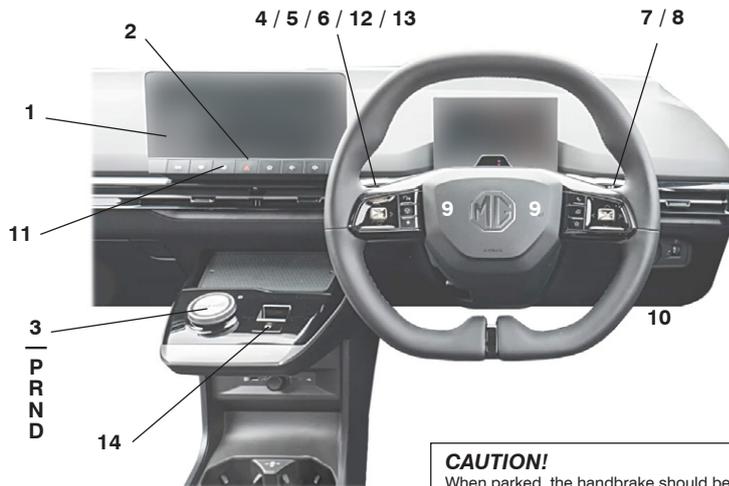

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar.

215/50 R17 (2.5 bar)

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

- Electric vehicle powered by a Lithium ion battery
- Fitted with either 51kWh or 64kWh battery
- Electric motor located at rear
- Rear wheel drive

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

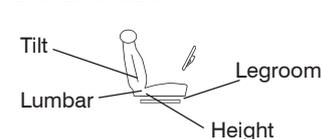

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

— Key / remote control operated central high security dead locking. Keyless entry - just retain key in your bag or pocket. For keyless locking - exit vehicle and press button on front door handle to lock all doors. To unlock, press the button on front door handle and pull the handle. Depress the central locking switch on the driver's door to lock the doors from the inside. All doors will auto-lock on vehicle motion.

### Anti-theft system?

— Remote anti-theft alarm. Passive arming of electronic engine immobiliser on locking the vehicle.

### Opening boot/tailgate?

— Centrally locked. Keyless unlocking. Pull the release handle to open. On some models the boot features a split level load level to accommodate various load depths. Use the remote key to remotely release the tailgate.

### Adjusting door mirrors?

— Electric adjustment operated by the control pad on the lower right of the dashboard.

### Opening the windows?

— Electric front and rear operated via control buttons on the driver's door.

### Operating the sunroof?

— If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

— Located on the edge of the rear doors, press the central locking switch to lock all doors, or twist slot on edge of rear door to activate child proof locking for each door. Check from inside that the door is securely locked.

### Starting the engine?

— Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Retain the key in your pocket or bag. Unlock the vehicle. Sit on driver's seat. Fasten seatbelt. Fully close the driver's door. Depress the brake pedal to enter the READY MODE. Select D gear, or shift into R gear to reverse. Use the rotary gear selector to select gears (P, R, N and D). Vehicles feature automatic electronic motor start/stop technology - whereby the electronic motor automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - motor instantly restarts on depression of the accelerator. Parking brake will normally auto release. Gently press the accelerator to move the vehicle.

### Electric charging ?

— **RANGE:** Range of up to 218 miles for 51kWh battery (281 miles with the 64kWh battery). **BATTERIES:** Fitted with either: 51kWh battery - max rapid charging, DC 117kW; or 64kWh battery - max rapid charging - 135kW. **CHARGE PORT:** Charging socket is located under a flap on rear nearside. Lightly press flap to open. Centrally locked. Remove the plug cover to reveal the combined charging port (Combined Type 2 and CCS): Slow and Fast Charge Port - 7 Pin - Type 2 Plug; and a Rapid Charge Port - 7 Pin and 2 Pin - CCS Type Plug. **CHARGING:** 10% to 80% charge in less than 35-40 minutes (dependent on model variant). Vehicle also uses four-mode regenerative braking to help recharge the battery (Auto, 1, 2, 3 modes). **DOMESTIC:** Emergency use - charging time (using 2.2kW 3-Pin Domestic plug), 10 to 100% charge in: (51kWh battery) 20.5 hrs or 26.0 hrs (64kWh battery). **FAST CHARGER:** Estimated charging time (7kW fast charger), 10 to 100% charge in: 7.5hrs (51kWh battery) or 9.0 hrs (64kWh battery). **PUBLIC CHARGER:** Estimated charging time (150kW DC public rapid charger), 10 to 80% charge in: 39 min (51kWh battery) or 35 min (64kWh battery). **IMPORTANT:** Maximum charging rates and charging times will vary on vehicle and climatic conditions. **OPTIMISE CHARGING:** Charge the electric car battery between 20%-80% to preserve the lifespan of the battery pack. Avoid overcharging. Reduce exposure to extreme temperatures (cold or heat) which adversely affect battery and travel range. **ADDITIONAL:** 7kW on-board AC charger. On some models - behind the Rotary Gear Selector sits a wireless charging pad located on the floating console.

### Releasing the bonnet?

— Pull bonnet release lever located in passenger footwell. Unhook catch under bonnet.

### Folding the rear seats?

— The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock.

### How to change a tyre?

— Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### How to drive an automatic?

— Use the rotary gear selector to shift between gears. Select N for neutral, P when leaving the vehicle, R for reversing. For normal driving select D where the transmission will use all available forward gears automatically. Select ECO, SPORT, STANDARD, SNOW or CUSTOM driving modes to match your driving needs. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MG-04 / 10-03-2023

# MG 4 EV

ELECTRIC


5 SEATS  
 5 DOOR SUV / ELECTRIC

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

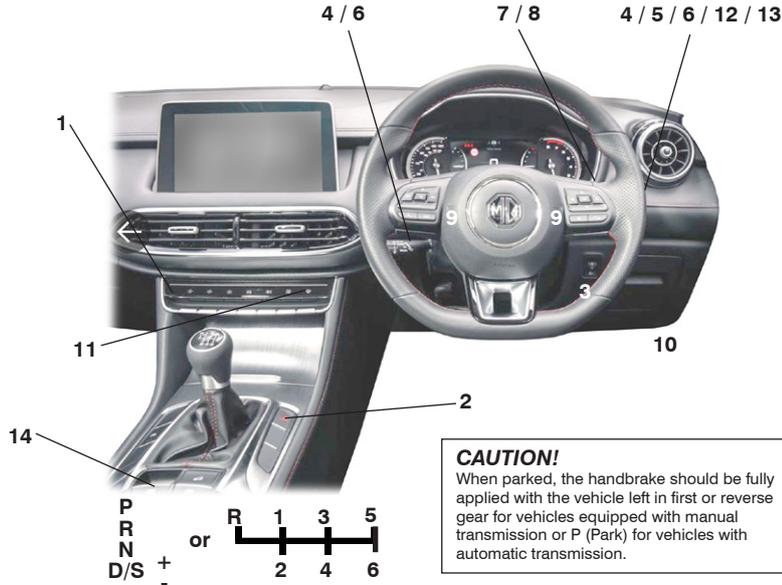

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

215/60 R17  
 235/50 R18

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 55 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security dead locking. Depress the central locking switch on the driver's door to lock the doors from the inside. All doors will auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of alarm and electronic engine immobiliser. Auto locking. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open. The boot features a split level load level to accommodate various load depths. Some models may feature auto opening.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide glass panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, press the central locking switch to lock all doors, or insert the ignition key into slot on edge of rear door and turn to activate child proof locking on the door. Repeat process for each rear door. Check from inside that the door is securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Depress the clutch pedal. Keep the key in your pocket or bag, press the engine start/stop button to start or stop the engine. Vehicles also feature automatic engine start/stop technology - whereby the engine automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - engine instantly restarts on depression of the clutch or accelerator. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the parking brake will normally auto release).
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located at rear left of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Press the unlock button on the gear lever to shift between gears. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the + or - options to manually change gears. Use the S mode for sportier gear responses. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MG-05 / 03-02-2020

# MG HS

**5 SEATS  
 5 DOOR SUV**


design and production by : Drake Enterprises Limited - drakeenterprises@btinternet.com

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**  
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

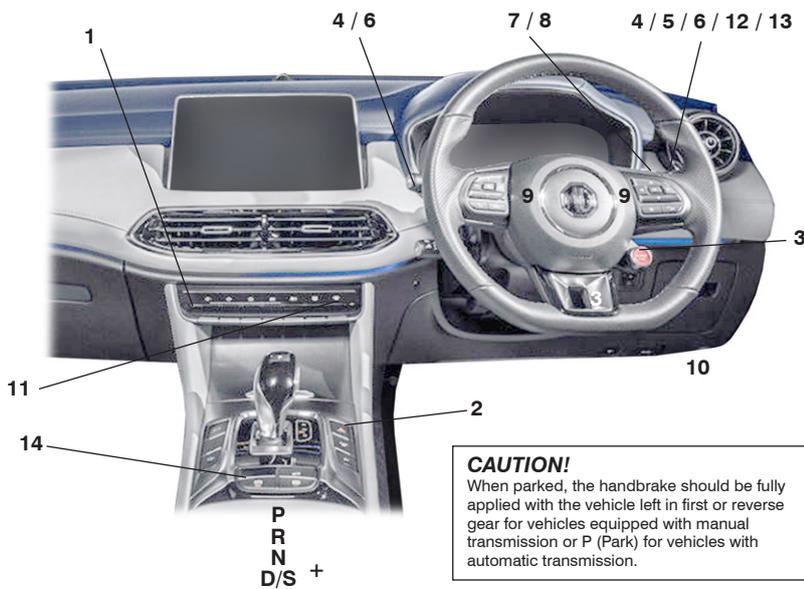

### CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
 Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

235/50 R18

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres or tyres repaired with emergency tyre repair kits.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
 55 litres + hybrid electric

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

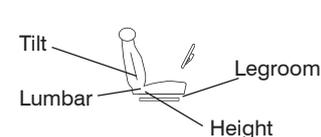

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

> Key / remote control operated central high security dead locking. Keyless entry - just retain the key in your pocket or bag and doors will unlock. Depress the central locking switch on the driver's door to lock the doors from the inside. All doors will auto-lock on vehicle motion.

### Anti-theft system?

> Passive arming of alarm and electronic engine immobiliser. Auto locking. Visible VIN.

### Opening boot/taillgate?

> Centrally locked. Use the key or remote control to unlock / open. Pull the release handle to open. The boot features a split level load level to accommodate various load depths. Some models may feature auto opening controlled by foot gesture activated sensors under the rear bumper.

### Adjusting door mirrors?

> Electric adjustment operated by the control pad on the driver's door.

### Opening the windows?

> Electric front and rear operated via control buttons on the driver's door.

### Operating the sunroof?

> If fitted: Electric tilt / slide glass panoramic sunroof operated by roof mounted switchgear.

### Using child door locks?

> Located on the edge of the rear doors, press the central locking switch to lock all doors, or twist the slot on edge of rear door to activate child proof locking on the door. Repeat the process for each rear door. Check from inside that the door is securely locked.

### Starting the engine?

> Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Depress the brake pedal. Keep the key in your pocket or bag, press the engine start/stop button to start or stop the engine. Vehicles also feature automatic engine start/stop technology - whereby the engine automatically shuts off when vehicle is not moving, gears are in neutral and foot pedals are not depressed - engine instantly restarts on depression of the clutch or accelerator. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the parking brake will normally auto release).

### Hybrid electric use ?

> Hybrid electric motor can deliver up to 43 miles (69 kilometres) solely using electric power. Charging by Type 2 connector. Recharge time: 7 hours for domestic 2.2kW 3-pin plug (emergency use only); 6.5 hours for a 7kW AC installed home charger or 22kW AC public charger; and 3 hours for 7kW fast charger (50kW DC charger). Vehicle is equipped with a 13A domestic 3-pin charger with Type 2 connector for vehicle connection, and supports both Type 2 connector (for slow and fast charging) and CCS connector (for rapid charging). During charging the vehicle can be locked to protect against theft. Also, as part of the charging process, the charge cable is interlocked to the electric car so it can only be removed by driver.

### Opening fuel filler cap?

> **Important:** Hold in the Electronic Release button located adjacent to the bonnet catch. Hold this button in until the dashboard says 'ready to fuel'. Then exit the vehicle, and push in the fuel flap cover located on rear nearside to release it. Twist off the cap anticlockwise. Fuel flap is centrally locked.

### Releasing the bonnet?

> Pull bonnet release lever located at rear left of front passenger footwell. Unhook catch under bonnet.

### Folding the rear seats?

> The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

> Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### How to drive an automatic?

> Press the unlock button on the gear lever to shift between gears. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Select the + or - options to manually change gears. Use the S mode for sportier gear responses. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-MG-06 / 08-09-2021

# MG HS PHEV

HYBRID

**5 SEATS / PLUG-IN HYBRID  
 5 DOOR SUV**