

INDEX - VICs (VEHICLE INSTRUCTION CARD)

NISSAN VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Leaf ELECTRIC	5 seats / electric vehicle / 5 door hatchback
4	Juke	5 seats / 5 door SUV
5	Qashqai	5 seats / 5 door SUV
6	NV250	2 seats / small panel van


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

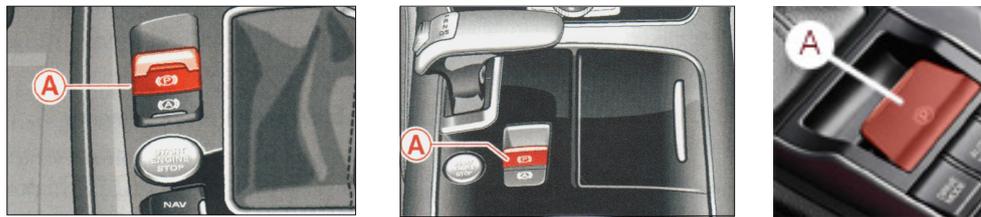

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.


Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Gear selector
- 15 Electronic Parking Brake

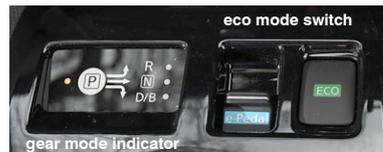

P
R
N
D/B

CAUTION!

When parked, the electronic parking brake should be fully applied with the vehicle left in P (Park) mode.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

205/55 R16
 215/50 R17

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

This is an **electric vehicle** using lithium-ion battery power and an electric motor. The vehicle will require regular **re-charging** (see section below).

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.

Anti-theft system?

Passive arming of electronic transponder engine immobiliser. Models are fitted with an alarm system. Visible VIN.

Opening the boot?

Centrally locked. Use the remote control or remote release to unlock / open.

Mirrors and windows?

Electric internal adjustment operated via a control pad on the drivers door. Electric front and rear windows operated via control buttons on the driver's door. Glass sunroof (If fitted) operated via roof mounted switchgear.

Using child door locks?

Child-proof locks on edge of rear doors. Slide the lever towards vehicle interior face of door to activate. Check doors are closed and secure once activated.

Starting and selecting gears?

Use the smartkey to lock/unlock the vehicle. Just keep the key in your pocket or bag whilst inside the vehicle. To turn the electric motor on/off depress the start/stop button in the centre console. **MODES:** The dashboard provides a high visibility easy-read display for the eco indicator, speedometer, power meter, battery temperature gauge, multi-function display, remaining energy gauge, capacity level gauge and distance to empty display. Use the centre console computer-mouse gear selector to opt for Normal, Eco-Mode and B-Mode settings. (Select B-Mode to activate more aggressive regenerative braking to increase battery regeneration when braking and decelerating, or use the Eco-Mode and B-mode for maximum efficiency.) **PARKING:** Whenever the vehicle is left at standstill apply the electronic parking brake. **GEARS:** Select desired gear (for gear selection, use the shift selector to choose N for neutral, R for reverse, and P for when the vehicle is parked.). Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto start/stop technology whereby the electric motor switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the accelerator or foot brake to instantly restart. **DRIVING:** Use the single e-Pedal to accelerate and decelerate with a single, seamless movement. Just release the accelerator for automatic regenerative braking and depress again for acceleration. Intelligent Emergency Braking continuously will apply the brakes to help avoid a collision.

Releasing the bonnet? Folding the rear seats?

Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.

The rear seats feature 60:40 split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.

How to change a tyre?

The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to charge the battery?

Regenerative braking converts vehicle's forward motion into electric power. **STEP 1:** Ensure the **power switch is off**. Press the switch to lower right of steering wheel to open the exterior (front) bonnet charging port. Raise the small bonnet flap to access the charging terminal. Use the supplied lead to connect to a charging point. **Vehicle range** and performance will depend on how charged the battery is plus the type of economic driving style used. To maximise range use the ECO mode and a moderate driving style. The dashboard power meter and driving range indicators show estimated driving range and battery power status. **RECHARGING:** The vehicle will need to be re-charged to maximise its travel range and performance. Three battery re-charge methods: Normal; Trickle; and Quick (if fitted). Charge time dependent upon battery state, age, temperature and power input. **Normal** charging is recommended - uses a 240v supply (home dock). **Trickle** charge to be used infrequently for emergency charging and uses a 10-120v supply. **Quick** charging should be used infrequently to help prolong battery life. Vehicle is compatible with **public charging** stations with SAE J1772 compliance - other stations may not work or only partially charge the battery. **Charge level:** The dashboard Li-ion battery gauge can be used to estimate approximate charge time to 80% capacity. To check charge level: with vehicle power on check the Li-ion battery charge available gauge; or read the charging status indicator lights. To remove the charging lead - press the connector button.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-01 / 19-06-2021

NISSAN LEAF ELECTRIC

 
5 SEATS
ELECTRIC VEHICLE: 5 DOOR HATCHBACK

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

215/65 R16
 215/60 R17
 225/45 R19

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
 NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 46 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Models are fitted with an alarm system. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control or remote release to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - panoramic glass sunroof operated via roof mounted switchgear.
- Using child door locks?** Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Models feature an engine start/stop button to start and stop the engine. With the intelligent key just keep the key in your pocket or bag and press the engine start / stop button. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the electric parking brake may auto engage or release depending on the driving mode selected.) Vehicle also features auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the clutch or accelerator to instantly restart.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats feature 60:40 split flat folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-02 / 19-09-2019

NISSAN JUKE

 
5 SEATS
2X4 OR 4X4 / 5 DOOR SUV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

- 215/65 R16
- 215/60 R17
- 215/55 R18
- 225/45 R19

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 55 or 65 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central secure deadlocking. Depress the central locking switch to lock the doors from the inside. Doors auto lock when the vehicle is in motion.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser after removal of the key from the starter switch. Models are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control or remote release to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - panoramic glass sunroof operated via roof mounted switchgear.
- Using child door locks?** Electronic. Operated via a switch on the driver's door armrest. Check doors are secure once activated.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Models feature an engine start/stop button - to use just keep the key in your pocket and press the button at left of steering wheel to start / stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the electric parking brake may auto engage or release depending on the driving mode selected.) Vehicle also features auto engine start/stop technology whereby the engine switches off when neutral gear is selected, pedals are not depressed and the vehicle is motionless - just depress the clutch or accelerator to instantly restart. Some vehicles feature all mode 4WD.
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower left of the passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats feature 60:40 split folding where seats can be folded separately. Unlock the seat catch and fold the seat down as desired. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check all seats are firmly locked in position before use.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-NIS-03 / 14-04-2019

NISSAN QASHQAI

5 SEATS
2X4 OR 4X4 / 5 DOOR SUV

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999
 For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



TYRE PRESSURES (COLD)

Check tyre pressure regularly
 Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
 60 litres (petrol / diesel)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

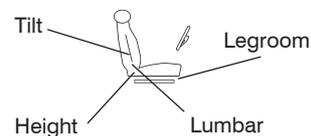

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security deadlocking. Depress the centre console central locking switch to lock the doors from the inside. Auto door re-locking on moving off.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Front passenger seat?** Some models are fitted with a folding passenger bench seat and load through bulkhead.
- Opening the load doors?** Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors (180 deg. opening) and a single or twin panel sliding doors. The loading bay is fitted with cargo retaining rings. A solid bulkhead separates crew and cargo areas
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door with manual or electric folding.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch, twist to start or stop the engine. Or for keyless starting keep the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.