

INDEX - VICs (VEHICLE INSTRUCTION CARD)

PEUGEOT VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	108	4 seats / 3-5 door hatchback
4	208	5 seats / 3-5 door hatchback
5	208 (NEW)	5 seats / 3-5 door hatchback
6	2008	5 seats / 5 door MPV
7	2008 (NEW)	5 seats / 5 door MPV
8	308	5 seats / 5 door hatchback / 5 door estate
9	3008	5 seats / 5 door MPV
10	508 / 508 SW	5 seats / 4 door saloon / 5 door estate
11	5008	7 seats / 5 door MPV
12	Rifter	7 seats / 5 door MPV
13	Partner Van	3 seats / small panel van
14	Traveller	7 seats / 5 door MPV
15	Expert Van	3 seats / panel van
16	Boxer Van	3 seats / panel van
17	Boxer Van Dropside	3 seats / L3 dropside

 
VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

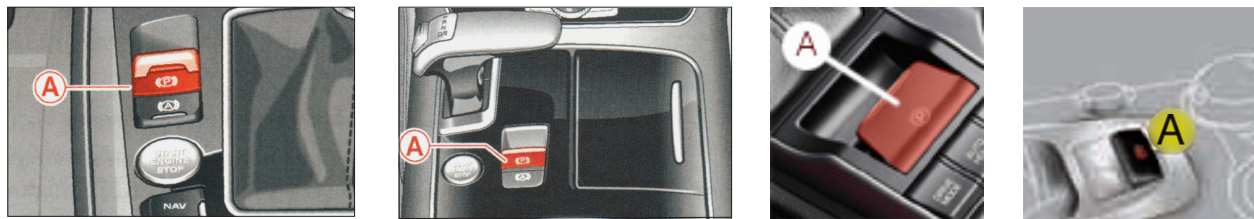

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED Indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

 
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



IMPORTANT: the oil level must be checked every 1000 miles.



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

165/65 R14
165/60 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicle is fitted with tyre pressure sensors.

Vehicle supplied with either a temporary spare wheel or a tyre repair kit.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
35.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Models are fitted with key / remote control operated central locking. Depress the door locking switch integrated into door lever. Doors also auto lock when vehicle is in motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Models are centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Internal electric adjustment via control pad on bottom right of dashboard.
- Opening the windows?** Electric front operated via control switches on the driver's door. Hinged rear windows..
- Operating the sunroof?** If fitted - retractable electric roof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, twist the button to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. (For keyless models, keep the key in your pocket or handbag, depress clutch and press engine start/stop button to start the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located on rear nearside. Lightly press the rear edge of fuel flap to open it. Twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 50:50 sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Lift the recess cover inside the boot to access the spare tyre (temporary spare). The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the foot operated brake pedal and move the lever forwards or backwards through the gate. Select **N** for neutral, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **E** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **M+** or **M-** to manually select gears only. Whenever the vehicle is at a standstill fully apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Handbrake



Important: the oil level must be checked every 1000 miles.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/55 R16
205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the lower centre console to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric operated via control buttons on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it, or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on rear nearside. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the standard or temporary spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Move the lever to lower left to use the tiptronic + and - settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-02 / 14-04-2019

PEUGEOT 208

5 SEATS
3-5 DOOR HATCH

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999


For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Electronic Parking Brake
- 14 Paddle Shift Gear Levers

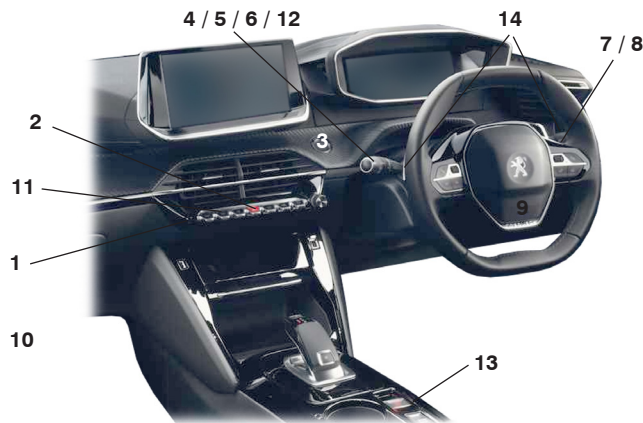

 Important: the oil level must be checked every 1000 miles.



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R16
R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles feature a remote tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it, or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and electronic parking brake is on. Place ignition key in starter switch. Press the engine start/stop button to start or stop the engine. For keyless models, just keep the key in your pocket or bag, and use the engine start/stop button. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Models feature auto start/stop technology whereby the engine turns off when stationary, gears are in neutral and foot pedals are not depressed, to restart press the accelerator (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on rear nearside. Lightly press the edge of the flap to open it, and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **Vehicles are not normally supplied with a spare wheel or tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the standard or temporary spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the electronic parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the **D +** and **-** settings or the steering wheel mounted paddle shift levers to manually change gears up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-03 / 14-04-2019

PEUGEOT 208 NEW

5 SEATS
3-5 DOOR HATCH

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

 
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Grip Control Dial
- 14 Electronic Parking Brake



Important: the oil level must be checked every 1000 miles.



13

CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

14

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/60 R16
205/50 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

When using the spacesaver spare wheel driving speed and travel distance are restricted.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via switches on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it, or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or handbag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on rear nearside. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on lower right hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 66:33 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the tyre repair kit and tools. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D (M)** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the **M+** and **M-** settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the parking brake. Use the rotary grip control dial to select various driving modes for different road surfaces.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Paddle Shift Levers

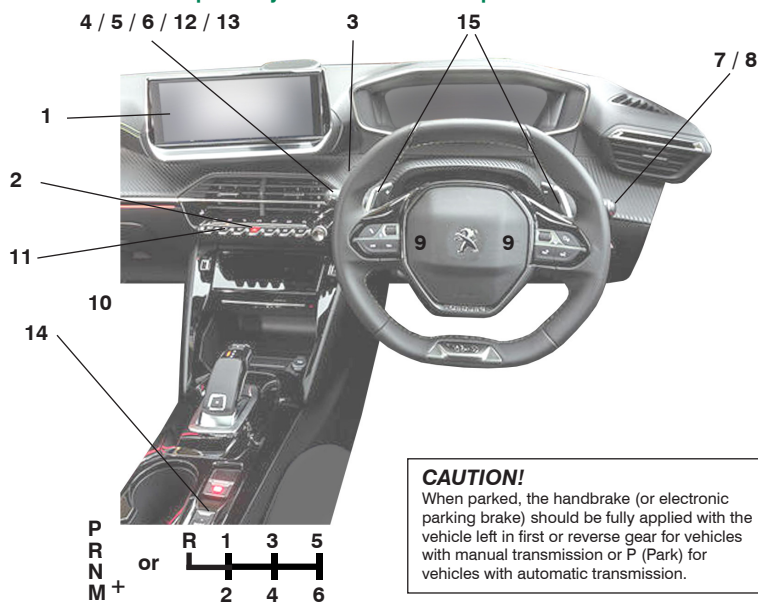

Important: the oil level must be checked every 1000 miles.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R16
215/60 R17
215/55 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

When using the spacesaver spare wheel driving speed and travel distance are restricted.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
41.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open. Some models feature a configurable floor height.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via switches on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric slide panoramic sunroof with blind, operated via roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it, or press the central locking button on the centre console to lock the doors. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Keyless starting - keep the key in your pocket or bag, and press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on rear nearside. Press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on lower right hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 66:33 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D (M)** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the **M+** and **M-** settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the parking brake. Use the rotary grip control dial to select various driving modes for different road surfaces.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999


For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

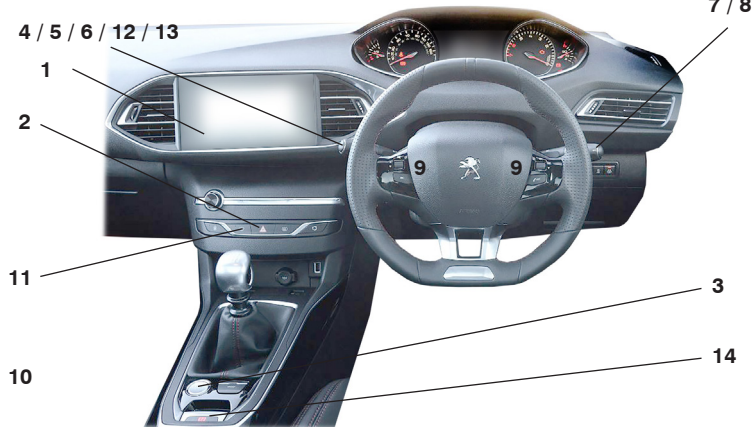

 Important: the oil level must be checked every 1000 miles.



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 195/65 R15
- 205/55 R16
- 225/45 R17
- 225/40 R18
- 235/35 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles are fitted with an electronic tyre pressure monitor. Driving speeds and travel distance are restricted when using a spacesaver spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
53.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

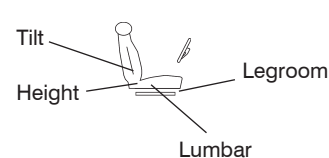

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Press the central locking button on the centre console to lock them from the inside. Doors will auto lock when vehicle moves.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release (hatchback only).
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic sunroof operated via roof mounted controls.
- Using child door locks?** Located on the edge of the rear doors, turn the key slot to activate it. Or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or handbag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Vehicles have a centrally locked fuel cap located under a flap on rear offside. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 66:33 sections which can be folded separately (flat folding in the estate - some models also have floor rails to help secure loads). To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the spacesaver spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Move the lever to lower left to use the manual + and - settings to manually change gear up or down by pushing the lever forward or backward. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-06 | 11-02-2018

PEUGEOT 308

5 SEATS
5 DOOR HATCH / 5 DOOR ESTATE

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Grip Control Dial
- 14 Electronic Parking Brake



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

R17, R18, R19

Vehicles are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres or 50.0 litres (petrol)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

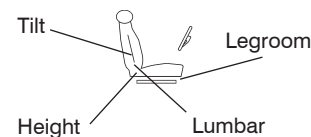

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Press the central locking button on the centre console to lock them from the inside. Doors will auto lock when vehicle moves.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser and alarm.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Centrally locked. Use the remote control to unlock or open. Some models feature remote hands-free opening via foot gesture activation of sensors under the flanks of the rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide operated by roof mounted switchgear.
- Using child door locks?** Use the roof mounted central locking switch / electric child lock to activate it. Check the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or handbag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Located under flap on rear offside. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 66:33 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the spacesaver spare tyre. The tools and jack are with the wheel. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake. Use the rotary grip control dial to automatically select various driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-07 | 11-02-2018

PEUGEOT 3008

**5 SEATS
5 DOOR CROSSOVER SUV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999


For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

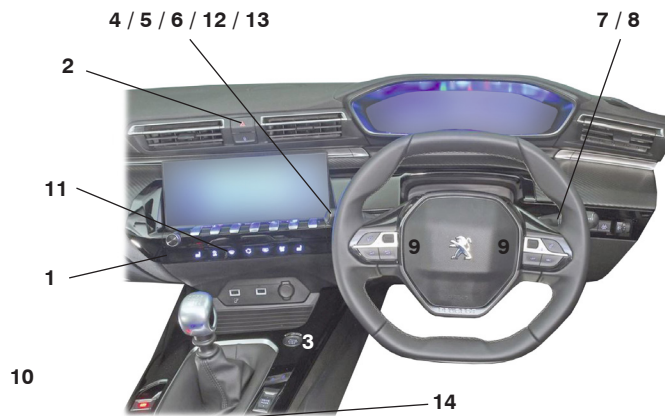

 Important: the oil level must be checked every 1000 miles.



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R17 215/55
R18 235/45
R19 235/40

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Some models may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
62 or 55 litres (petrol / diesel)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

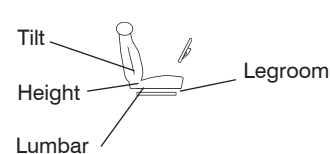

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Press the central locking button on the centre console to lock them from the inside. Doors will auto lock when moving off, and auto-lock after 30 seconds if vehicle is not opened.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with an alarm system.
- Opening the boot?** Centrally locked. Use the remote control to unlock or open by using the internal remote release. Some models feature hands-free foot gesture controlled opening of the tailgate, activated by a sensor underneath the rear bumper.
- Adjusting door mirrors?** Internal electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** Some models may be fitted with an electric tilt / slide panoramic glass sunroof with blind operated by roof mounted switchgear.
- Using child door locks?** Located on rear doors, press electronic switch to activate. Or press the central locking button on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch and use normal starting routine. Or for keyless starting keep the key in your pocket or bag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart depress the foot pedals.
- Opening fuel filler cap?** Most models have a centrally locked fuel cap located under a flap on rear offside. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 66:33 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with standard space saver spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Press the **M** mode button for manual gear selection. Use the steering wheel paddle shift levers to manually change gear up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-08 / 10-01-2019

PEUGEOT 508 / 508 SW

5 SEATS
4 DOOR SALOON / 5 DOOR ESTATE

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Front / Rear Fog Lamp
- 13 Grip Control Dial
- 14 Electronic Parking Brake

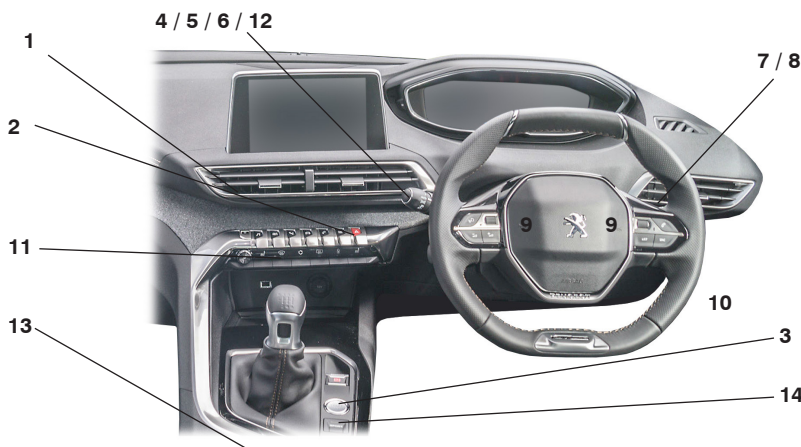

CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

- R17
- R18
- R19

Vehicles are fitted with an electronic tyre pressure monitor. Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

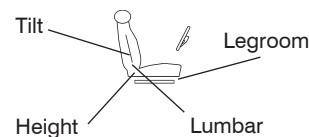

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security deadlocking. Depress the centre console switch to centrally lock the doors from the inside. Auto door re-locking.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser and alarm.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Some models feature remote hands-free opening via foot gesture activation of sensors under the flanks of the rear bumper.
Electric internal adjustment operated via a control pad on the driver's door.
- Adjusting door mirrors?** Electric front and rear, operated via control buttons on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Use the centre console central locking switch / electric child lock to activate. Check from inside that the doors are locked.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or handbag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections 33:33:33 which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the boot carpet cover. The tools and jack are inside a compartment in the side of the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake. Use the rotary grip control dial to automatically select various driving modes.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-09 / 11-02-2018

PEUGEOT 5008

**5 SEATS
5 DOOR CROSSOVER SUV**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Grip Control Dial (not shown)



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

195/65 R15
215/65 R16
215/60 R17

Vehicles are fitted with an electronic tyre pressure monitor. Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
61 or 50 litres (petrol / diesel)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

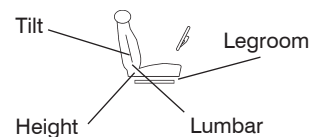

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security deadlocking. Depress the centre console central locking switch to lock the doors from the inside. Auto door re-locking on moving off.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Tailgate features a separately opening top-hinged window. Some models feature remote hands-free opening via foot gesture activation of sensors under the flanks of the rear bumper. Load floor is also supplied with fixing rings to help secure loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Electric tilt / slide glass panoramic sunroof operated by roof mounted switchgear.
- Using child door locks?** Use the centre console central locking switch / electric child lock to activate. Check from inside that the doors are locked. Vehicle features twin rear sliding doors.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or bag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections 33:33:33 which can be separately flat-folded. 7 seat versions feature a third seat row. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Use the centre console rotary dial selector to select gears. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage, press the **M** button, and use paddle shift levers to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake. Use the rotary grip control dial to automatically select various driving modes for different road surface conditions.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
61 or 50 litres (petrol / diesel)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

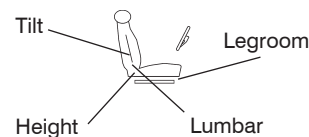

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security deadlocking. Depress the centre console central locking switch to lock the doors from the inside. Auto door re-locking on moving off.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Front passenger seat?** Modular folding passenger bench seat, with pivoting writing table and load through bulkhead.
- Opening the load doors?** Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and a single or twin panel sliding doors. The loading bay is lined with plastic and fitted with cargo retaining rings. The passenger seat also flat-folds to aid loading.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or bag, and press the engine start/stop button adjacent to the gear lever to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Lightly press the edge of the flap to open it, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Use the centre console rotary dial selector to select gears. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage, press the **M** button, and use paddle shift levers to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake. Use the rotary grip control dial to automatically select various driving modes for different road surface conditions.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Parking Brake
- 14 Grip Control Dial (not shown)



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

R17
R18
R19

Vehicles are fitted with an electronic tyre pressure monitor. Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

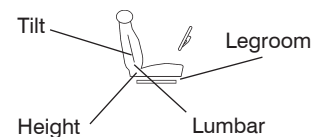

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central high security deadlocking. Depress the centre console switch to centrally lock the doors from the inside. Auto door re-locking.
- Anti-theft system?** Passive arming of electronic transponder engine immobiliser and alarm.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Features a split opening window panel to facilitate loading.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear, operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted: Twin glass panoramic sunroofs. Independently operated by roof mounted switchgear.
- Using child door locks?** Vehicle is fitted with twin sliding rear doors. Use the centre console central locking switch / electric child lock to activate. Check from inside that the doors are locked. Some models feature remote hands-free opening of sliding doors via foot gesture activation of sensors under the flanks of the rear bumper (when carrying the intelligent key in a pocket or handbag).
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Or for keyless starting keep the key in your pocket or handbag, and press the engine start/stop button on centre console to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - to instantly restart either depress the brake (auto models) or depress the clutch (manual).
- Opening fuel filler cap?** Located under flap on rear nearside. Centrally locked. Press the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The second and third row bench seats split 66:33 which can be separately slid, flat-folded or removed. To release the seat, press the seat unlocking catch and move or fold the seat. To return the seat to normal use, slide or raise the seat and push it firmly to engage the seat lock into position. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the boot carpet cover. The tools and jack are inside a compartment in the side of the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** The shift lever can only be disengaged from **P** when the brake pedal is pressed. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). To manually override normal **D** usage use the **M +** or **-** selector to select higher or lower gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the parking brake. Use the rotary grip control dial to automatically select various driving mode.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-PEU-12 / 11-02-2018

PEUGEOT TRAVELLER

**8 SEATS
5 DOOR MPV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/65 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

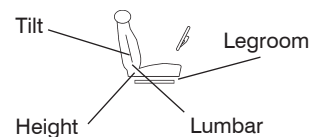

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the load doors?** Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and two panel sliding doors. The loading bay is fitted with cargo retaining rings.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when stationary and idle, to restart either lift the brake (auto models) or depress the clutch (manual)).
- Opening fuel filler cap?** Most models have a centrally locked fuel cap located under a flap on rear nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Lift the recess cover inside under seat to access the tools and jack. The wheel is stored under the load bay floor, use the tools to release the retaining bolt on the floor of the cargo bay to lower the spare wheel to the ground. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards in the gear gate. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the handbrake.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp

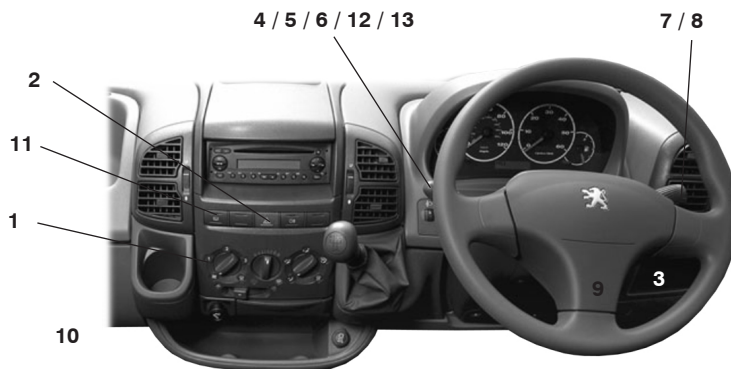

CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/70 R15
225/70 R15

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
90.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

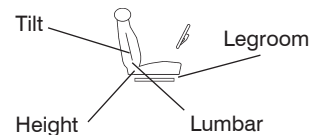

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the centre console to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate.
- Opening the load doors?** Centrally locked. Use the remote control to unlock or open. The vehicle features twin side-hinged rear doors and a one or two panel sliding doors. The loading bay is fitted with cargo retaining rings.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. (The parking brake is sited on the floor between the driver's seat and the door). Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral, and no foot pedals are depressed - to restart depress the clutch (manual)).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on mid nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



CAUTION!

When parked, the handbrake (or electronic parking brake) should be fully applied with the vehicle left in first or reverse gear for vehicles with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/70 R15
225/70 R15
215/75 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

The vehicle is fitted with a full-size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
90.0 litres / AdBlue 18.6 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

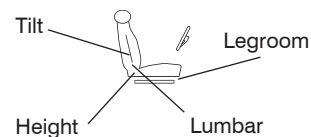

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Remote control operated central deadlocking. Depress the central locking button on the driver's door to lock the doors from the inside. All of the doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN plate. Auto locking doors.
- Opening the L3 dropside doors?** Open platform. L3 length configuration. Features fold-down side panels to enable loading of payloads. Fitted with three levels of load-lashing rails against the bulkhead. Manual opening and locking panel sides.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door (or manually folding).
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. (The parking brake is sited on the floor between the driver's seat and the door). Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Some models feature auto start/stop technology whereby the engine turns off when vehicle is stationary, gears are in neutral, and no foot pedals are depressed - to restart depress the clutch (manual)).
- Opening fuel filler cap?** Models have a centrally locked fuel cap located under a flap on mid nearside. Lift the edge of the flap to open it, and twist off the cap anticlockwise. (If a locking filler cap is fitted use the ignition key to unlock it).
- Releasing the bonnet?** Pull bonnet release lever located on left hand side of front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.