

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## PORSCHE VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>718 Cayman</b>	2 seats / 2 door coupe
4	<b>718 Boxster</b>	2 seats / 2 door cabriolet
5	<b>Cayenne</b>	5 seats / 5 door 4X4
6		
7		
7		
9		
10		
11		
12		
13		
14		
15		
16		
17		
18		
19		
20		

# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	
			

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

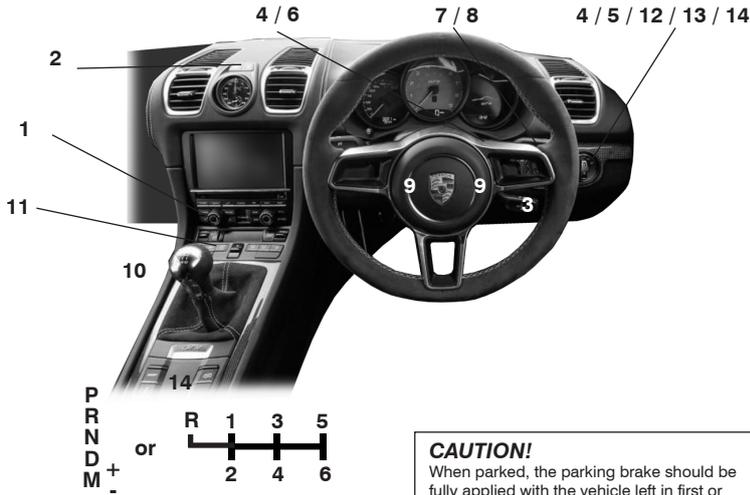

## TYRE PRESSURES (COLD)

Check tyre pressure regularly...  
The legal minimum tread depth is 1.6 mm

- 235/45 R18
- 265/45 R18
- 235/40 R19
- 265/40 R19

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
64.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on centre console to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release. Luggage can be stored in both rear tailgate and front bonnet compartments.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on (the electronic parking brake switch is located on the lower dashboard between the right side of the steering wheel and the driver's door). Place ignition key in starter key slot. Use a normal starting routine or press the key in to start/stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles are fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving and gears are in neutral and foot pedals are not depressed - just touch the foot pedals to auto restart the engine. If activated: the electronic parking brake will automatically deactivate as you drive off.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- How to change a tyre?** The tools and jack are stored in compartments within the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **M+** or **M-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the electronic parking brake.

 

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

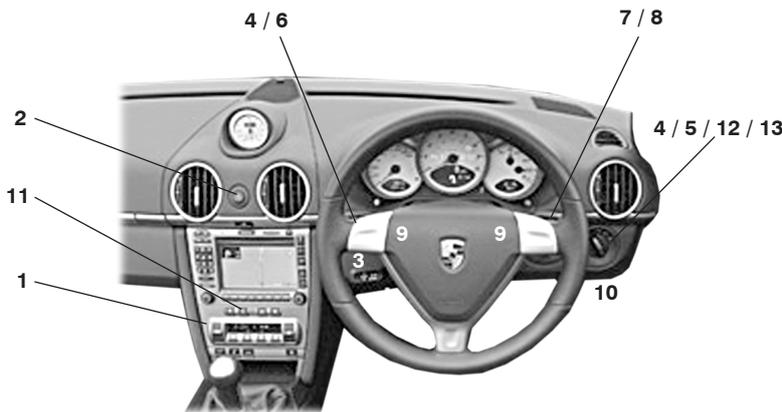

### CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

205/55 R17 Front with 235/50 R17 Rear

235/40 R18 Front with 265/40 R18 Rear

Confirm tyre pressures by consulting reference table on driver's door B-pillar.

Vehicles are fitted with a remote tyre pressure monitor.

Note - vehicles carry spacesaver spare wheels which will limit travel distance and road travel speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
64.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central dead locking. Doors auto lock above 10mph travel speed.
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Remote release. Boot is located at the front of the vehicle.
- Adjusting door mirrors?** Electric adjustment operated by the control pad on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Raising and lowering the convertible top?** Press the centre console switch to raise or lower the convertible top. The mechanism can be raised within 12 seconds and can be raised or lowered at speeds less than 30 mph.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key into key slot on left of steering wheel. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Located under flap on front offside wing. Centrally locked. Lift the edge of the flap to open it, and twist off the cap anticlockwise.
- Releasing the engine cover?** Pull engine cover release lever located to the lower right of the instrument panel. Unhook catch under engine cover to open.
- How to change a tyre?** The tools, jack and spacesaver wheel are stored under a cover in the front storage compartment found underneath the bonnet. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears (use low gears for best engine braking for driving in hilly terrain or hazardous conditions). Whenever the vehicle is at a standstill apply the handbrake.


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

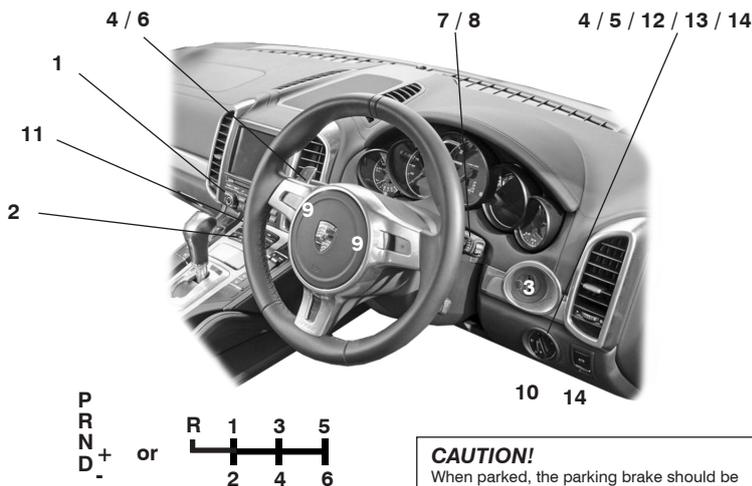

## TYRE PRESSURES (COLD)

Check tyre pressure regularly...  
The legal minimum tread depth is 1.6 mm

- 225/55 R18
- 265/50 R19
- 275/45 R20
- 295/40 R20

Check the tyre pressure table found on the inside of the fuel filler cap (or driver's door B-pillar) to confirm tyre pressures. Some vehicles may be fitted with a remote tyre pressure monitoring system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
85.0 or 100.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press central locking switch on driver's door to lock the doors from the inside. (Some vehicles may feature a keyless entry system). Doors will auto lock when the vehicle is in motion.
- Anti-theft system?** Fitted with a remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
- Opening boot/tailgate?** Centrally locked. Use the remote control to unlock / open. Remote release and power release (fitted to some models).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use the ignition key to twist the key slot to activate it. Check from inside that the doors are securely locked. Or lock by pressing the central locking switch on the driver's door. All doors will auto-lock when vehicle moves.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake is on. Place ignition key in starter key slot. Press the key in to start/stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles are fitted with engine start-stop technology which automatically stops the engine when the vehicle is not moving - release the brake to restart the engine. If activated: the electronic parking brake will automatically deactivate as you drive off.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the remote release switch. Lift the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat rows are divided into sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The tools and jack are stored in compartments within the boot. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears using the steptronic gear lever: Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears using the tiptronic gear selector. Whenever the vehicle is at a standstill apply the electronic parking brake. **Off-road features:** centre console control for selecting multiple off-road driving modes; and hill-hold function.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-POR-03 / 18-07-2011

# PORSCHE CAYENNE

**5 SEATS  
5 DOOR 4X4**