

INDEX - VICs (VEHICLE INSTRUCTION CARD)

RENAULT VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Zoe ELECTRIC	5 seats / 5 door hatchback / electric
4	Clio	5 seats / 3-5 door hatchback
5	Captur	5 seats / 5 door SUV
6	Kadjar	5 seats / 5 door crossover SUV
7	Trafic Passenger	6 - 9 seats / Passenger MPV
8	Trafic Van	3 seats / Panel Van
9	Master MPV	6 - 9 seats / MPV (minibus)
10	Master Van	3 seats / Panel Van


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

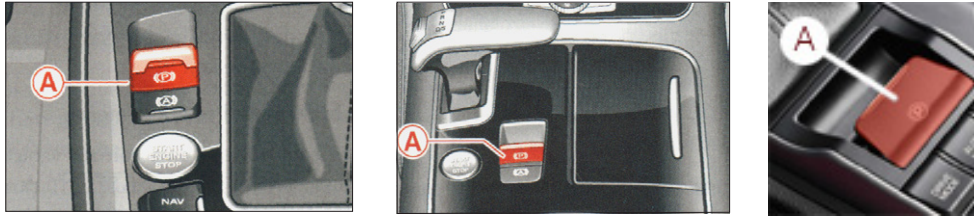

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Keycard Slot



P
R
N
D / S

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

185/65 R15
195/55 R16
205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Electric Motor with 52 kWh multi-cell lithium ion battery.

Battery range:
up to 238 miles

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Some vehicles may be fitted with an alarm.
- Opening the boot?** — Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door.
Adjusting door mirrors? — Electric internal adjustment operated via a control knob on the driver's door.
Opening the windows? — Electric front (and rear) operated via control buttons on the driver's door.
Operating the sunroof? — If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
Using child door locks? — Doors automatically lock on vehicle motion. Press the central locking button on dash board to lock or unlock. External rear door handles are hidden / recessed located towards the rear edge of the door panel.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place key card into slot in centre console (or keep the key card in your pocket or bag). Press the engine start/stop button (to left of steering wheel) to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto start/stop - motor turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The motor instantly restarts when the foot pedals are depressed. The parking brake will normally auto release and engage.
- Charging the battery?** Centrally locked. Front charger socket located under charging flap (located under the Renault logo). Press the panel to open the flap. See section below for further information about the battery, vehicle range and charging times.
- How to change a tyre?** **This vehicle is not normally supplied with a tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Folding the rear seats?** The rear seats can be folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Whenever the vehicle is at a standstill apply the parking brake.
- Driving the electric car?** Vehicle uses **regenerative braking** to help re-charge the battery. Use the **eco** mode button (adjacent to gear lever) to optimise economic performance and in-car heating or air-con to help maximise battery range. **Charging socket:** The front charger socket is found at the front of the vehicle under a flap (hidden below the hinged Renault badge). The dashboard display indicates power saver, battery gauge and integrated mileage counter. **Range:** up to 238 miles. **Battery:** 52 kWh lithium ion. **Recharging times:** 2.3 kW in 32 hrs; 3.7 kW (mode 2 cable) in 19 hrs; 7.4 kW (mode 3 cable) in 9.5 hours; 22 kW public charging in 3 hrs; 50kw public fast charging in 1.5 hrs.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-REN-01 / 20-08-2022

RENAULT ZOE ELECTRIC

5 SEATS
ELECTRIC / 5 DOOR HATCHBACK

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

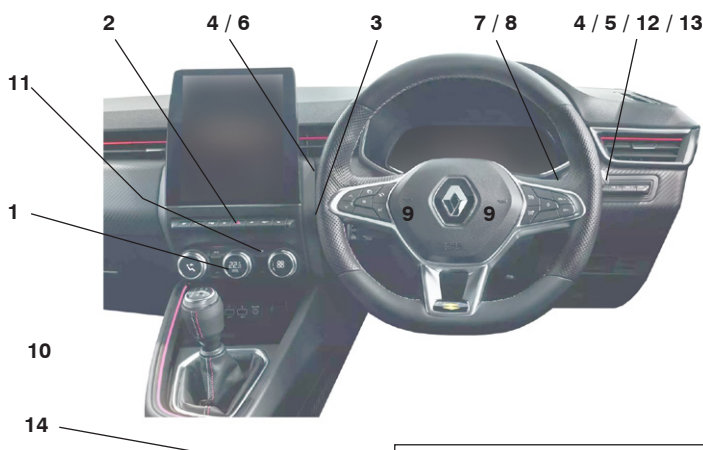

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 195/55 R16
- 205/45 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles feature an automatic tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
42 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor features a split-level loading feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button to lock or unlock the doors. Twist the child lock slot on the edge of the rear doors using the ignition key to activate the child lock for the rear doors.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Retain the key in your pocket or bag, press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature start/stop technology whereby the engine auto shuts off when the vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine instantly restarts when the clutch pedal is depressed (manual) or the accelerator is depressed (auto).
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lightly press the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle is not normally supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Folding the rear seats?** The rear seats can be folded, and features 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

 
 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

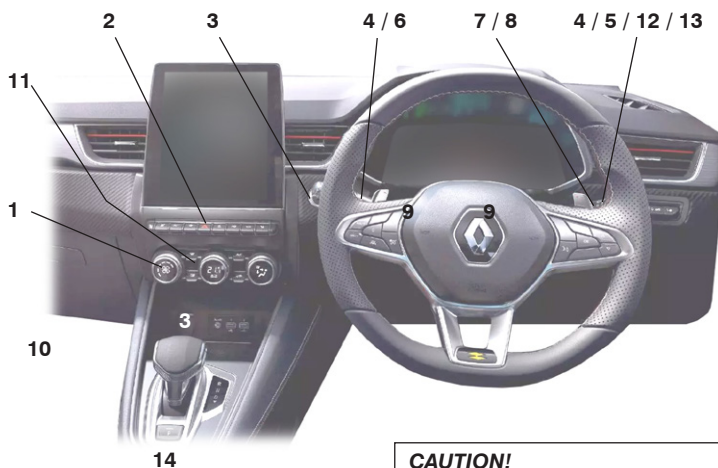

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/60 R17
215/55 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Vehicles feature an automatic tyre pressure monitoring system.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

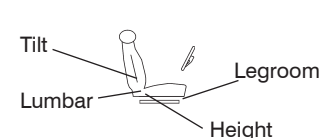

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor features a split-level loading feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button to lock or unlock the doors. Twist the child lock slot on the edge of the rear doors using the ignition key to activate the child lock for the rear doors.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Retain the key in your pocket or bag, press the engine start/stop button to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Note: the parking brake will normally auto release). Vehicles feature start/stop technology whereby the engine auto shuts off when the vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine instantly restarts when the clutch pedal is depressed (manual) or the accelerator is depressed (auto).
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside of vehicle. Lightly press the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle is not normally supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Folding the rear seats?** The rear seats can be folded, and features 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake
- 15 Driving Mode Selector (not shown on this version)

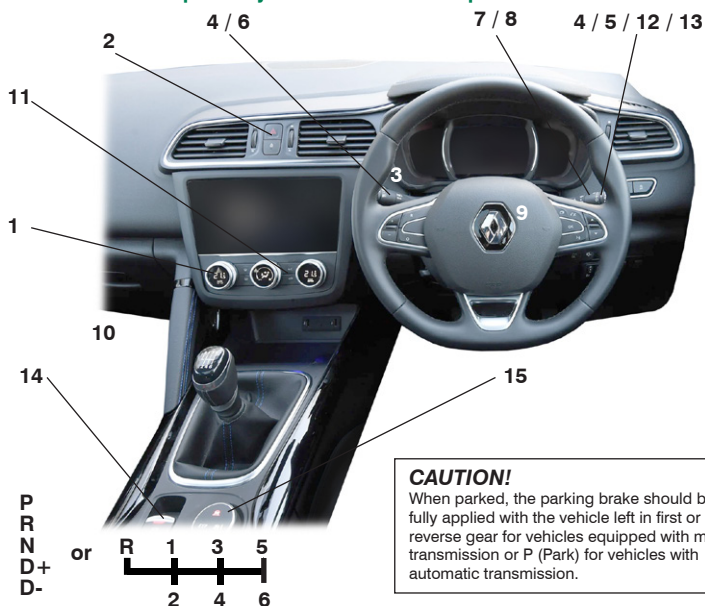

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 215/65 R16
- 215/65 R17
- 225/45 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key card. Visible VIN plate. Vehicles are fitted with an alarm.
- Opening the boot?** Centrally locked. Use the handle to open. Some models may be fitted with a remote release button on the driver's door. The boot floor has a split-level loading feature.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt / slide. Operated by roof mounted switchgear.
- Using child door locks?** Doors automatically lock on vehicle motion. Press the central locking button on dash board to lock or unlock.
- Starting the engine?** Ensure gear selector is in neutral and electronic parking brake is on. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto engine start/stop - engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The engine auto restarts when the clutch or accelerator (auto) foot pedals are depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of flap and twist off the fuel cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle is not normally supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Folding the rear seats?** The rear seats can be folded, and feature 60:40 split folding. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.
- Selecting 4x4 modes?** Use the centre console rotating selector switch (adjacent to gear lever) to easily choose different driving modes.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 215/65 R16
- 205/65 R16
- 215/60 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80 litres (AdBlue tank 20 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
Anti-theft system?	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with an alarm.
Passenger van doors / seats?	Centrally locked. Fitted with left and right sliding side doors, with twin opening rear doors. Seats are split folding and can be individually folded by releasing the seat locks. 2nd row of 3 passenger seats with removable outer seats. 3rd row of 3 passenger seats are removable. Check seats are secure before using them. Door sills may have side steps fitted to aid access into the vehicle.
Adjusting door mirrors?	Electric internal adjustment operated via a control knob on the driver's door, or internal manual adjustment via levers on the front doors.
Opening the windows?	Electric front windows operated via control buttons on the driver's door. Large sliding windows at the rear.
Operating the sunroof?	If fitted. Twin electric tilt / slide panoramic sunroof. Operated by roof mounted switchgear.
Starting the engine?	Ensure gear selector is in neutral and electronic parking brake is on. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto engine start/stop - engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The engine auto restarts when the clutch or accelerator (auto) foot pedals are depressed.
Opening fuel filler cap?	Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
How to change a tyre?	This vehicle is not normally supplied with a tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. An Eco Driving Mode is also selectable. Whenever the vehicle is at a standstill apply the automatic parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

- 205/65 R16
- 215/65 R16
- 215/60 R17

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80 litres (AdBlue tank 20 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
Anti-theft system?	Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with an alarm.
Load compartment?	Centrally locked. Fitted with a single nearside sliding panel door or twin sliding panel doors (one on each side). Also fitted with twin wide-opening 180° rear doors (can open upto 270° on some models). The cargo bay is fitted with several anchorage points: 14 for short wheel base (SWB); and 16 for long wheel Base (LWB). Each anchorage ring can hold approximately 500kg. A steel bulkhead separates the cab and load compartment. The cargo area is fitted with LED lights. The front middle passenger seat folds down to present laptop working, writing surface and clipboard storage.
Passenger van doors?	Centrally locked. Fitted with 2 sliding side doors, with twin opening rear doors.
Adjusting door mirrors?	Electric internal adjustment operated via a control knob on the driver's door.
Opening the windows?	Electric operated via control buttons on the driver's door.
Starting the engine?	Ensure gear selector is in neutral and electronic parking brake is on. Press the engine start/stop button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. The vehicle features auto engine start/stop - engine turns off when vehicle is stationary, gears are in neutral and foot pedals are not depressed. The engine auto restarts when the clutch or accelerator (auto) foot pedals are depressed.
Opening fuel filler cap?	Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
How to change a tyre?	This vehicle is not normally supplied with a tyre repair kit. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake. Some models may be fitted with a permanent 4 wheel drive system.


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

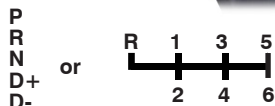

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/65 R16
195/75 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with an alarm.
- Passenger van doors / seats?** Centrally locked. Fitted with 2 sliding side doors, with twin opening rear doors. Seats are split folding and can be individually folded by releasing the seat locks. Check seats are secure before using them. Door sills may have side steps fitted to aid access into the vehicle.
- Adjusting door mirrors?** Internal manual adjustment via levers on the front doors. OR electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front (and rear if applicable) operated via control buttons on the driver's door, with some manual operated windows.
- Operating the sunroof?** If fitted. Twin electric tilt / slide. Operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in neutral and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle is not normally supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the automatic parking brake.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

225/65 R16
235/65 R16
195/75 R16

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80 litres (AdBlue tank 22 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double locking. Depress the central locking switch to lock the doors from the inside. Doors auto lock on vehicle motion
- Anti-theft system?** Remote anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with an alarm.
- Load compartment?** Centrally locked. Fitted with a single nearside sliding panel door or twin sliding panel doors (one on each side). Also fitted with twin wide-opening 180° rear doors (can open upto 270° on some models). The cargo bay is fitted with several fixed tie-down anchor points to help secure internal loads. Steel bulk head separates the cab and load compartment. Front passenger seat folds to provide a flat working surface.
- Passenger van doors?** Centrally locked. Fitted with 2 sliding side doors, with twin opening rear doors.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle.
- Opening fuel filler cap?** Centrally locked. Located under flap on nearside of vehicle by passenger door. Lift the flap and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull the internal bonnet release lever on the left-hand side of the front passenger footwell. Unhook catch under bonnet.
- How to change a tyre?** This vehicle is not normally supplied with a tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake. Some models may be fitted with a permanent 4 wheel drive system.