

INDEX - VICs (VEHICLE INSTRUCTION CARD)

TOYOTA VEHICLES

| Page | Vehicle | Details |
|------|---|---|
| 1 | Index | n/a |
| 2 | Supplement (Electronic Parking Brake, etc) | n/a |
| 3 | Yaris Hybrid HYBRID | 5 seats / 5 door hatchback |
| 4 | Auris Hybrid HYBRID | 5 seats / 5 door hatchback |
| 5 | Corolla | 5 seats / 5 door / hatchback (saloon/estate) |
| 6 | Corolla Hybrid HYBRID | 5 seats / 5 door / hatchback (saloon/estate) |
| 7 | C-HR Hybrid HYBRID | 5 seats / 5 door / SUV |
| 8 | RAV-4 Hybrid HYBRID | 5 seats / 5 door / Hybrid SUV |
| 9 | Avensis | 5 seats / 5 door hatchback / 5 door estate |
| 10 | Prius Hybrid HYBRID | Hybrid / 5 seats / 5 door hatchback |
| 11 | HiLux Doublecab | 5 seats / 4 door / 4x4 truck |
| 12 | Proace | 3 seats / panel van |

VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.



LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

| Built-up area (street lit) | Elsewhere | | Motorway |
|-------------------------------|-----------------------|---------------------|----------|
| | Single carriageway | Dual carriageway | |
| | | | |

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

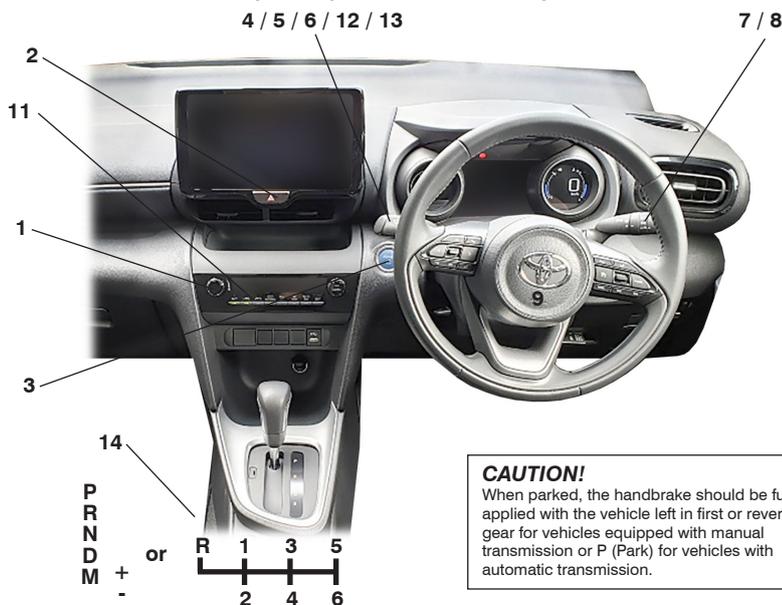

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R16
- R17

Vehicles feature an automatic tyre pressure warning system.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
36 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking. Use the driver's door central locking switch to lock all the doors from the inside.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the lower right of the instrument panel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, press the central locking switch to activate it. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Insert key into key slot and use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Some models may feature keyless entry and start - just carry the smart key in your pocket or bag - press the engine start/stop button to start or stop the engine). Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under a flap on the rear nearside. To open: press the edge of the flap and twist off the cap anticlockwise.
- Electric charging ?** Hybrid electric motor used to supplement combustion engine useage, range and performance. Uses a self-charging 85kWh battery powering a front electric motor. Lithium ion high voltage battery 4.3 Ah. EV mode switch located on centre console. Electric driving range and performance dependent on driving styles. Braking and deceleration will recharge the battery. Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Releasing the bonnet?**
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a temporary spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears move the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the M+ or M- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-01 / 19-06-2021

TOYOTA YARIS HYBRID

**5 SEATS
5 DOOR HATCHBACK**


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 EV Drive Mode

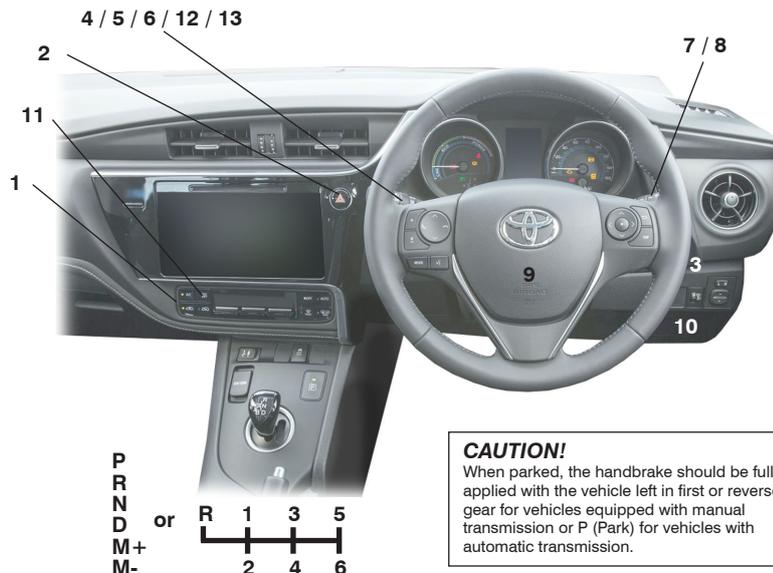

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

195/65 R15
205/55 R16
225/45 R17

Vehicles are supplied with a temporary spare wheel

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

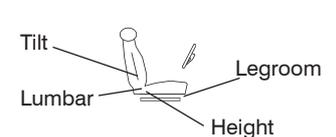

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central double-locking. Auto door locking and re-locking. Use the driver's door central locking switch to lock all the doors from the inside.

Anti-theft system?

Some models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.

Opening boot/tailgate?

Centrally locked. Use the key or remote control to unlock / open.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the lower right of the instrument panel.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Using child door locks?

Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked.

Operating the sunroof?

If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.

Starting the engine?

Ensure gear selector is in N or P and handbrake is on. Insert key into key slot and use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. (Some models also feature a smart entry/start system - unlock doors by touching the handle, or start the engine at the touch of an engine start/stop button - just carry the smart key in your pocket or handbag). Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.

Opening fuel filler cap?

Centrally locked. Located under flap on rear nearside. Remote release located on driver's door. Lift the edge of the flap to open it and twist off the cap anticlockwise.

Electric charging ?

Hybrid electric motor supplements combustion engine useage, range and performance. Uses a self-charging 60kWh battery powering a front electric motor. Nickel metal hydride high voltage battery 6.5 Ah. EV mode switch located on centre console. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.

Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Lift the recess cover inside the boot to access the temporary spare wheel. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the M+ or M- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-02 / 24-07-2018

TOYOTA AURIS HYBRID

**5 SEATS
5 DOOR HATCHBACK**

 

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

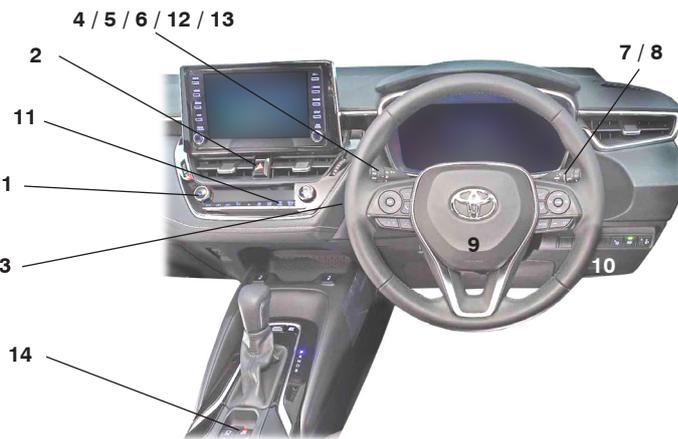

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R15
- R16
- R17
- R18

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
43.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside. For keyless entry - just keep the smart key in your pocket or bag.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
Adjusting door mirrors? Electric internal adjustment operated via a control pad on the lower right of the dashboard.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Locks are located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - vehicles feature a panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and electronic parking brake is on. Insert key into key slot and use a normal starting routine, or for keyless starting - press the engine start/stop button to start or stop the engine (whilst pressing the brake pedal or clutch (manual)) - just carry the smart key in your pocket or bag. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle also features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Remote release located on driver's door. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** Lift the recess cover inside the boot to access the temporary spare wheel. The tools and jack are also stored here. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the S mode to select more responsive gear changes. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-03 / 03-02-2020

TOYOTA COROLLA

**5 SEATS
5 DOOR HATCHBACK / ESTATE / 4 DOOR SALOON**

 

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start/Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

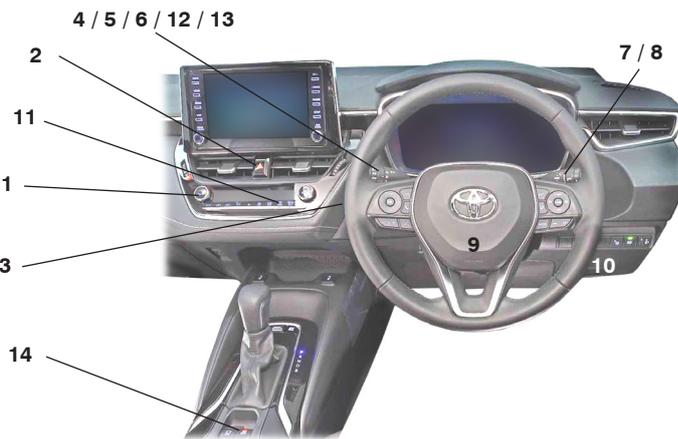

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R15
- R16
- R17
- R18

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
43.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside. For keyless entry - just keep the smart key in your pocket or bag.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot. Visible VIN plate.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
Adjusting door mirrors? Electric internal adjustment operated via a control pad on the lower right of the dashboard.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Locks are located on the edge of the rear doors, slide the lever down to activate it. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - vehicles feature a panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and electronic parking brake is on. For keyless starting - press the engine start/stop button to start or stop the engine (whilst pressing the brake pedal or clutch (manual)) - just carry the smart key in your pocket or bag. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle also features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Remote release located on driver's door. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Electric charging ?** Hybrid electric motor supplements combustion engine useage, range and performance. Uses a self-charging 60kWh battery powering a front electric motor. 53 kW Lithium ion (3.6 Ah) or 80 kW Nickel-Metal Hydride (6.5 Ah) high voltage battery. EV mode switch located on centre console. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the S mode to select more responsive gear changes. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-04 | 19-06-2021

TOYOTA COROLLA

HYBRID

5 SEATS
5 DOOR HATCHBACK / ESTATE / 4 DOOR SALOON


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

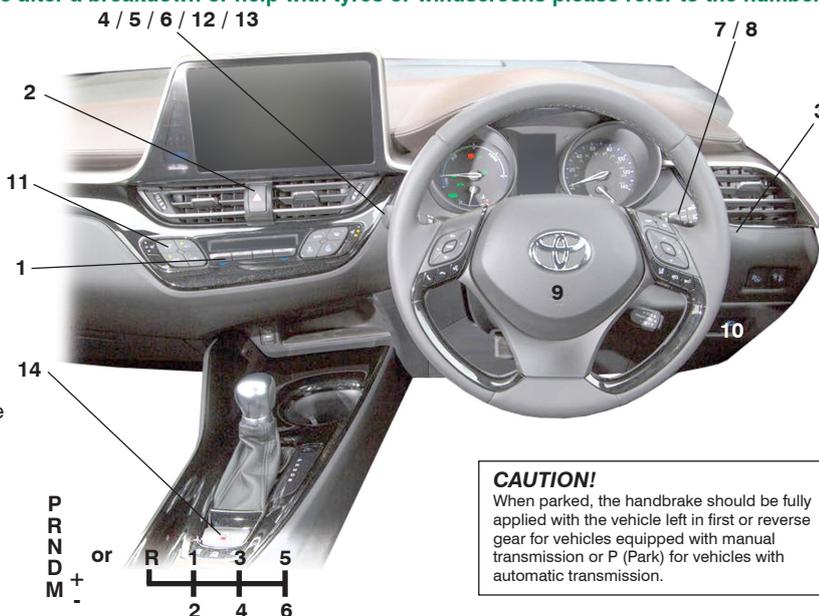

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

215/60 R17
225/50 R18

Vehicles are fitted with an automatic tyre pressure warning system.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

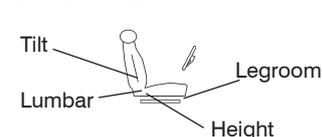

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the driver's door central locking switch to lock all the doors from the inside.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm. Auto door locking. Visible VIN.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate. Check from inside that the doors are securely locked. Rear doors feature hidden external door handles located along upper edge of the door.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Models feature a keyless entry and start - just carry the smart key in your pocket or bag - and press the engine start/stop to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the remote release to lower right of steering wheel. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Electric charging ?** Hybrid electric motor supplements combustion engine usage, range and performance. Uses a self-charging 53 kWh battery powering a front electric motor. Nickel-Metal Hydride (6.5 Ah) high voltage battery. EV mode switch located on centre console. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the M+ or M- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-05 / 19-06-2021

TOYOTA C-HR HYBRID

**5 SEATS
5 DOOR SUV**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Drive Mode Selector



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:

- R17
- R18

Vehicles are fitted with an automatic tyre pressure warning system.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles. Fitted with a self charging hybrid powertrain.

Fuel Tank Capacity:
55 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the driver's door central locking switch to lock all the doors from the inside.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some vehicles feature a powered opening tailgate.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate. Check from inside that the doors are securely locked.
- Operating the sunroof?** If fitted - some models may be fitted with an electric panoramic glass roof operated by roof mounted switchgear.
- Starting the engine?** Ensure gear selector is in N or P and parking brake is on. Models feature a keyless entry and start - just carry the smart key in your pocket or handbag - and press the engine start/stop to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle also features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open it and twist off the cap anticlockwise. NOTE: this vehicle also features a self-charging hybrid electric powertrain.
- Electric charging ?** Hybrid electric motor supplements combustion engine useage, range and performance. Uses self-charging Nickel-Metal hydrid battery powering 88kW front and 40kW rear electric motors. Nickel-Metal Hydride (6.5 Ah) high voltage battery. EV mode switch located on centre console. Electric driving range/performance depends on driving style. Braking and deceleration will recharge the battery.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to use 4WD system?** Use the rotary selector dial adjacent to the gear shift lever to select different modes for offroad and driving conditions.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Use the S+ or S- options to manually select gears. Release pressure on the accelerator to return to normal accelerator use. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-06 / 19-06-2021

TOYOTA RAV-4

HYBRID

5 SEATS
5 DOOR SUV / 4WD / HYBRID

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked the electric parking brake (located at lower left of instrument panel) should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:
205/60 R16
215/55 R17
225/45 R18

On those vehicles fitted with spacesaver spare wheels - note that driving speed and travel distance is restricted.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
60 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Depress the central door locking switch located on the instrument panel to lock the doors from the inside. Auto door locking.
- Anti-theft system?** Vehicles are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser and alarm.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Some models are fitted with a remote release button located on the lower right of the instrument panel.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the mid right of the instrument panel to right of steering wheel.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - some models may be fitted with a panoramic glass roof operated by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, slide the lever down to activate, or use the central locking button to lock all doors from the inside. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake (EPB) is on. Place key in starter switch / key slot (or for models which have keyless starting, just keep the key in your pocket or bag and press the engine start/stop to start or stop the engine). Twist the key or press the engine start/stop button on the lower right of dashboard to start or stop the engine. Select desired gear. Release EPB and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open it and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears hold the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use M+ or M- to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-07 / 11-02-2018

TOYOTA AVENSIS

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Drive Mode
- 16 EV Mode

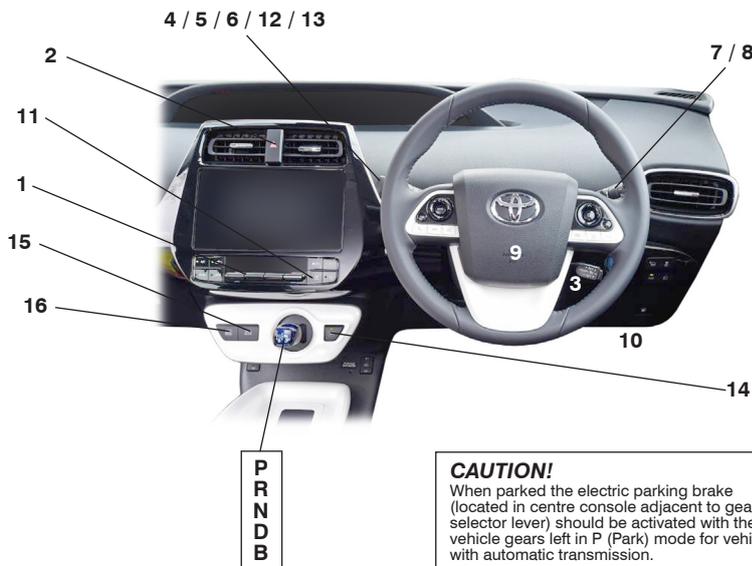

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:
195/65 R15
215/45 R17

Vehicles are fitted with automatic tyre pressure monitoring. Temporary space saver spare wheel have limited travel distance and driving speed ratings.

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked the electric parking brake (located in centre console adjacent to gear selector lever) should be activated with the vehicle gears left in P (Park) mode for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
43.0 litres (AWD: 40.0 litres)

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Use power child door locking switch to lock rear doors. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in N and electronic parking brake is on. Insert key into key slot (or some models use a smart key - just keep the smart key in your pocket or bag) and press the power button to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine automatically restarts when a foot pedal is depressed. Select EV mode for electric only mode (for low speed, short distance travel - can be up to 50 km maximum range), or Drive Mode for optimum use of petrol and hybrid technology. The driver display indicates an energy monitor, hybrid system indicator and eco score and fuel economy.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Remote release. Lightly press the edge of the flap to open it and twist off the cap anticlockwise.
- Charging the battery?** Hybrid electric motor supplements combustion engine useage, range and performance. **2WD models:** Use a self-charging Lithium-ion hybrid battery powering a 53kW front electric motor. **(4WD models:** Use an additional Nickel metal hydride high voltage battery powering the additional 5.3kW rear motor). **For plug-in models:** Extra battery capacity provides a fully electric drive mode (approx. 25-34 mile range depending on your driving style). The hybrid batteries can be re-charged using a regular 3-pin plug-in power adaptor (4 hours) or a type 2 cable for wall box (2.5 hours) and use at public charge points. If fitted - solar panels in the roof also boost the battery charge. **EV mode switch** located on centre console. Electric driving range and performance depends on driving style. Braking and deceleration will recharge the battery.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be flat folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears use the small centre console shift lever and move the lever to select drive modes. Select N for neutral, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). Press the P switch adjacent to lever when parking the vehicle. To downshift into 2nd gear when going down a long, steep hill, select the "B" mode option. For normal driving select D where the transmission will use all available forward gears automatically. Whenever the vehicle is at a standstill apply the electronic parking brake (P).

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-TOY-08 / 19-06-2021

TOYOTA PRIUS HYBRID

5 SEATS
5 DOOR HATCHBACK / ELECTRIC HYBRID


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

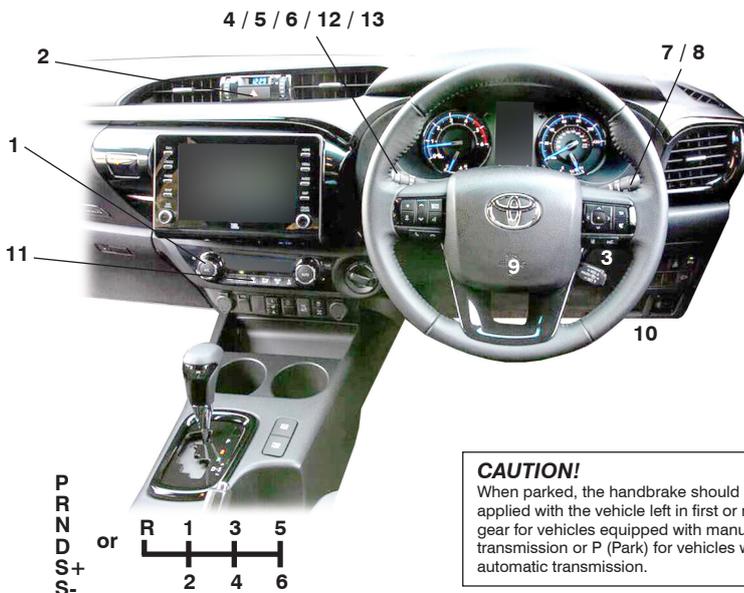

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:
225/70 R17
265/65 R17
265/60 R18

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

Vehicles normally carry a full size spare wheel.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
80.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Opening boot/tailgate?** Centrally locked. Use the key or remote control to unlock / open. Use tailgate handle to open the bottom hinged tailgate. Flat load area fitted with load lashing rings.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Using child door locks?** Child proof door locks fitted to the rear doors, depress the central locking button to activate it. Located on the edge of the rear doors, slide the lever to activate it. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in N or P and handbrake is on. Insert key into key slot and use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. Press the edge of the flap to open it and twist off the cap anticlockwise. Press flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.
- How to change a tyre?** Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Release pressure on the accelerator to return to normal accelerator use. Use S+ or S- to manually select gears. Whenever the vehicle is at a standstill apply the handbrake. Use the rotary control on the right of the centre console to select 4WD modes.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the handbrake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Fitted tyres include:
215/65 R16
215/60 R17

Check the tyre pressure table found on the inside of the driver's door B-pillar to confirm correct inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
69.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central double-locking. Auto door locking and re-locking. Use the central locking switch to lock all the doors from the inside.
- Anti-theft system?** Models are fitted with an anti-theft alarm. Passive arming of electronic engine immobiliser after removal of the key from the starter switch / key slot.
- Load compartment?** Centrally locked. Fitted with a single nearside sliding panel door or twin sliding panel doors (one on each side). Also fitted with twin wide-opening (180°) rear doors, or a single top hinged rear door. The cargo bay is fitted with tie-down eyes to help secure internal loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door.
- Starting the engine?** Ensure gear selector is in N or P and handbrake is on. Place key in starter switch / key slot (or for models which have keyless starting, just keep the key in your pocket or bag and press the engine start/stop to start or stop the engine). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicle features auto start/stop technology whereby the engine auto shuts off when vehicle is stationary, gears are in neutral and foot pedals are not depressed - the engine auto restarts when a foot pedal is depressed.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside above the rear wheel arch. Press the edge of the flap to open it and twist off the cap anticlockwise. Press flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- How to change a tyre?** Vehicles do not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.** FOR INFORMATION: Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts.
- How to drive an automatic?** Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically. Release pressure on the accelerator to return to normal accelerator use. Use the M option to manually select gears by using the steering wheel mounted paddle shift levers. Whenever the vehicle is at a standstill apply the handbrake.