

# INDEX - VICs (VEHICLE INSTRUCTION CARD)

## VAUXHALL VEHICLES

Page	Vehicle	Details
1	<b>Index</b>	n/a
2	<b>Supplement (Electronic Parking Brake, etc)</b>	n/a
3	<b>Adam</b>	5 seats / 3 door hatchback
4	<b>Corsa</b>	5 seats / 3-5 door hatchback
5	<b>Astra</b>	5 seats / 5 door hatchback / 5 door estate
6	<b>Astra GTC</b>	5 seats / 3 door coupe
7	<b>Combo Life</b>	7 Seats / 5 door / MPV
8	<b>Crossland X</b>	5 seats / 5 door / SUV
9	<b>Grandland X</b>	5 seats / 5 door / SUV
10	<b>Insignia</b>	5 seats / 4 door saloon / 5 door hatchback / estate
11	<b>Insignia Grand Sport</b>	5 seats / 4 door saloon
12	<b>Mokka</b>	5 seats / 5 door (fwd or 4x4) SUV
13	<b>Mokka X</b>	5 seats / 5 door (fwd or 4x4) SUV
14	<b>Zafira</b>	7 seats / 5 door / MPV
15	<b>Zafira Sports Tourer</b>	7 seats / 5 door / MPV
16	<b>Combo Van</b>	3 seats / panel van
17	<b>Vivaro Combi</b>	7 seats / 5 door MPV
18	<b>Vivaro Van</b>	3 seats / panel van
19	<b>Movano Van</b>	3 seats / panel van
20	<b>Movano Cab Tipper</b>	3 seats / tipper cab
21	<b>Movano Cab Dropside</b>	3 seats / dropside cab


# VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

## ELECTRONIC PARKING BRAKE (EPB)

### INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

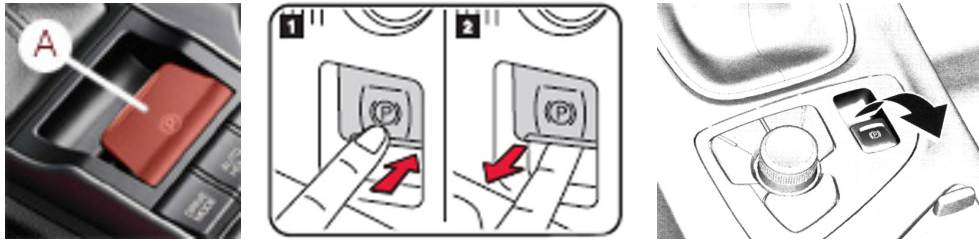

### LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

### ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

### DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

### WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

## DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

## SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

## WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

**RED** indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

**YELLOW** or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

**GREEN** or blue is only telling you that a system is on or operating normally.

## DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

195/55 R16  
215/45 R17  
225/35 R18

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

Vehicles are fitted with a tyre pressure monitoring system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
38 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the centre console central locking switch to lock all doors.
<b>Anti-theft system?</b>	Passive arming of electronic engine deadlock immobiliser and alarm. Visible VIN plate.
<b>Opening the boot?</b>	Centrally locked. Use the key or remote control to unlock / open.
<b>Adjusting door mirrors?</b>	Electric internal adjustment operated via a control pad on the driver's door.
<b>Opening the windows?</b>	Electric front operated via switches on the driver's door.
<b>Operating the sunroof?</b>	If fitted: fixed glass sunroof OR electric folding fabric sunroof operated by roof mounted switchgear.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch (or depress start/stop button to start or stop the engine), <b>depress the clutch before attempting to start the car</b> . Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static, gears in neutral and foot pedals are not depressed - depress the accelerator to instantly restart.
<b>Opening fuel filler cap?</b>	Centrally locked. Located under flap on rear offside. To open: press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seats can be independently folded flat with a 50:50 split. To release the seats press the seat unlocking catch and fold the seats down. To return the seats to normal use, raise the seats and push firmly to engage the seat lock. Check the seats are securely locked into position before using them.
<b>How to change a tyre?</b>	Vehicle does not normally carry a spare wheel or tyre repair kit. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>How to drive an automatic?</b>	Select <b>N</b> for neutral, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use <b>+</b> or <b>-</b> in <b>D</b> (manual) mode to change gears up or down. Whenever the vehicle is at a standstill apply the handbrake.

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

185/65 R15  
195/55 R16  
215/45 R17

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

Vehicles are fitted with a tyre pressure monitoring system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
45 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



3 door: Tilt seat to access rear seats

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking. Depress the centre console central locking switch to lock all doors.
<b>Anti-theft system?</b>	Passive arming of electronic engine deadlock immobiliser and alarm. Visible VIN plate.
<b>Opening the boot?</b>	Centrally locked. Use the key or remote control to unlock / open.
<b>Adjusting door mirrors?</b>	Electric internal adjustment operated via a control pad on the driver's door.
<b>Opening the windows?</b>	Electric front / rear operated via switches on the driver's door, or manually operated rear windows.
<b>Operating the sunroof?</b>	If fitted: electric tilt / slide panoramic sunroof operated by roof mounted switchgear.
<b>Using child door locks?</b>	For rear doors only. Press the central locking button to activate door locking. Check from inside that the doors are securely locked.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch (or depress start/stop button to start or stop the engine), <b>depress the clutch before attempting to start the car</b> . Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Most vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static, gears in neutral and foot pedals are not depressed - depress the accelerator to instantly restart.
<b>Opening fuel filler cap?</b>	Centrally locked. Located under flap on rear offside. Remote release. To open: press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seats can be independently folded flat. To release the seats press the seat unlocking catch and fold the seats down. To return the seats to normal use, raise the seats and push firmly to engage the seat lock. Check the seats are securely locked into position before using them.
<b>How to change a tyre?</b>	Vehicle does not normally carry a spare wheel or tyre repair kit. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>How to drive an automatic?</b>	Select <b>N</b> for neutral, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use <b>+</b> or <b>-</b> in <b>D</b> (manual) mode to change gears up or down. Whenever the vehicle is at a standstill apply the handbrake.




# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Engine start / stop
- 15 Electronic Parking Brake

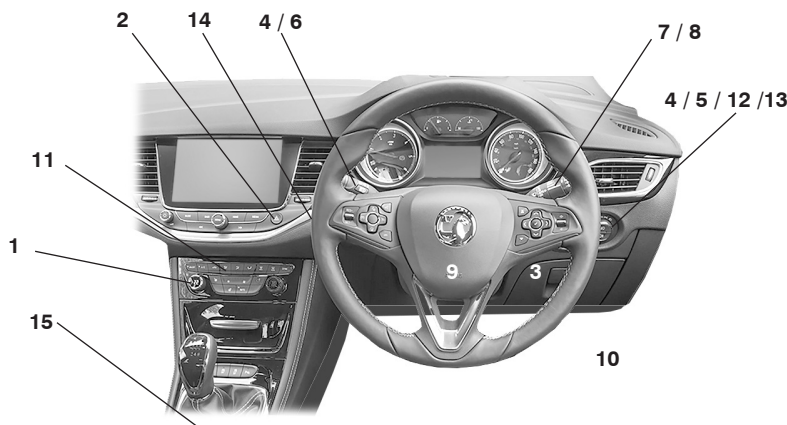

## NOTE: direction indicators.

A short movement of the indicator stalk upwards or downwards operates the indicator lights for a brief time; a deeper movement of the stalk will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but they will be operational. (The indicators are self cancelling).

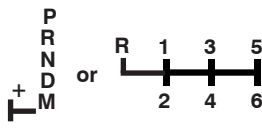

## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

205/55 R16  
225/45 R17  
225/40 R18

Some vehicles may be fitted with an automatic tyre pressure warning system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
48.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Depress the console mounted central locking switch (or door locking knobs) to lock the doors from the inside. Doors also auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models may be fitted with a security alarm system.
- Opening the boot?** Centrally locked. Use remote tailgate release switch to unlock / open. Estate models may feature hands free tailgate opening, activated by foot gestures control of sensors fitted below the flanks of the rear bumper.
- Adjusting door mirrors?** Manual internal adjustment operated via a control lever on each door or electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electrically controlled.
- Operating the sunroof?** If fitted. Electric tilt/slide sunroof with presets, controlled by roof mounted switchgear.
- Using child door locks?** For rear doors only. Press the central locking button to activate door locking. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Place ignition key in starter switch (or depress start/stop button to start or stop the engine), **depress the clutch before attempting to start the car.** Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static, gears in neutral and foot pedals are not depressed - depress the accelerator to instantly restart.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote release. To open: briefly press the flap edge, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections (or 40:20:40) which can be separately flat folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicle does not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **M+** or **M-** to manually select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-03 / 11-02-2018

# VAUXHALL ASTRA

**5 SEATS**  
**5 DOOR HATCH / 5 DOOR ESTATE**


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.


## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

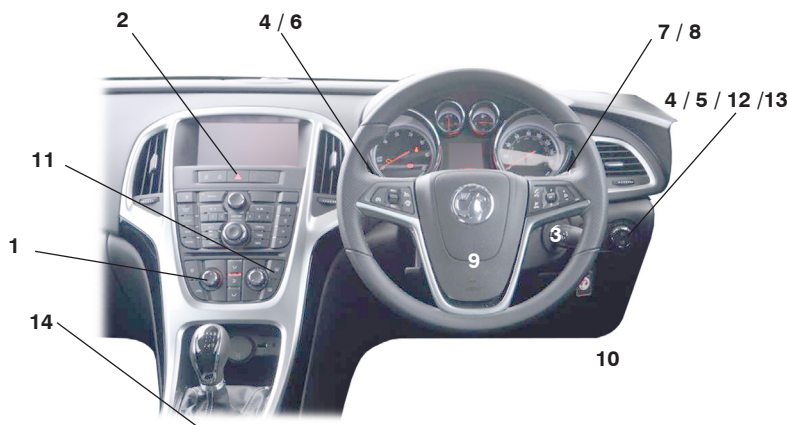

## NOTE: direction indicators.

 A short movement of the indicator stalk upwards or downwards operates the indicator lights for a brief time; a deeper movement of the stalk will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but they will be operational. (The indicators are self cancelling).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

235/50 R18  
235/45 R19  
245/40 R20

Vehicles are fitted with an automatic tyre pressure warning system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
56.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Key / remote control operated central security deadlocking. Depress the driver's central locking switch (or door locking knobs) to lock the doors from the inside. Doors also auto-lock on vehicle motion.
<b>Anti-theft system?</b>	Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models may be fitted with a security alarm system.
<b>Opening the boot?</b>	Centrally locked. Use remote tailgate release switch to unlock / open.
<b>Adjusting door mirrors?</b>	Manual internal adjustment operated via a control lever on each door or electric internal adjustment operated via a control knob on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control buttons on the driver's door. Manually operated rear.
<b>Operating the sunroof?</b>	If fitted. Electric tilt/slide sunroof with presets, controlled by roof mounted switchgear.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Place ignition key in starter switch, <b>depress the clutch before attempting to start the car</b> , turn the key to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. (Electronic parking brake will normally auto release). Vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static, gears in neutral and foot pedals are not depressed - depress the accelerator to instantly restart.
<b>Opening fuel filler cap?</b>	Centrally locked. Located under flap on rear offside. To open: briefly press the flap edge, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located to the lower right of the driver's footwell. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seat is divided into 60:40 sections which can be separately flat folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
<b>How to change a tyre?</b>	Vehicle does not normally carry a spare wheel or tyre repair kit. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>How to drive an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use <b>D+</b> or <b>D-</b> to manually select gears. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-04 / 13-04-2018

# VAUXHALL ASTRA GTC

**5 SEATS**  
**3 DOOR HATCH / COUPE**


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS


- 1 Heating & Ventilation
- 2 Hazard Lights
- 3M Starter Switch (manual)
- 3A Engine Start/Stop (auto)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12/13 Rear/Front Fog Lamp
- 14 Electronic Parking Brake

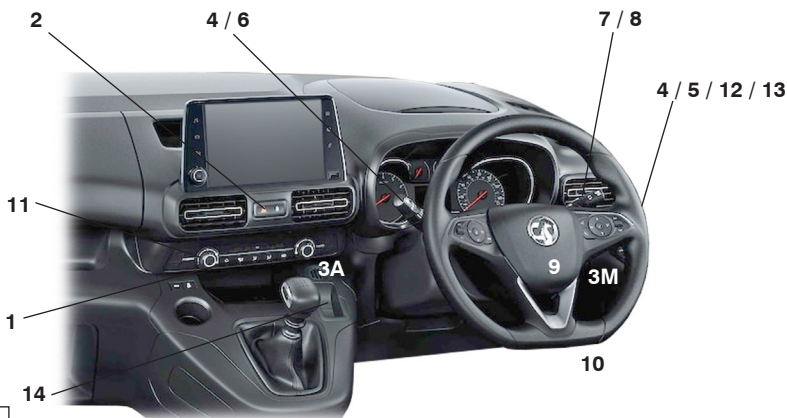

## NOTE:

### Usage of direction indicators

 A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

205/60 R16

Vehicles are fitted with on-board tyre pressure sensors. Spacesaver spare tyres and tyres repaired by emergency inflation kits can only be used for limited distances and reduced driving speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 or 61 litres (diesel / petrol)

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

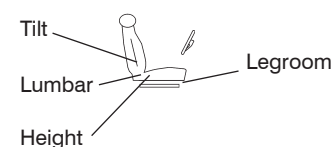

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Press the central locking switch to lock/unlock all doors from the inside. Doors also auto-lock.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with a remote control alarm system.
- Opening the tailgate?** Centrally locked. Rear tailgate on some models may feature a separately opening top-hinged window.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door.
- Operating sunroof?** If fitted - electric tilt/slide glass panoramic sunroof, operated by roof mounted switchgear.
- Using child door locks?** Child proof locks located on the edge of the twin sliding rear doors. Press the central locking switch to lock. Check from inside that the doors are securely locked. Or lock using the central locking switches on the dashboard.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Manual models: Insert key in starter switch and turn on, **depress the clutch before attempting to start the car.** Auto models: keyless start/stop, just keep the key in your pocket or bag, and press the engine start/stop switch to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start / stop - engine auto shuts off when gears are in neutral, vehicle is motionless and pedals are not depressed, depress the foot pedals to instantly restart. The electronic parking brake will normally auto-release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear nearside. To open: briefly press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.
- Folding the rear seats?** The second rear seat is divided into 35:30:35 sections, the third seat row is divided into 50:50 sections, which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicle does not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears press use the rotary shift dial selector. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the steering wheel shift paddles to manually change gears. Whenever the vehicle is at a standstill apply the electronic parking brake. A rotary driving mode selector dial can be used to choose various driving modes for different power and road conditions.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-05 / 10-01-2019

# VAUXHALL COMBO LIFE

**7 SEATS**  
**5 DOOR / MPV**




# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS


- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

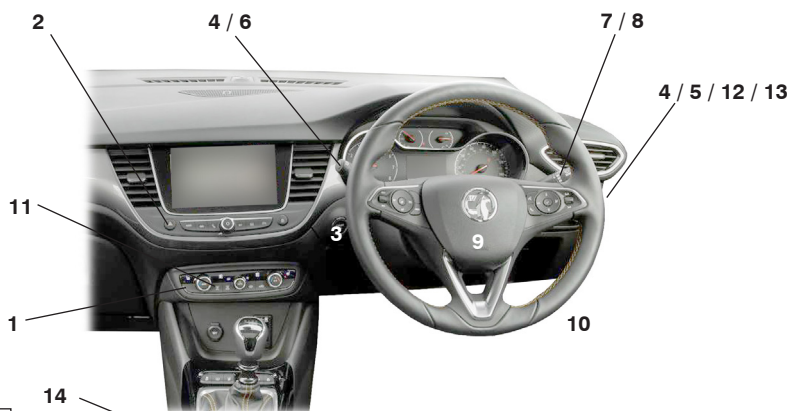

## NOTE:

### Usage of direction indicators

 A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

195/60 R16  
205/60 R16  
215/50 R17

Vehicles are fitted with on-board tyre pressure sensors. Spacesaver spare tyres and tyres repaired by emergency inflation kits can only be used for limited distances and reduced driving speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
45 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

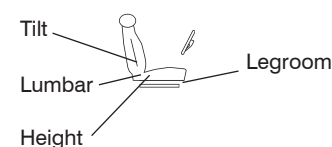

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central deadlocking. Depress the central locking switches adjacent to the hazard warning switch to lock/unlock all doors from the inside.

### Anti-theft system?

Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with a remote control alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open independently of doors. Press / pull the boot handle to open. Some vehicles are fitted with a powered tailgate - controlled via dashboard and boot mounted switches. Electric internal adjustment operated via a control pad on the driver's door.

### Adjusting door mirrors?

### Opening the windows?

Electric front and rear operated via control switches on the driver's door.

### Operating sunroof?

If fitted - fixed or electric tilt/slide glass panoramic sunroof, operated by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, use the ignition key to turn the red key slot into a horizontal position to activate. Check from inside that the doors are securely locked. Or lock using the central locking switches on the dashboard.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Insert key in starter switch and switch on, **depress the clutch before attempting to start the car.** Press the engine start/stop switch to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start / stop - engine auto shuts off when gears are in neutral, vehicle is motionless and pedals are not depressed, depress the clutch or accelerator to instantly restart. The electronic parking brake will normally auto-release.

### Opening fuel filler cap?

Centrally locked. Located under flap on rear nearside. To open: briefly press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into 60:40 sections which can be flat-folded separately and slid forward / backward. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. Central armrest also features a pass-through load facility for narrow and long loads.

### How to change a tyre?

Vehicle does not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### Driving an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-06 / 21-11-2018

# VAUXHALL CROSSLAND X

**5 SEATS**  
**5 DOOR / SUV**



# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

 
- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



## NOTE:

### Usage of direction indicators

A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

215/65 R17

225/55 R18

235/50 R19

Vehicles are fitted with on-board tyre pressure sensors. Spacesaver spare tyres and tyres repaired by emergency inflation kits can only be used for limited distances and reduced driving speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
53 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

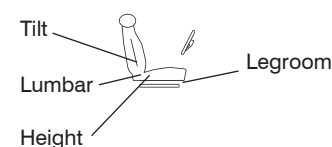

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central deadlocking. Depress the central locking switches adjacent to the hazard warning switch to lock/unlock all doors from the inside.

### Anti-theft system?

Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open independently of doors. Press / pull the boot handle to open. Some vehicles are fitted with a powered tailgate - controlled via dashboard and boot mounted switches.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear operated via control switches on the driver's door.

### Operating sunroof?

If fitted - electric tilt/slide glass panoramic sunroof, operated by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, use the ignition key to turn the red key slot into a horizontal position to activate it. Check from inside that the doors are securely locked. Or lock using the central locking switches on the dashboard.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Vehicle features keyless entry and start - just keep the key in your pocket or bag, **depress the clutch before attempting to start the car.** Press the engine start/stop switch to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start / stop - engine auto shuts off when gears are in neutral, vehicle is motionless and pedals are not depressed, depress the clutch or accelerator to instantly restart. The electronic parking brake will normally auto-release.

### Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. To open: briefly press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into 60:40 sections which can be flat-folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. Central armrest also features a pass-through load facility for narrow and long loads.

### How to change a tyre?

Vehicle does not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### Driving an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

### Selecting driving modes?

Use the centre console rotary dial selector to choose between various driving modes optimised for various road conditions.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-07 / 13-04-2018

# VAUXHALL GRANDLAND X

**5 SEATS**  
**5 DOOR / SUV**

# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

 
- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## NOTE:

### Usage of direction indicators

A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a longer duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

### Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap. (e.g. 215/60 R16, 225/55 R17, 245/45 R18, 245/40 R19 235/50 R18). Spacesaver spare tyres can only be used for limited distances and reduced driving speeds.

Some vehicles are also fitted with on-board tyre pressure sensors - a red "tyre icon" indicates low pressure, and a flashing icon indicates the vehicle should be stopped. Check the tyres in all such cases.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
70.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

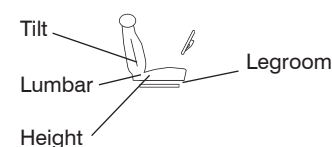

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central deadlocking. Depress the central locking switches adjacent to the hazard warning switch to lock/unlock all doors from the inside.

### Anti-theft system?

Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open independently of doors. Or press the remote release button (saloon only) on the driver's door to release it from inside. Press / pull the boot handle to open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front operated via control switches on the driver's door. Manually operated rear. Or all electric.

### Operating sunroof?

If fitted - electric tilt/slide panoramic sunroof, operated by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, use the ignition key to turn the red key slot into a horizontal position to activate it. Check from inside that the doors are securely locked. Or use the central locking switches on the dashboard.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Place ignition key in starter switch, **depress the clutch before attempting to start the car**. Press the engine start/stop switch to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start / stop - engine auto shuts off when in neutral and feet are off the pedals, to restart just depress the clutch to instantly restart.

### Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. (Use the remote release button on the driver's door to unlock / open the fuel flap). To open: briefly press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

Lift the recess cover inside the boot to access the space-saver spare tyre. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### Driving an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-08 / 26-01-2014

# VAUXHALL INSIGNIA

**5 SEATS**  
**4 DOOR SALOON / 5 DOOR HATCH / ESTATE**


# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS


- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

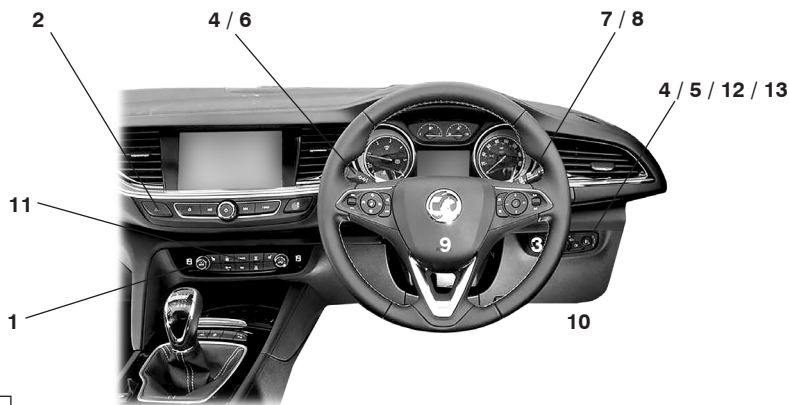

## NOTE:

### Usage of direction indicators

 A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate these indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

215/55 R17 | 245/45 R18 | 245/35 R20

Spacesaver spare tyres can only be used for limited distances and reduced driving speeds. Vehicles are also fitted with on-board tyre pressure sensors - a red "tyre icon" indicates low pressure, and a flashing icon indicates the vehicle should be stopped. Check the tyres in all such cases.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap). (ADBLUE 15.0 litres)

Fuel Tank Capacity:  
62.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

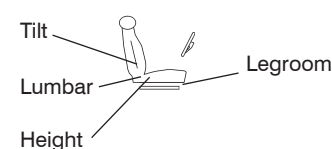

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central deadlocking. Depress the central locking switches adjacent to the hazard warning switch to lock/unlock all doors from the inside, or depress door locks.

### Anti-theft system?

Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open independently of doors. Or press the remote release button (saloon only) on the driver's door to release it from inside. Press / pull the boot handle to open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front operated via control switches on the driver's door. Manually operated rear. Or all electric.

### Operating sunroof?

If fitted - electric tilt/slide panoramic sunroof, operated by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, use the ignition key to turn the red key slot into a horizontal position to activate it. Check from inside that the doors are securely locked. Or use the central locking switch on the dashboard.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Keyless entry and start - keep key in pocket or bag, press the engine start/stop button to start or stop the engine, **depress the clutch before attempting to start the car.** Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start / stop - whereby the engine auto shuts off when in neutral and feet are off the pedals, to restart just depress the clutch to instantly restart.

### Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. (Use the remote release button on the driver's door to unlock / open the fuel flap). To open: briefly press the rear edge of flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seat is divided into 60:40 sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked in position before using the seat.

### How to change a tyre?

Lift the recess cover inside the boot to access the space-saver spare tyre. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### Driving an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the electronic parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-09 / 08-09-2017

# VAUXHALL INSIGNIA GRAND SPORT

**5 SEATS  
4 DOOR SALOON**



# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

 
- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## NOTE:

### Usage of direction indicators

A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap. (e.g. 215/55 R18, 225/45 R19). Spacesaver spare tyres can only be used for limited distances and reduced driving speeds.

Some vehicles are also fitted with on-board tyre pressure sensors - a red "tyre icon" indicates low pressure, and a flashing icon indicates the vehicle should be stopped. Check the tyres in all such cases.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
54.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

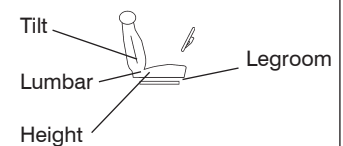

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central deadlocking. Depress the central locking switches adjacent to the hazard warning switch to lock/unlock all doors from the inside.

### Anti-theft system?

Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control alarm system.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open independently of doors. Or press the remote release button on the driver's door to release it from inside. Press / pull the boot handle to open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front operated via control switches on the driver's door. Manually operated rear. Or all electric.

### Opening sunroof?

If fitted - electric tilt/slide panoramic sunroof, operated by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, use the ignition key to turn the red key slot into a horizontal position to activate it. Check from inside that the doors are securely locked. Or use the central locking switches on the dashboard.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Place ignition key in starter switch, **depress the clutch before attempting to start the car**. Press the engine start/stop switch to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature auto engine start / stop - engine auto shuts off when in neutral and feet are off the pedals, to restart just depress the clutch to instantly restart.

### Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. (Use the remote release button on the driver's door to unlock / open the fuel flap). To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.

### Folding the rear seats?

The rear seats can flat-fold, all seats can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seats to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

Lift the recess cover inside the boot to access the space-saver spare tyre. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### Driving an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Some vehicle models may feature four wheel drive.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-10 / 26-01-2014

# VAUXHALL MOKKA

**5 SEATS**  
**5 DOOR (FWD OR 4X4) SUV**




# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS


- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

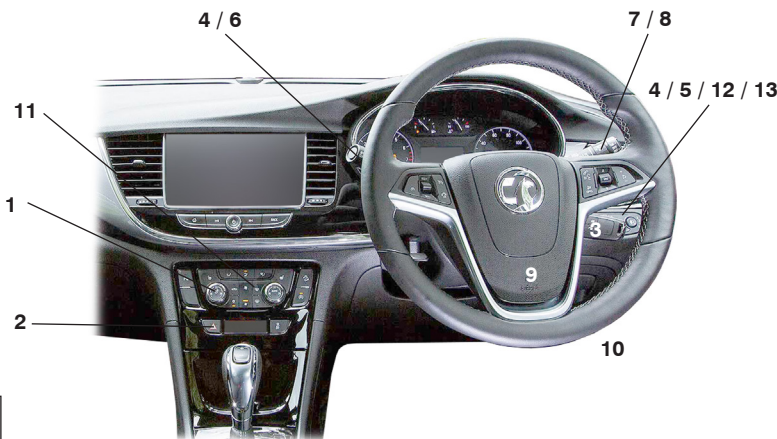

## NOTE:

### Usage of direction indicators

A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).

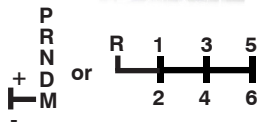

## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

215/60 R17

215/55 R18

225/45 R19

Vehicles feature a tyre pressure monitoring system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
53 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT

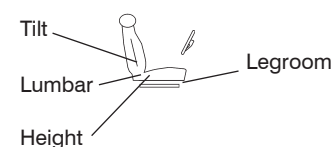

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Key / remote control operated central deadlocking. Depress the central locking switches on the centre console to lock/unlock all doors from the inside.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser and alarm. Visible VIN plate.
<b>Opening the boot?</b>	Centrally locked. Use the key or remote control to unlock / open independently of doors. Or press the remote release button on the driver's door to release it from inside. Use the boot handle to open.
<b>Adjusting door mirrors?</b>	Electric internal adjustment operated via a control pad on the driver's door.
<b>Opening the windows?</b>	Electric front operated via control switches on the driver's door. Manually operated rear. Or all electric.
<b>Opening sunroof?</b>	If fitted - electric glass sunroof, operated by roof mounted switchgear.
<b>Using child door locks?</b>	Located on the edge of the rear doors. Depress the central locking switches on the centre console to lock. Check from inside that the doors are securely locked.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or N or P if automatic) and parking brake is applied. Place ignition key in starter switch, <b>depress the clutch before attempting to start the car.</b> Press the engine start/stop switch to start or stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start / stop - engine auto shuts off when gears in neutral, pedals are not depressed, vehicle is stationary - to restart just depress the clutch or accelerator to instantly restart.
<b>Opening fuel filler cap?</b>	Centrally locked. Located under flap on rear offside. (Use the remote release button on the driver's door to unlock / open the fuel flap). To open: briefly press the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.
<b>Folding the rear seats?</b>	The rear seats have a 60:40 split and can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seats to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
<b>How to change a tyre</b>	Vehicle does not normally carry a spare wheel or tyre repair kit. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>Driving an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by pressing the (+) or (-) to change up or down. Whenever the vehicle is at a standstill apply the electronic parking brake. Some vehicle models may feature four wheel drive (4x4).

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-11 / 11-02-2018

# VAUXHALL MOKKA X

**5 SEATS**  
**5 DOOR (FWD OR 4X4) SUV**

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

205/55 R16  
225/45 R17  
225/40 R18

Confirm tyre pressures by consulting the table found on the inside of the driver's door B-pillar or inside the fuel filler cap.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
58.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Depress the centrally mounted central locking switch to lock the doors from the inside. Doors will auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open.
- Adjusting door mirrors?** Manual internal adjustment operated via a control lever on each door or electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control buttons on the driver's door. Manually operated rear. Or all electric.
- Operating the sunroof?** If fitted. Panoramic sunroofs controlled by roof mounted switchgear.
- Using child door locks?** Located on the edge of the rear doors, use the ignition key to turn the key slot into a horizontal position to activate it. Or use the central locking switch on the centre console. Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static - depress the clutch to instantly restart. For vehicles featuring a keyless entry and start. Simply carry the unique system key fob in your pocket or handbag and the car will automatically unlock as you operate a door or the tailgate. To start the engine, depress the brake pedal and push the start button on the centre console and to stop the engine, simply press the button again.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The second and third row of seats are divided into sections which can be folded / moved separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Use the **A** option for a fully automatic mode. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-12 / 30-03-2011


# VAUXHALL ZAFIRA

**7 SEATS**  
**5 DOOR / MPV**



# HOW TO OPERATE THE THIRD (REAR) ROW OF SEATS...

1.

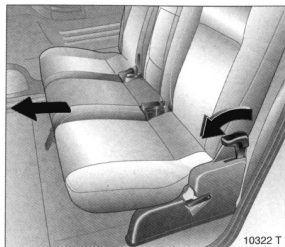

## Seats in the second row


### Moving seats

Push handle on right or left hand side of seat bench forward and move seat row forward or back. Release handle and allow seat row to lock into position.

### Folding down the centre armrest

For increased comfort, when the centre seat is unoccupied the centre armrest can be pulled down by tugging on the strap

2.

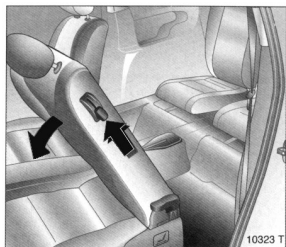


## Folding down the seat backrest

To facilitate entering and leaving the rear of the vehicle, the split rear seat backrest can be pushed forward. Pull up release lever and tilt seat backrest forward into second locking position.

After repositioning backrest, lock audibly into rearmost position.

3.

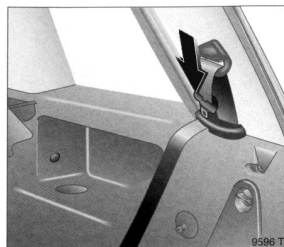

## Seats in the third row


### Lowering the seats into the vehicle floor

Before lowering the seats, move the seat bench in the second row forward by pushing the handle on the right or left hand side of the seat bench forward until the marking on the seat bench is level with the adjacent marking – see next page, Fig. 10324 T.

Push the head restraints right down. To do so, release both springs by pressing

Guide seat belt through fixture, as shown in illustration, and insert latch plate into fixture.

13.

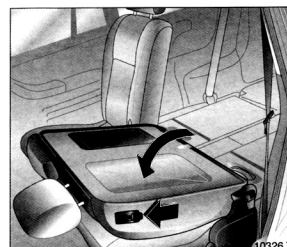


– or –  
lower one or both of the seats in the third row into the vehicle floor

Push head restraints on seats in second row down or remove them

Raise release lever on one or both seat backrests and fold backrests right down onto seat bench.


4.

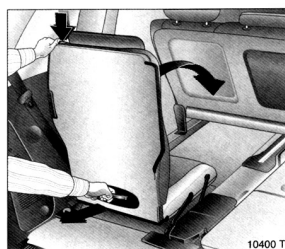

From luggage compartment, press button at top of seat backrest and push backrest forward. Raise seat by strap at rear and push backrest further forward until seat is lowered into vehicle floor.

Keep hold of the seat by the strap while lowering it into the floor.


5.

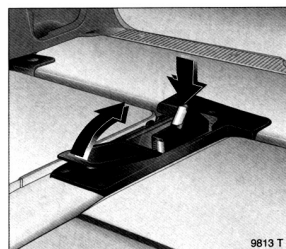

Push belt buckles into recess in floor and close cover.

Installing luggage compartment cover \*

6.

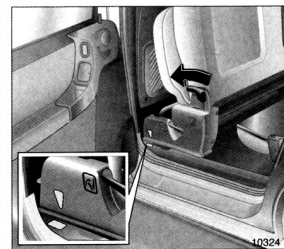

## Repositioning the seats

Move the seat bench in the second row forward by pushing the handle on the right or left hand side of the seat bench forward until the marking on the seat bench is level with the adjacent marking.

14.



– and additionally \* –  
Push head restraint on front passenger seat down or remove it

Fold front passenger seat forward by raising release lever.

## Repositioning the seat backrests


Set rear seat and front passenger seat backrests upright and lock audibly into position.

To lock the cover, pull it up together with the centre armrest and engage it audibly in position. Lower the centre armrest a little. If the cover comes down with it, lock the cover more firmly into place. Lock the cover audibly by pressing on the handle.

Diagrams and text reproduced by kind permission of Vauxhall Motors Limited

All Rights Reserved

7.

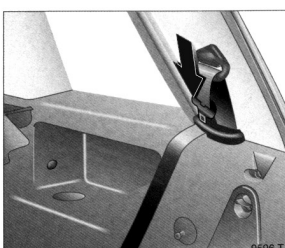

## Removing luggage compartment cover \*


As shown in the illustration, seat belts must be routed through the fixtures and latch plates inserted in the fixtures.

8.



From luggage compartment, raise seat by strap and move it back until it locks audibly back into the upright position, supporting the backrest at the top with the other hand – see Fig. 9815 T.

9.

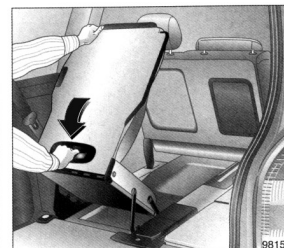


Open the cover in the floor between the seats and draw out the belt buckles Fig. 9813 T.

Remove latch plate and belt from fixture.

When in use by passengers, the belts must not be routed through the fixture.

10.

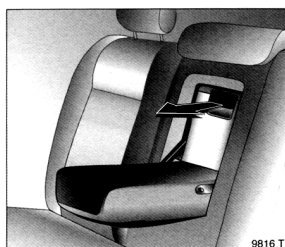


## Luggage compartment enlargement

**For transporting long, narrow objects**  
lower one or both of the seats in the third row into the vehicle floor

Fold down the centre armrest of the second row onto the seat cushion, pull the handle and tilt the cover forwards.

To lock, pull up the cover and the centre armrest together and engage the cover audibly in position. Lower the centre armrest a little. If the cover comes down with it, lock the cover more firmly into place. Lock the cover audibly by pressing on the handle.


11.

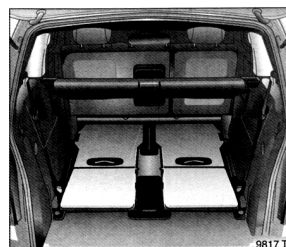

## For transporting large objects

lower one or both of the seats in the third row into the vehicle floor

12.

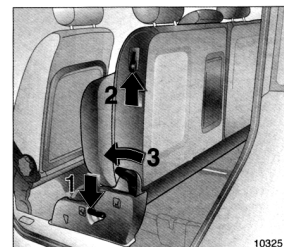

– and additionally –

Raise seat bench in second row by pushing handle 1 on right or left hand side of seat bench down and pushing up seat bench until it locks into position.

Raise release lever 2 on both seat backrests, set backrests upright and lock in position.

Push seat bench right forward by pushing handle 3 on right or left hand side of seat bench forwards. Keep the handle pressed until the seat bench is at its furthest forward position.

When moving the second seat row, roll up the lap belt of the centre seat and place it together with the belt buckles in the belt pockets in the seat bench


# VEHICLE INSTRUCTION CARD

 **For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



### CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

225/50 R17  
235/45 R18  
235/40 R19

Confirm tyre pressures by consulting the table found on the inside of the driver's door B-pillar or inside the fuel filler cap.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.  
*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
58 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

### Locking the doors?

Key / remote control operated central security deadlocking. Depress the centre console central locking switch to lock the doors from the inside. Doors will auto-lock on vehicle motion.

### Anti-theft system?

Passive arming of electronic engine deadlock immobiliser and alarm. Visible VIN plate.

### Opening the boot?

Centrally locked. Use the key or remote control to unlock / open.

### Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

### Opening the windows?

Electric front and rear windows operated via control buttons on the driver's door.

### Operating the sunroof?

If fitted. Glass sunroof controlled by roof mounted switchgear.

### Using child door locks?

Located on the edge of the rear doors, use the ignition key to turn the key slot into a horizontal position to activate it. Or use the central locking switch on the centre console. Check from inside that the doors are securely locked.

### Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology where the engine automatically turns off when the vehicle is static, gears in neutral and foot pedals are not depressed - just press the clutch or accelerator to instantly restart. For vehicles featuring a keyless entry and start. Simply carry the key in your pocket or bag and the car will automatically unlock as you operate a door or the tailgate. To start the engine, depress the brake pedal and push the start/stop button to start or stop the engine.

### Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. To open: press the edge of the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.

### Releasing the bonnet?

Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.

### Folding the rear seats?

Second and third row seats. Outer second row seats tilt and slide, centre seat can flip down into an armrest. Each rear seat flat folds individually with 33:33:33 split. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

### How to change a tyre?

Vehicle does not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

### How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Vehicle also feature a sport mode button which is used to select one of three driving modes. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-13 / 11-02-2018

# VAUXHALL ZAFIRA SPORTS TOURER

**7 SEATS**  
**5 DOOR / MPV**




# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS


- 1 Heating & Ventilation
- 2 Hazard Lights
- 3M Starter Switch (manual)
- 3A Engine Start/Stop (auto)
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12/13 Rear/Front Fog Lamp
- 14 Electronic Parking Brake

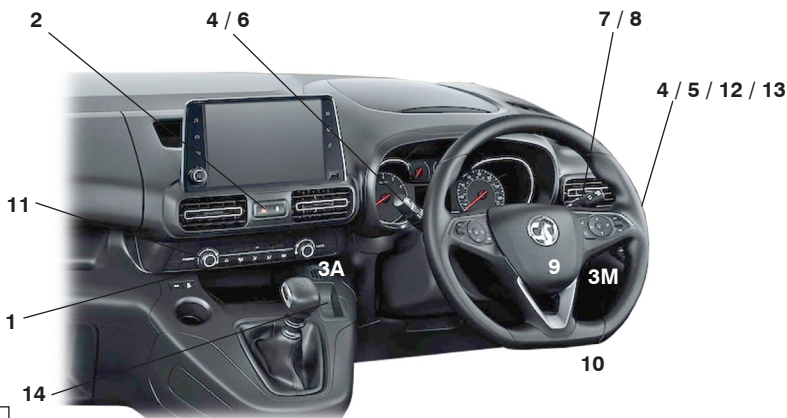

## NOTE:

### Usage of direction indicators

 A short movement of the indicator stalk in an upwards or downwards direction operates the indicator lights for a brief time; a deeper movement of the stalk in either direction will operate the indicator lights for a long duration. You will not feel a "click" when the indicators are engaged - but the dash mounted direction lights will be operational. (The indicators are also fitted with a self cancelling feature).



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

R15

R16

Vehicles feature a tyre pressure monitoring system.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

**NOTE:** Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
50 or 61 litres (diesel / petrol)

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central deadlocking. Press the central locking switch to lock/unlock all doors from the inside. Doors also auto-lock.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Vehicles are fitted with a remote control alarm system.
- Opening the load doors?** Centrally locked. The vehicle is fitted with a nearside panel sliding door (or twin sliding doors on some models). The floor has multiple fixed anchor points for securing loads. The rear features two wide-opening asymmetric doors with a 60:40 split. Vehicle also features an overload indicator. A gap in the bulkhead and a fold-down front seat enables accommodation of longer loads.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front operated via control switches on the driver's door.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and electronic parking brake - found adjacent to the gear selector lever is on. Manual models: Insert key in starter switch and turn on, **depress the clutch before attempting to start the car.** Auto models: keyless start/stop, just keep the key in your pocket or bag, and press the engine start/stop switch to start or stop the engine. Select desired gear. Release electronic parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature auto engine start / stop - engine auto shuts off when gears are in neutral, vehicle is motionless and pedals are not depressed, depress the foot pedals to instantly restart. The electronic parking brake will normally auto-release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. To open: briefly press the edge of the flap to release it, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the steering wheel in driver's footwell. Unhook catch under bonnet.
- How to change a tyre?** Vehicle does not normally carry a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears press use the rotary shift dial selector. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use the steering wheel shift paddles to manually change gears. Whenever the vehicle is at a standstill apply the electronic parking brake. A rotary driving mode selector dial can be used to choose various driving modes for different power and road conditions.

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



### CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

215/65 R16

205/65 R16

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

(Spacesaver spare tyres, if carried, can only be used for limited distances and reduced driving speeds.)

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
90.0 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking and key operated locking, with automatic locking.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with an alarm security system.
<b>Opening the side doors?</b>	Centrally locked. The vehicle is fitted with a single rear tailgate, plus two side-panel sliding doors. Doors auto-lock on vehicle motion
<b>Adjusting door mirrors?</b>	Manual internal adjustment operated via a control lever on each door, or electrically adjusted from a control pad on the driver's door.
<b>Opening the windows?</b>	Electrically controlled from control buttons on the drivers door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or P or N if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Located under a flap near the rear of the front passenger door. To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>How to change a tyre?</b>	The tools and jack are stored below the load area of the boot area. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>Folding the rear seats?</b>	The rear seat rows are divided into sections which can be folded separately. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
<b>Driving an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-VXH-15 / 24-10-2015

# VAUXHALL VIVARO COMBI

**7 SEATS**  
**5 DOOR MPV**

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly  
Legal minimum tread depth is 1.6 mm

215/65 R16  
205/65 R16

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

Vehicle is normally supplied with a full-size spare wheel. (Spacesaver spare tyres, if carried, can only be used for limited distances and reduced driving speeds.)

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
90 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking and key operated locking, with automatic locking.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with an alarm security system.
<b>Opening the side doors?</b>	Centrally locked. The vehicle is fitted with double rear tailgate doors (or a top opening one), plus one or two side-panel sliding doors. The floor has some fixed anchor points for securing loads in lieu of extra seating in the passenger van.
<b>Adjusting door mirrors?</b>	Manual internal adjustment operated via a control lever on each door, or electrically adjusted from a control pad on the driver's door.
<b>Opening the windows?</b>	Manually operated, or electrically controlled from control buttons on the drivers door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or P or N if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Some vehicles are fitted with auto start-stop technology, whereby engine automatically shuts off when in neutral, pedals are not depressed and the vehicle is not moving. To re-start just depress the clutch. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Located under a flap near the rear of the front passenger door. Centrally locked. To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>How to change a tyre?</b>	The tools and jack are stored under / behind the driver's seat (or below the load area of the boot area in passenger van variants). Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>Driving an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the handbrake.



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Windscreen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

195/75 R16  
215/65 R16  
225/65 R16  
235/65 R16

Spacesaver spare tyres, if carried, can only be used for limited distances and reduced driving speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
105 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking and key operated locking, with automatic locking.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with an alarm security system.
<b>Opening the sliding door?</b>	Centrally locked. The vehicle is fitted with a nearside panel sliding door. Some models may also be fitted with an offside panel sliding door. The floor has some fixed anchor points for securing loads.
<b>Adjusting door mirrors?</b>	Manual internal adjustment operated via a control lever on each door.
<b>Opening the windows?</b>	Manually operated, or electric operated via switches on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or P or N if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Centrally locked, located under flap on offside rear. To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>How to change a tyre?</b>	The tools and jack are stored under / behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>Driving an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the handbrake.



 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Windscreen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

195/75 R16  
215/65 R16  
225/65 R16  
235/65 R16

Spacesaver spare tyres, if carried, can only be used for limited distances and reduced driving speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
105 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking and key operated locking, with automatic locking.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with an alarm security system.
<b>Adjusting door mirrors?</b>	Manual internal adjustment operated via a control lever on each door.
<b>Opening the windows?</b>	Manually operated, or electric operated via switches on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or P or N if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Centrally locked, located under flap on offside rear. To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>How to change a tyre?</b>	The tools and jack are stored under / behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>Driving an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the handbrake.

 
# VEHICLE INSTRUCTION CARD

**For assistance after an accident/incident, please call 0800 0280 999**

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

## CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Windscreen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



## CAUTION!

When parked, the electronic parking brake or handbrake should be fully applied with the vehicle left in first or reverse gear (manual transmission) or P (Park) for vehicles with automatic transmission.

## TYRE PRESSURES (COLD)

Check tyre pressure regularly

Legal minimum tread depth is 1.6 mm

Confirm tyre pressures by consulting the tables found on the driver's door B-pillar or inside of fuel filler flap.

195/75 R16  
215/65 R16  
225/65 R16  
235/65 R16

Spacesaver spare tyres, if carried, can only be used for limited distances and reduced driving speeds.

## TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

*NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).*

## FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:  
105 litres

## IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

## CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

## DRIVER'S SEAT



## FUEL

Only use the correct fuel type. Refer to fuel filler cap labels.

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

## USEFUL INFORMATION ABOUT YOUR VEHICLE

<b>Locking the doors?</b>	Remote control operated central deadlocking and key operated locking, with automatic locking.
<b>Anti-theft system?</b>	Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Visible VIN plate. Some models are fitted with an alarm security system.
<b>Adjusting door mirrors?</b>	Manual internal adjustment operated via a control lever on each door.
<b>Opening the windows?</b>	Manually operated, or electric operated via switches on the driver's door.
<b>Starting the engine?</b>	Ensure gear selector is in neutral (or P or N if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle.
<b>Opening fuel filler cap?</b>	Centrally locked, located under flap on offside rear. To open: briefly press the flap to release it, this action slightly springs open the flap, then lift the edge of the flap to fully open it, twist off the cap anticlockwise. To close: press the flap closed.
<b>Releasing the bonnet?</b>	Pull bonnet release lever located on right side panel of driver's foot well. Unhook catch under bonnet.
<b>How to change a tyre?</b>	The tools and jack are stored under / behind the driver's seat. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. <b>For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.</b>
<b>Driving an automatic?</b>	To change gears press the button on the shift lever and move the lever forwards or backwards. Select <b>N</b> for neutral, <b>P</b> when leaving the vehicle, <b>R</b> for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select <b>D</b> where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). A manual sequential gearbox is provided by moving the lever to the left of the normal D position and pushing the lever forward (+) or backward (-) to change up or down. Whenever the vehicle is at a standstill apply the handbrake.