

INDEX - VICs (VEHICLE INSTRUCTION CARD)

SEAT VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Ibiza	5 seats / 5 door hatchback
4	Leon	5 seats / 5 door hatchback
5	Arona	5 seats / 5 door / SUV
6	Ateca	5 seats / 5 door / SUV
7	Tarraco	7 Seats / 5 door / SUV


VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

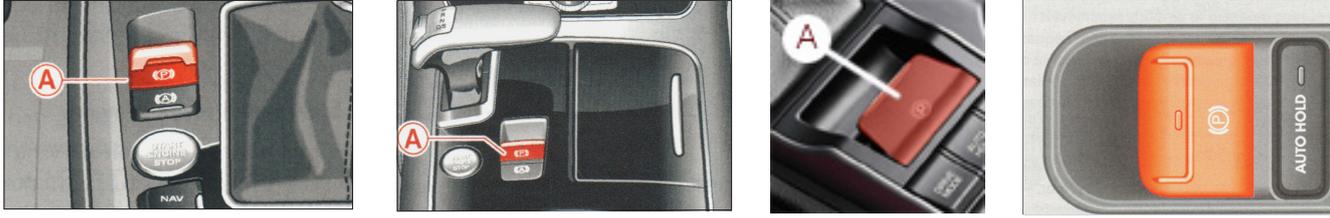

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

DEADLOCKS

Deadlock / safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following **MAXIMUM** speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

185/65 R15, 195/55 R16
215/45 R17, 215/40 R18

Models are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using spacesaver spare tyres.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Fuel Tank Capacity: 40 litres

AdBlue Information

If an AdBlue warning appears, please contact your local Europcar Station.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

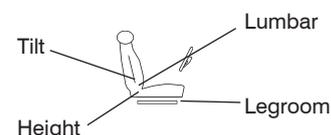

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Depress central locking switch mounted on the centre console to lock all doors. Doors auto-lock.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. (Lift up the car badge to open).
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt/slide sunroof controlled by roof mounted switchgear.
- Using child door locks?** Child-proof door locks are fitted to the rear doors. Located on the edge of the rear doors, use a key to rotate the knob, to either activate or deactivate. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and handbrake is on. Place ignition key in starter switch (or for keyless models, just keep the key in your pocket or handbag. Press engine start/stop button to start or stop the engine.) Start the engine whilst pressing the brake pedal or clutch (manual) Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology: when the car is stopped, and the gear lever is in neutral and foot pedals are not depressed, the start/stop system automatically switches the engine off. Once the foot pedals are used the engine instantly re-starts.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of flap to open, and twist off the cap anticlockwise. Press flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into 60:40 sections which can be separately folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears (or use the steering wheel gear shift paddles where fitted). Whenever the vehicle is at a standstill apply the handbrake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake
- 15 Engine Start/Stop



TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

205/55 R16
225/45 R17
225/40 R18

Some models may be fitted with an electronic tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

FUEL

Fuel Tank Capacity: 50 litres
(estate 45 litres)

AdBlue Information

If an AdBlue warning appears, please contact your local Europcar Station.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

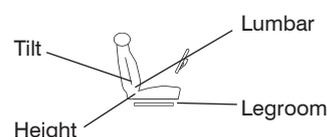

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Press the central locking switch mounted on the centre console. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Models are fitted with a remote control security alarm system.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. (Lift up the car badge to access the keyslot).
- Adjusting door mirrors?** Manual internal adjustment operated via a control lever on each door or electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric tilt/slide controlled by roof mounted switchgear.
- Using child door locks?** Press the central locking switch on the centre console to lock the doors. Child-proof door locks are fitted to the rear doors. Located on the edge of the rear doors, use a key to rotate the knob, to either activate or deactivate. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and parking brake is on. Place ignition key in starter switch (or for keyless starting, just keep the key in your pocket or handbag. Press engine start/stop button to start or stop the engine.) Start the engine whilst pressing the brake pedal or clutch (manual). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology: when the car is stopped, and the gear lever is in neutral and foot pedals are not depressed, the start/stop system automatically switches the engine off. Once the foot pedals are used the engine instantly re-starts.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel release. Lift the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into sections which can be folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SEA-02 / 19-06-2021

SEAT LEON

**5 SEATS
5 DOOR HATCH / ESTATE**


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

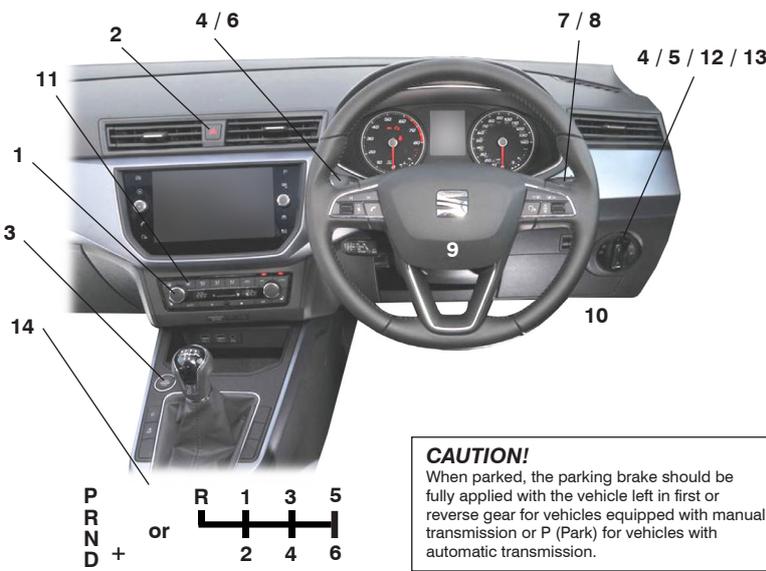

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

195/60 R16 205/55 R17
205/60 R16 215/45 R18

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Models are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using runflat tyres which have been punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Fuel Tank Capacity:
40 litres

AdBlue Information

If an AdBlue warning appears, please contact your local Europcar Station.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

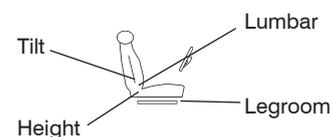

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Auto door locking.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser and alarm. Visible VIN plate. Auto door locking.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Press the rear lid handle to open the tailgate from the outside. Some models feature a hands-free power operated tailgate using foot gesture control, remotely operated by foot sensor activation below the rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric power sliding panoramic sunroof controlled by one-touch roof mounted switchgear.
- Using child door locks?** Press the central locking switch on the centre console to lock the doors. Child-proof door locks are fitted to the rear doors. Located on the edge of the rear doors, use a key to rotate the knob, to either activate or deactivate. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and parking brake is on. Place ignition key in starter switch (or for keyless starting, just keep the key in your pocket or handbag. Press engine start/stop button to start or stop the engine.) Start the engine whilst pressing the brake pedal or clutch (manual). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology: when the car is stopped, and the gear lever is in neutral and foot pedals are not depressed, the start/stop system automatically switches the engine off. Once the foot pedals are used the engine instantly re-starts. Use the centre console driving mode selector to choose options for a selection of driving modes.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel flap release. Press the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into 60:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the electric parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SEA-03 / 19-06-2021

SEAT AROCA

**5 SEATS
5 DOOR / SUV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/55 R17, 215/50 R18, 235/40 R19

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Models are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using runflat tyres which have been punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Fuel Tank Capacity:
50 or 55 litres (2WD or 4WD)

AdBlue Information

If an AdBlue warning appears, please contact your local Europcar Station.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

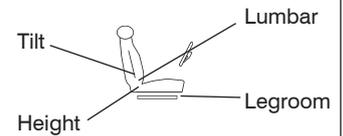

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Auto door locking.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Models are fitted with a remote control security alarm system.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Press the marque's badge to open the tailgate from the outside. Some models feature a hands-free power operated tailgate using foot gesture control, remotely operated by foot sensor activation below the rear bumper.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric power sliding panoramic sunroof controlled by one-touch roof mounted switchgear.
- Using child door locks?** Press the central locking switch to lock all doors. Child-proof door locks are fitted to the rear doors. Located on the edge of the rear doors, use a key to rotate the knob, to either activate or deactivate. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and parking brake is on. Place ignition key in starter switch (or for keyless starting, just keep the key in your pocket or handbag. Press engine start/stop button to start or stop the engine.) Start the engine whilst pressing the brake pedal or clutch (manual). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology: when the car is stopped, and the gear lever is in neutral and foot pedals are not depressed, the start/stop system automatically switches the engine off. Once the foot pedals are used the engine instantly re-starts.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Remote internal fuel flap release. Lift the edge of flap to open, and twist off the cap anticlockwise.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seats are divided into 60:40 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- 4WD options?** Some vehicles may be fitted with 4WD. Use the rotary driving mode selector dial to choose options for a selection of driving modes and road surface types.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the electric parking brake. Use the rotary driving mode selector dial to choose options for a selection of driving modes and road surface types.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SEA-04 / 10-01-2019

SEAT ATECA

**5 SEATS
5 DOOR / SUV**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R17, 235/55 R18, 235/50 R19,
235/45 R20

Check the tyre pressure table found on the inside of driver's door B-pillar (or fuel filler cap).

Models are fitted with an electronic tyre pressure monitor.

Note: driving speeds and travel distances are restricted when using runflat tyres which have been punctured.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Fuel Tank Capacity:
58 or 60 litres (2WD or 4WD)

AdBlue Information

If an AdBlue warning appears, please contact your local Europcar Station.

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

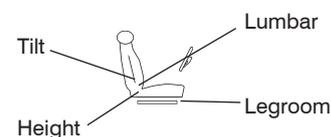

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central security deadlocking. Auto door locking.
- Anti-theft system?** Passive arming of electronic engine deadlock immobiliser after removal of the key from the starter switch. Visible VIN plate. Models are fitted with a remote control security alarm system.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Press the marque's badge to open the tailgate from the outside. Keyless entry models feature a hands-free power operated tailgate activated by using foot gesture control, remotely operated by foot sensor activation below the rear bumper. Luggage compartment features a split level function.
- Adjusting door mirrors?** Electric internal adjustment operated via a control knob on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted. Electric power sliding panoramic sunroof controlled by one-touch roof mounted switchgear.
- Using child door locks?** Press the central locking switch to lock all doors. Child-proof door locks are fitted to the rear doors. Located on the edge of the rear doors, use a key to rotate the knob, to either activate or deactivate. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (P or N if auto) and parking brake is on. Place ignition key in starter switch (or for keyless starting, just keep the key in your pocket or handbag. Press engine start/stop button to start or stop the engine.) Start the engine whilst pressing the brake pedal or clutch (manual). Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature engine start/stop technology: when the car is stopped, and the gear lever is in neutral and foot pedals are not depressed, the start/stop system automatically switches the engine off. Once the foot pedals are used the engine instantly re-starts.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of flap to open, and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located to the lower right of the instrument panel. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat second and third rows are divided into 30:30:30 and 50:50 sections which can be separately flat-folded. To release the seat press the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicles are not normally supplied with a tyre repair kit or spare wheel. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- 4WD options?** For vehicles fitted with 4WD. Use the rotary driving mode selector dial adjacent to the gear shift lever to choose options for a selection of driving modes and road surface types.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use DS+ or DS- to manually select gears. Whenever the vehicle is at a standstill apply the electronic parking brake. Use the rotary driving mode selector dial to choose options for a selection of driving modes and road surface types.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SEA-05 / 06-06-2019

SEAT TARRACO

7 SEATS
4WD OR 2WD / 5 DOOR / SUV