

INDEX - VICs (VEHICLE INSTRUCTION CARD)

SKODA VEHICLES

Page	Vehicle	Details
1	Index	n/a
2	Supplement (Electronic Parking Brake, etc)	n/a
3	Fabia	5 seats / 5 door / hatchback / estate
4	Scala	5 seats / 5 door / hatchback
5	Rapid	5 seats / 5 door / hatchback
6	Octavia	5 seats / 5 door / hatchback / estate
7	Octavia PHEV HYBRID	5 seats / 5 door / hatchback / estate / Plug-in Hybrid
8	Superb	5 seats / 5 door / hatchback / estate
9	Kamiq	5 seats / 5 door / 4x4 / SUV
10	Karoq	5-7 seats / 5 door / 4x4 / SUV
11	Kodiatq	5-7 seats / 5 door / 4x4 / SUV




VEHICLE INSTRUCTION CARD SUPPLEMENT

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

ELECTRONIC PARKING BRAKE (EPB)

INFORMATION

Where fitted, the electronic parking brake replaces the mechanical handbrake and is designed to prevent the vehicle from accidentally rolling away. This system offers convenience and safety features in addition to those normally associated with a mechanical handbrake. Please refer to the primary Vehicle Instruction Guide for information about other operational instructions.

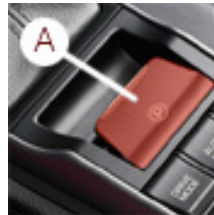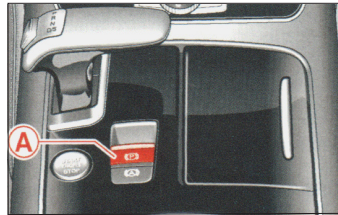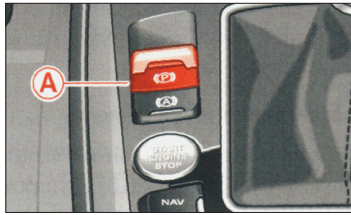

LOCATION

The diagrams above indicate example locations of the electronic parking brake (A) which is labelled with the universal icon symbol: **(P)**

ACTIVATION

The EPB will normally auto activate. *If will also activate if seat belts are not being worn, or when luggage placed on top of seats activates the system. To enable the system to function correctly, fasten seatbelts, and remove luggage from the seats and store it securely in the boot.* Pull the switch labelled A to manually apply the parking brake. The warning lamps on both the switch and instrument panel will light up to confirm its activation.

DEACTIVATION

The EPB will normally auto release. Depress the brake or accelerator pedal to auto release it, or press the switch (A) to manually release it. The associated warning lamps on both the switch and dashboard instrument panel will go out to confirm its deactivation. *Note: seatbelts should be fastened, and luggage should not be placed on seats.*

WHEN DRIVING AWAY

The parking brake will deactivate automatically when driving away, and it also prevents the vehicle from rolling back unintentionally for a few seconds when starting on a gradient. This works by driving off in a normal way, the parking brake will automatically release and the vehicle will start moving in the desired direction.

On vehicles fitted with an automatic gear box, you can apply the parking brake when stopping briefly at traffic lights etc., to avoid the vehicle creeping forward. When you drive off the parking brake will be automatically released.

SAFELOCK

Safelock messages shown on the instrument display when the engine is turned off simply indicate that once you exit the vehicle and lock the doors, they're effectively deadlocked and anyone left in the car wouldn't be able to get out in the event of an emergency. The warning is nothing to worry about and is just a standard advisory message.

SEATBELT WARNING LIGHTS

A seatbelt warning light may illuminate when the engine is turned on. This may mean that the electronic parking brake (EPB) becomes auto activated to prevent vehicle movement. To deactivate these warning lights, and turn off the auto activation of the EPB in this instance, ensure all passengers fasten their seatbelts, and remove any luggage from on top of the seats. For safety secure all luggage inside the boot.

WARNING LIGHTS AND WHAT THEY MEAN

Don't panic! Despite seeing a new light pop-up on your instrument panel, unless it is red it is likely the car is still running fine, and while there may be a problem to attend to, proceed with confidence and patience.

RED indicates a potentially serious problem or safety issue. Attend to it! Red may also indicate an important reminder.

YELLOW or orange means something needs to be serviced or repaired soon. If it is flashing, it is important that you contact your rental agent for advice.

GREEN or blue is only telling you that a system is on or operating normally.

DRIVING RESTRICTIONS AND/OR CONDITIONS

Unless indicated otherwise by road traffic signs and/or local road regulations and/or dictated by weather conditions, the Highway Code states that provided always it is safe to do so, a passenger vehicle may be driven at the following MAXIMUM speeds (MPH):

Built-up area (street lit)	Elsewhere		Motorway
	Single carriageway	Dual carriageway	

Drivers are reminded that they are responsible for the consequences arising out of their failure to comply at all times with the requirements of any applicable Road Traffic Regulations, the Highway Code and/or to the road conditions prevailing at the time and in the locality through which they are driving the vehicle.

Europcar accepts no responsibility or liability for any costs, claims, penalties, fines or any other circumstances arising out of or in connection with the driver's failure to comply with all and any road restrictions and/or conditions.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp



To select reverse press the shift lever down before engaging gear

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

185/60 R15
215/45 R16

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

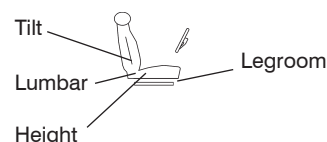

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central-locking switch on the driver's door. Doors auto lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Alarm system. Visible VIN.
- Opening the boot?** Centrally locked. Pull remote release at right of driver's seat or use the key or remote control to unlock / open. Boot space features an adjustable boot shelf height.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control switches on the driver's door. Some models have manual opening rear windows.
- Operating the sunroof?** If fitted - roof mounted controls are used to control the power operated panoramic sunroof.
- Using child door locks?** Use the ignition key to twist the key slot located on the edge of the rear doors to activate (or press the central locking switch on the driver's door). Check from inside that the doors are securely locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch. Use a normal starting routine. OR if fitted, press the engine start/stop button to start/stop the engine (for keyless start models: just retain the key in your pocket or bag and press the engine start/stop button). Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Pull the remote release button at right of driver's seat to release it. Press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull bonnet release lever located on the right hand side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Driving an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the handbrake.


VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp

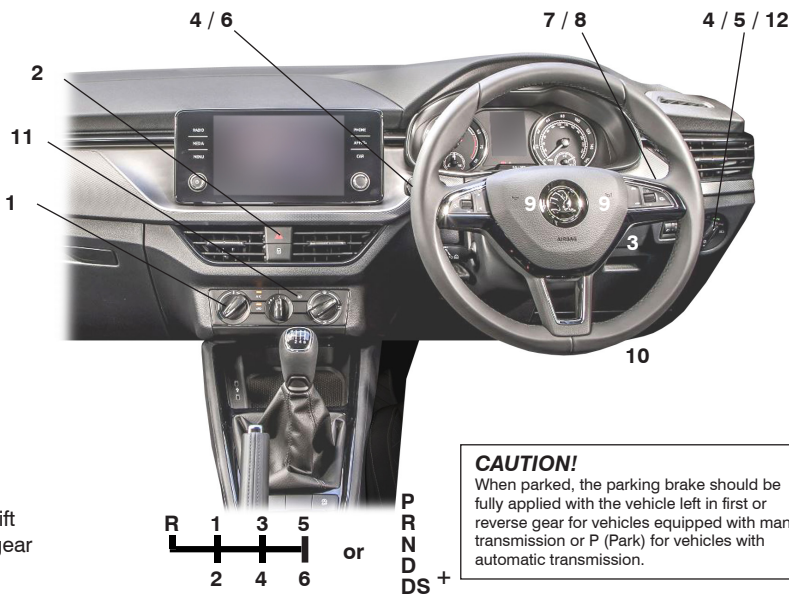

To select reverse press the shift lever down before engaging gear

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/55 R16
205/50 R17
205/45 R18

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Vehicles feature a dashboard display for tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

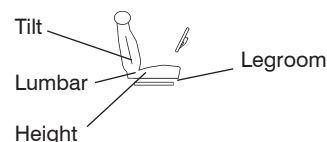

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN. Auto door locking.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release. Auto-locking. Models may feature a power opening boot lid operated via remote control or driver's door button.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to control the electric panoramic sunroof.
- Using child door locks?** Child-proof door locks. Press the central locking switch on the centre console to lock all of the doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Insert key into starter switch and twist to start the engine. For keyless starting: keep the key in your pocket or bag, press the engine start/stop button to start/stop the engine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are depressed. Use the drive mode select options to select a pre-configured driving parameter mode.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** The vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Use the centre console drive mode selector to select various driving modes to suit comfort and driving styles. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-02 / 03-02-2020

SKODA SCALA

**5 SEATS
5 DOOR HATCHBACK**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

 
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp



To select reverse press the shift lever down before engaging gear

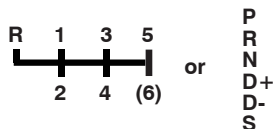

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

185/60 R15
215/45 R16
215/40 R17

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures. Some vehicles feature a dashboard display tyre pressure monitor.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
55.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

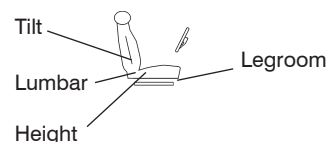

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?	Key / remote control operated central locking. Press the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
Anti-theft system?	Passive arming of electronic engine immobiliser after removal of the key from the starter switch.
Opening the boot?	Centrally locked. Use the key or remote control to unlock / open. Remote release. Auto-locking.
Adjusting door mirrors?	Electric internal adjustment operated via a control pad on the driver's door.
Opening the windows?	Electric front operated via control buttons on the driver's door. Manually operated rear. Or electric rear operated by switches in driver's door.
Operating the sunroof?	If fitted - roof operated switchgear is used to control the electric panoramic sunroof.
Using child door locks?	Located on the edge of the rear doors only. Press the central locking switch on the centre console to activate. Check from inside that the doors are securely locked.
Starting the engine?	Ensure gear selector is in neutral (or N or P if automatic) and handbrake is on. Place ignition key in starter switch (and depress clutch on manual models). Use a normal starting routine. Select desired gear. Release handbrake and brake pedal and gently press the accelerator to move the vehicle. Some vehicles feature a stop/start system which automatically stops the engine when the car is stationary, gears in neutral and foot pedals are not depressed. The engine restarts immediately as soon as the driver presses the clutch or steps off the brake.
Opening fuel filler cap?	Centrally locked. Located under flap on rear offside. Press the remote release button to release it. Lift edge of the flap and twist off the cap anticlockwise.
Releasing the bonnet?	Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
Folding the rear seats?	The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
How to change a tyre?	Lift the recess cover inside the boot to access the spare wheel, tools and jack. Move the vehicle to firm / level ground. Turn the engine off, select first gear (manual) or P (automatic). Apply the handbrake or parking brake. Loosen the wheel nuts (do not remove them). Only use the specific reinforced jack points on the underside of the vehicle. Crank the jack to lift the vehicle. Undo wheel nuts and change the wheel. Lower the vehicle. Tighten the wheel nuts. For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.
How to drive an automatic?	To change gears press the button on the shift lever and move the lever forwards or backwards. Select N for neutral, P when leaving the vehicle, R for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select D where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use D+ or D- to manually select gears. Use S for a sportier gear change. Use the centre console drive mode selector to select various driving modes to suit comfort and driving styles. Whenever the vehicle is at a standstill apply the handbrake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-03 / 13-01-2018

SKODA RAPID

**5 SEATS
5 DOOR HATCHBACK**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

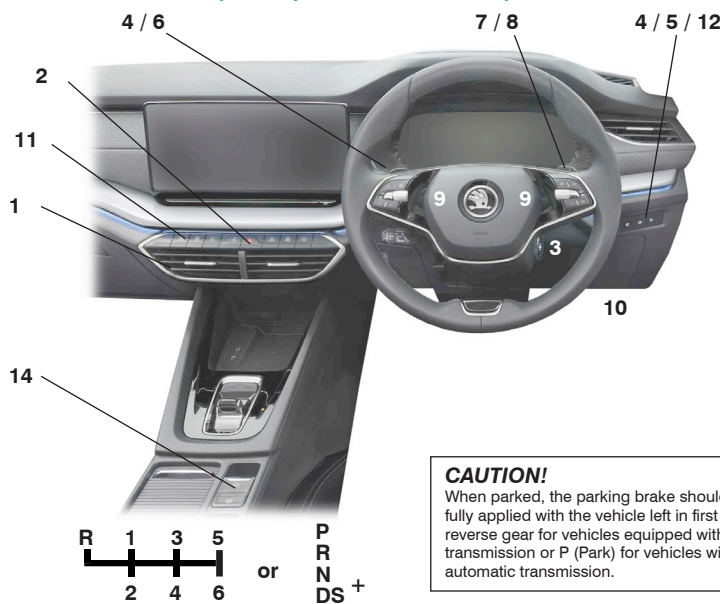

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R16
R17
R18

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Vehicles feature a dashboard display for tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

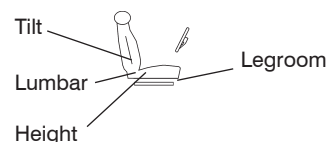

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch in the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser and alarm. Visible VIN. Auto door locking.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release switch in centre console. Auto-locking. Estate may have a power opening boot lid operated via remote control or centre console button.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to control the electric panoramic sunroof.
- Using child door locks?** Child-proof door locks. Press the central locking switch on the centre console to lock all of the doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. OR if fitted, press the engine start/stop button to start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. NOTE: estate models feature variable floor height options for the load area.
- How to change a tyre?** This vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **S+** or **S-** to manually select gears. Some vehicle may have paddle gear shift levers fitted to the steering column these are used to manually change gears up and down. Use the centre console drive mode selector to select various driving modes to suit comfort and driving styles. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-04 / 03-02-2020

SKODA OCTAVIA

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Engine Start / Stop
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic Parking Brake

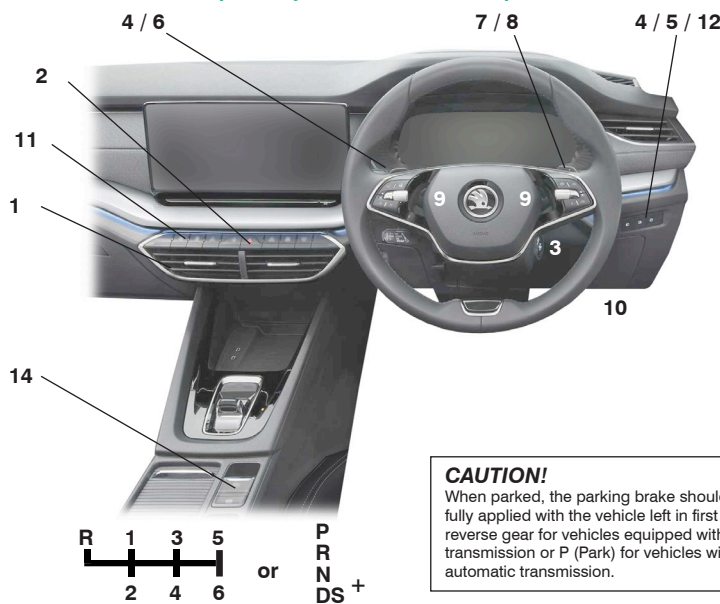

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

R16
R17
R18

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Vehicles feature a dashboard display for tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50.0 litres + Electric hybrid

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

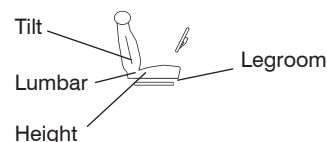

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press the central locking switch in the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.

Anti-theft system?

Passive arming of electronic engine immobiliser and alarm. Visible VIN. Auto door locking.

Opening the boot?

Centrally locked. Use the key or remote control to unlock / open. Remote release switch in centre console. Auto-locking. Estate may have a power opening boot lid operated via remote control or centre console button.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted - roof operated switchgear is used to control the electric panoramic sunroof.

Using child door locks?

Child-proof door locks. Press the central locking switch on the centre console to lock all of the doors. Check from inside that the doors are securely closed and locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. OR if fitted, press the engine start/stop button to start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.

Hybrid electric use ?

Vehicle is fitted with a 85kW motor with a lithium ion battery plus a petrol engine. All electric range is up to 44 miles (dependent on driving style). Battery requires charging via the electric charge socket located under a flap on the front nearside of vehicle. Lightly press the edge of the flap to open and close. Three switchable driving modes are available: E-mode (electric only), sport (sportier hybrid driving) and hybrid (switches between electric and petrol). Charging times: overnight charging using a home charger AC wall box (3.6kW, 7kW or 22kW 3-phase types); 70 mins to 80% capacity with a 50kW DC charger; 6 hours fast charging using a 11 kW AC public charger; slow charging using a domestic 3-pin socket running at 2.3 kW.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat. NOTE: estate models feature variable floor height options for the load area.

How to change a tyre?

This vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **S+** or **S-** to manually select gears. Some vehicle may have paddle gear shift levers fitted to the steering column these are used to manually change gears up and down. Use the centre console drive mode selector to select various driving modes to suit comfort and driving styles. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-05 / 04-09-2021

SKODA OCTAVIA iV PHEV

HYBRID

**5 SEATS / PLUG-IN HYBRID
5 DOOR HATCHBACK / ESTATE**

 
VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999


For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

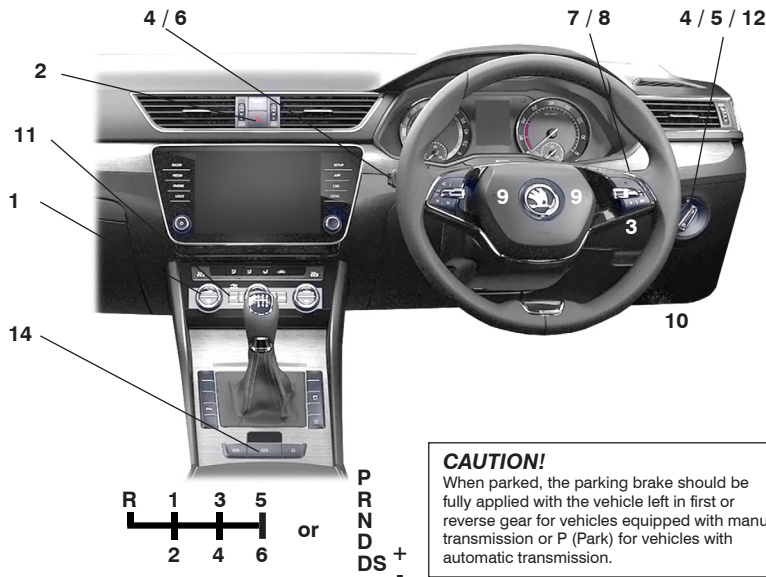

Manual: To select reverse press the shift lever down before engaging gear

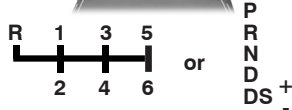

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/55 R17
235/45 R18
235/40 R19

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Dashboard display provides automatic tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
66.0 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.


Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

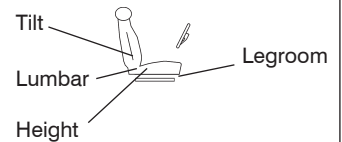

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Alarm system. Visible VIN.
- Opening the boot?** Centrally locked. Use the key or remote control to unlock / open. Remote release on hatchback, the hatchback tailgate can open as a conventional saloon or hatchback via a twinlock mode. Auto-locking. Some models feature power operated opening via a button adjacent to the gear stick (and via remote control on the smart key). Some models also include hands-free automatic opening/closing, by use of a foot gesture swipe below the rear bumper sensor to activate it.
Electric internal adjustment operated via a control pad on the driver's door.
- Adjusting door mirrors?** Electric front and rear operated via control buttons on the driver's door.
- Opening the windows?** If fitted - roof operated switchgear is used to control the electric panoramic sliding sunroof with blind.
- Operating the sunroof?** Child-proof door locks. Press the central locking switch on the centre console to lock all of the doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. OR for keyless starting (if fitted), retain the key in your pocket or bag, press the engine start/stop button to start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed. OR press the remote release to open it.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** This vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Use the centre console drive mode selector to select various driving modes to suit comfort and driving styles. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-06 / 14-04-2019

SKODA SUPERB

5 SEATS
5 DOOR HATCHBACK / 5 DOOR ESTATE

VEHICLE INSTRUCTION CARD

 
For assistance after an accident/incident, please call 0800 0280 999

For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake

Manual: To select reverse press the shift lever down before engaging gear

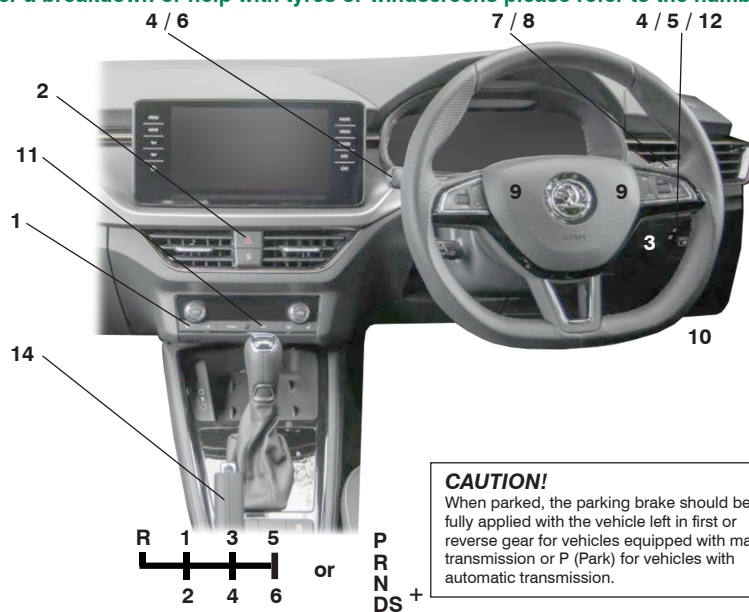

CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

205/60 R16
205/55 R17
215/45 R18

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Dashboard display provides automatic tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.

NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
45 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

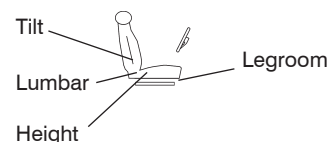

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press the central locking switch in the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.

Anti-theft system?

Passive arming of electronic engine immobiliser and alarm. Visible VIN. Auto door locking.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Load area base can be lowered to increase the storage capacity. Some models include hands-free automatic opening/closing, by use of a foot gesture swipe below the rear bumper sensor to activate it.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted - roof operated switchgear is used to control the electric panoramic sliding sunroof with blind.

Using child door locks?

Child-proof door locks. Press the central locking switch on the centre console to lock all of the doors. Check from inside that the doors are securely closed and locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Place ignition key in starter switch. Use a normal starting routine. OR for keyless starting (if fitted), retain the key in your pocket or bag, press the engine start/stop button to start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into 60:40 sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **S+** or **S-** to manually select gears. Use the centre console drive mode selector to select various driving modes to suit comfort and driving styles. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-07 / 19-06-2021

SKODA KAMIQ

**5 SEATS
5 DOOR / SUV**

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

 
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



Manual: To select reverse press the shift lever down before engaging gear



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/55 R17
215/50 R18
225/45 R19

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Dashboard display provides automatic tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
50 or 55 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

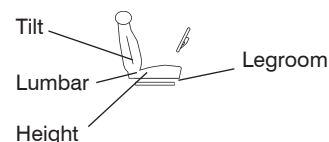

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

Locking the doors?

Key / remote control operated central locking. Press the central locking switch in the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.

Anti-theft system?

Passive arming of electronic engine immobiliser and alarm. Visible VIN. Auto door locking.

Opening the tailgate?

Centrally locked. Use the key or remote control to unlock / open. Load area base can be lowered to increase the storage capacity. Some models include hands-free automatic opening/closing, by use of a foot gesture swipe below the rear bumper sensor to activate it.

Adjusting door mirrors?

Electric internal adjustment operated via a control pad on the driver's door.

Opening the windows?

Electric front and rear operated via control buttons on the driver's door.

Operating the sunroof?

If fitted - roof operated switchgear is used to control the electric panoramic sliding sunroof with blind.

Using child door locks?

Child-proof door locks. Press the central locking switch on the centre console to lock all of the doors. Check from inside that the doors are securely closed and locked.

Starting the engine?

Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Vehicle features keyless start / stop, press the engine start/stop button to start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.

Opening fuel filler cap?

Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.

Releasing the bonnet?

Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.

Folding the rear seats?

The rear seat is divided into 33:33:33 sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.

How to change a tyre?

Vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**

Using 4x4?

The vehicle features 4x4 drive. Use the centre console switch to select various driving modes, plus all wheel drive options.

How to drive an automatic?

To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **S+** or **S-** to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

VEHICLE INSTRUCTION CARD

For assistance after an accident/incident, please call 0800 0280 999

 
For assistance after a breakdown or help with tyres or windscreens please refer to the numbers on the tax disc holder.

CONTROLS

- 1 Heating & Ventilation
- 2 Hazard Lights
- 3 Starter Switch
- 4 Headlights
- 5 Sidelights
- 6 Indicators
- 7 Wipers
- 8 Rear Screen Wipers
- 9 Horn
- 10 Bonnet Release
- 11 Heated Rear Screen
- 12 Rear Fog Lamp
- 13 Front Fog Lamp
- 14 Electronic parking brake



Manual: To select reverse press the shift lever down before engaging gear



CAUTION!

When parked, the parking brake should be fully applied with the vehicle left in first or reverse gear for vehicles equipped with manual transmission or P (Park) for vehicles with automatic transmission.

TYRE PRESSURES (COLD)

Check tyre pressure regularly
Legal minimum tread depth is 1.6 mm

215/65 R17
235/55 R18
235/50 R19

Consult the tyre pressure table on the driver's door B-pillar to confirm inflation pressures.

Dashboard display provides automatic tyre pressure monitoring.

TYRE HELPLINE

In the event of having a punctured tyre please call the **Europcar Tyre Helpline 0800 0280 999** for ANY assistance.
NOTE: Vehicles are not usually supplied with a tyre repair kit (for vehicles that use this in lieu of a spare wheel).

FUEL

Ensure you use the correct fuel type. Only use unleaded petrol in petrol vehicles (see inside of filler flap).

Fuel Tank Capacity:
58 or 60 litres

IN CASE OF BREAKDOWN

Use hazard lights. Attempt to park in a safe position.

 
Use an emergency phone rather than a mobile as emergency services will then know the location of the vehicle.

CHILD SEATS

Never use a child seat in a front passenger seat which is fitted with an active airbag (SRS). Follow all fitting instructions carefully.

Check seat positioning and security before use.

DRIVER'S SEAT

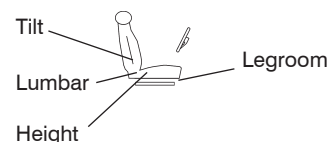

Vehicle specifications are subject to change. When the engine is turned off, ensure that the starter switch is in position II when operating electrical items such as door mirrors and windows, etc. **This vehicle does not include any manufacturer handbooks or manuals.**

USEFUL INFORMATION ABOUT YOUR VEHICLE

- Locking the doors?** Key / remote control operated central locking. Press the central locking switch on the centre console to lock the doors from the inside. Doors auto-lock on vehicle motion.
- Anti-theft system?** Passive arming of electronic engine immobiliser after removal of the key from the starter switch. Alarm system. Visible VIN.
- Opening the tailgate?** Centrally locked. Use the key or remote control to unlock / open. Load area base can be lowered to increase the storage capacity. Some models include hands-free automatic opening/closing, use a foot gesture swipe below the rear bumper sensor to activate it.
- Adjusting door mirrors?** Electric internal adjustment operated via a control pad on the driver's door.
- Opening the windows?** Electric front and rear operated via control buttons on the driver's door.
- Operating the sunroof?** If fitted - roof operated switchgear is used to control the electric panoramic sliding sunroof with blind.
- Using child door locks?** Child-proof door locks. Press the central locking switch on the driver's door to lock all of the doors. Check from inside that the doors are securely closed and locked.
- Starting the engine?** Ensure gear selector is in neutral (or N or P if automatic) and parking brake is on. Vehicle features keyless start / stop, press the engine start/stop button to start/stop the engine. Select desired gear. Release parking brake and brake pedal and gently press the accelerator to move the vehicle. Vehicles also feature an auto stop/start system which automatically stops the engine when the car is stationary, gears are in neutral and the foot pedals are not depressed. The engine auto restarts as soon as the foot pedals are used. Parking brake will also normally auto release.
- Opening fuel filler cap?** Centrally locked. Located under flap on rear offside. Lightly press the edge of the flap to open and twist off the cap anticlockwise. Press the flap closed.
- Releasing the bonnet?** Pull the bonnet release lever located on the right side panel in the driver's foot well. Unhook catch under bonnet.
- Folding the rear seats?** The rear seat is divided into 60:40 sections which can be folded separately. To release the seat pull the seat unlocking catch and fold the seat down. To return the seat to normal use, raise the seat and push it firmly to engage the seat lock. Check it is locked before using the seat.
- How to change a tyre?** Vehicle is not normally supplied with a spare wheel or tyre repair kit. **For any assistance in the event of having a punctured tyre, or should the vehicle not be supplied with a spare wheel and tyre or a tyre repair kit, please call the Europcar Tyre Helpline 0800 0280 999.**
- Using 4x4?** The vehicle features 4x4 drive. Use the touchscreen interface to switch between different driving modes for power, grip and terrain conditions.
- How to drive an automatic?** To change gears press the button on the shift lever and move the lever forwards or backwards. Select **N** for neutral, **P** when leaving the vehicle, **R** for reversing (the vehicle must be at a complete standstill before this gear can be selected). For normal driving select **D** where the transmission will use all available forward gears automatically (a 'kickdown' facility is provided when the accelerator is pressed all the way to the floor past the normal acceleration point forcing the transmission to select a lower gear to obtain maximum acceleration. Release pressure on the accelerator to return to normal accelerator use). Use **D+** or **D-** to manually select gears. Whenever the vehicle is at a standstill apply the parking brake.

No responsibility is accepted for inaccuracies or misunderstanding caused by the wording of this guide. If in any doubt ask a member of staff for assistance.

VIC-SKD-09 / 19-06-2021

SKODA KODIAQ

5-7 SEATS
5 DOOR / 4X4 / SUV